

# FRONTALŠ

# Lift Mechanism Replacement Frontal Guide

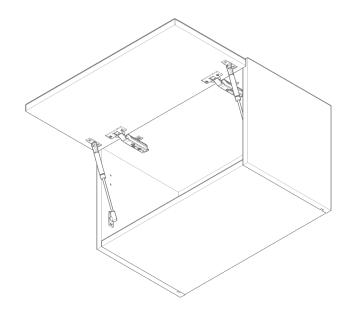

**Piston Lift** 

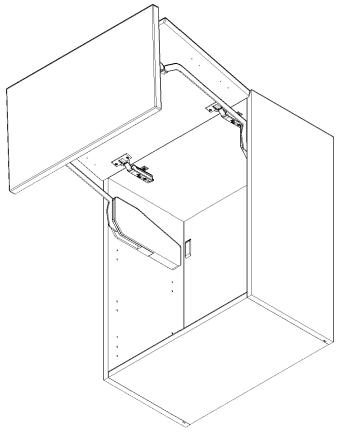

**BiFold Lift** 






# Piston Lift Replacement Frontal Guide

# **PISTON LIFT**

#### Step 1.

Secure piston brackets with 2 x 15mm screws into position as shown, using pilot holes on the frontal as a guide.

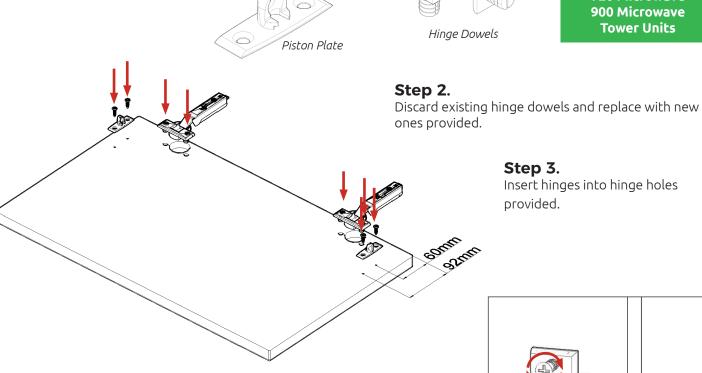


Hinge Dowels

**COMPATIBLE UNITS** 360 Wall 720 Microwave 900 Microwave **Tower Units** 


# Step 3.

Insert hinges into hinge holes provided.

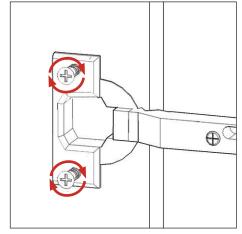

# Step 4.

Secure hinges with the 2 x original screws.

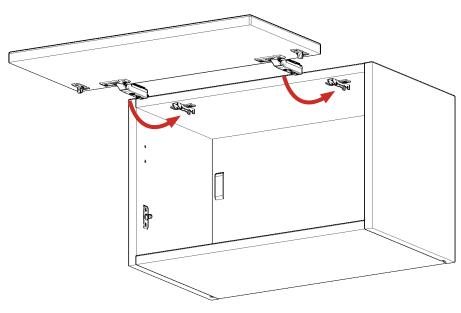


#### Step 5.


Clip hinges onto hinge mounting plates on the unit.

# **GRASS HINGE ADJUSTMENT**

(WHERE APPLICABLE)


**Step 6.** Adjust hinges to suit. As shown below.

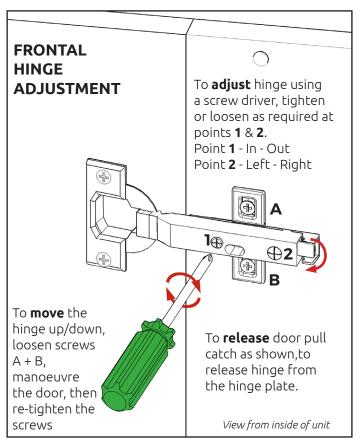

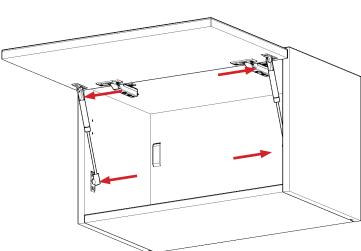


**Step 7.**Clip piston onto piston mounting plates on the unit and frontal.

**Step 8.** Fit cover caps to hinges. Adjust soft-close to suit.

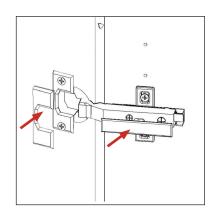



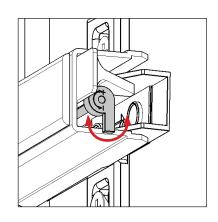





#### **Piston Lift Replacement Frontal Guide**

# **TITUS HINGE ADJUSTMENT**

(WHERE APPLICABLE)


**Step 6.** Adjust hinges to suit. As shown below.

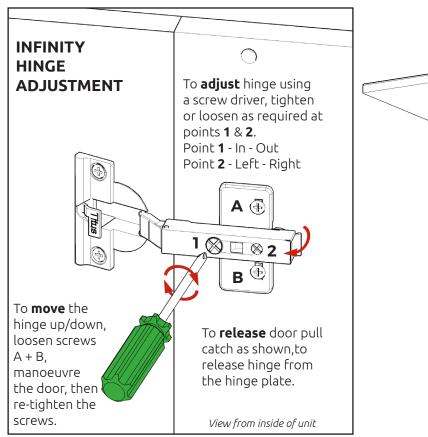

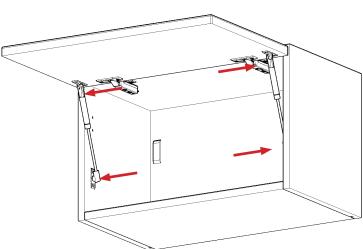


**Step 7.**Clip piston onto piston mounting plates on the unit and frontal.

**Step 8.** Fit cover cap to hinges. Adjust soft-close to suit.

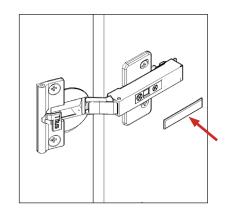




Hinge Cover Caps

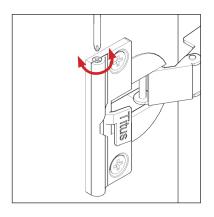



#### **BIFOLD LIFT**


**Step 1.** Line up and insert 3 x mechanism pins into holes provided as shown.

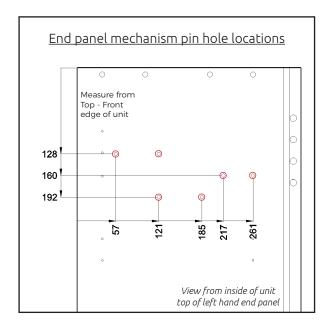

**Step 2.**Tighten 3 x screws on each BiFold mechanism into the unit. These are already positioned within the mechanism.

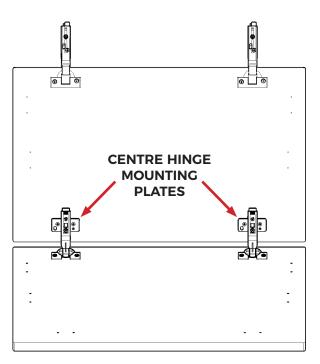

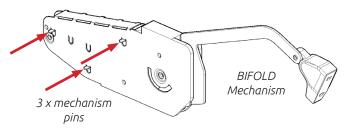

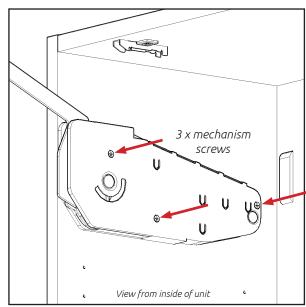

#### Step 3.

Discard existing hinge dowels and replace with new ones provided.



Insert top hinges into hinge holes provided on one frontal. On the same frontal, fix centre hinge mounting plates as shown.





Hinge Dowels

# Centre hinge with mounting plate

#### Step 5.


Insert centre hinges into hinge holes provided on the second frontal. Secure all hinges with 2 x original screws per hinge.

#### Step 6.

Attach frontals together, clip centre hinge into hinge mounting plate & click to secure.

# FRONTALŠ

# **BiFold Lift - Replacement Frontal Guide**

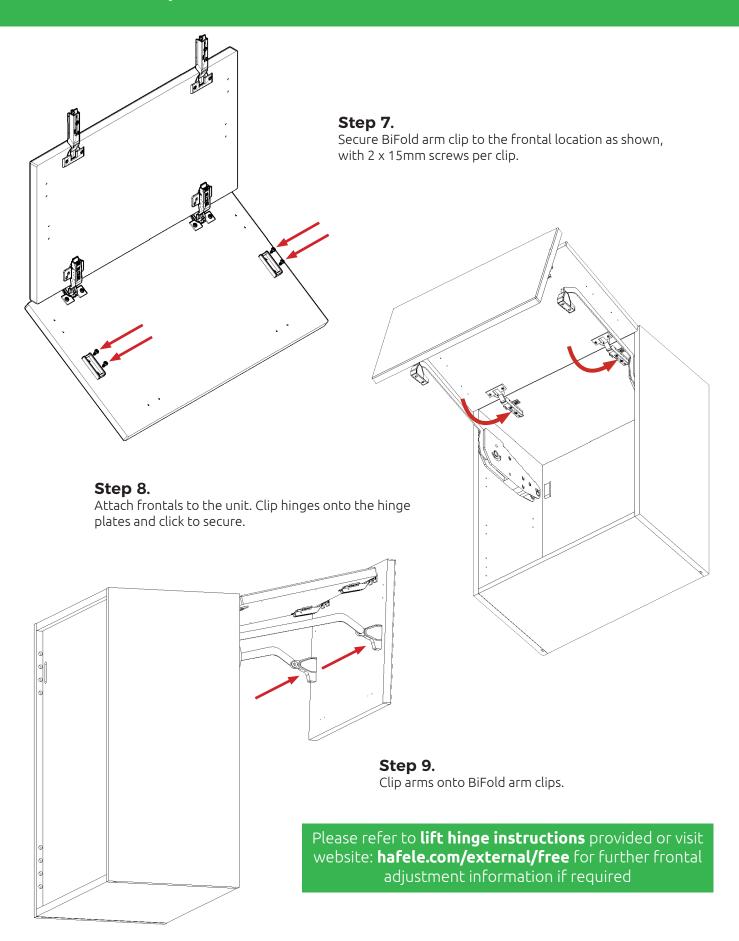


# **GRASS HINGE ADJUSTMENT**


(WHERE APPLICABLE)


**Step 10.** Adjust hinges to suit. As shown below.

**FRONTAL** HINGE To **adjust** hinge using **ADJUSTMENT** a screw driver, tighten or loosen as required at points **1** & **2**. Point 1 - In - Out Point 2 - Left - Right 10 To **move** the hinge up/down, To **release** door pull loosen screws catch as shown,to A + Brelease hinge from manoeuvre the hinge plate. the door, then re-tighten the View from inside of unit screws

 
**Step 11.** Fit cover caps to hinges. Adjust soft-close to suit.

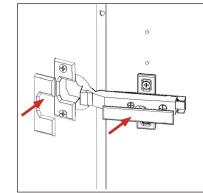



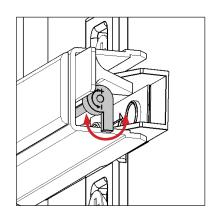

Hinge Cover Caps

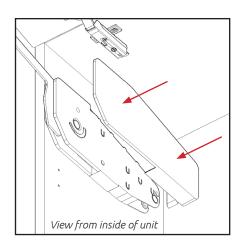

**Step 12.** Fit covers to lift mechanisms.




#### **Piston Lift Replacement Frontal Guide**


# **TITUS HINGE ADJUSTMENT**


(WHERE APPLICABLE)

**Step 10.** Adjust hinges to suit. As shown below.

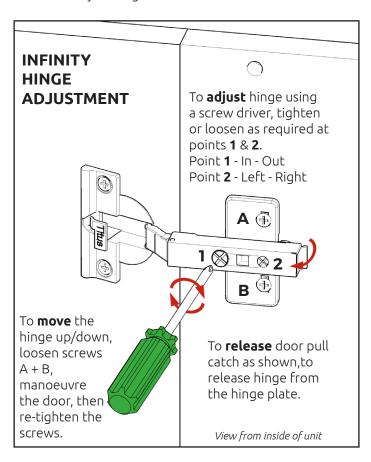

**Step 11.** Fit cover caps to hinges. Adjust soft-close to suit.

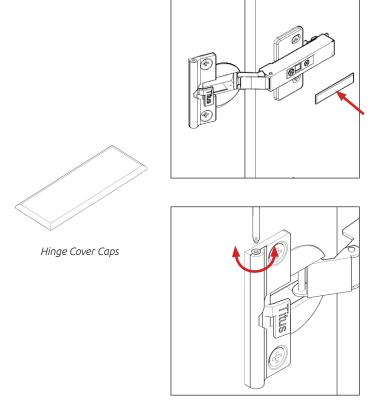

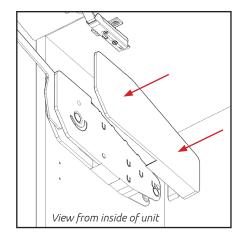

**Step 12.** Fit covers to lift mechanisms.