
TOWER UNIT


2070 & 2250 Walk In Tower Assembly Guide

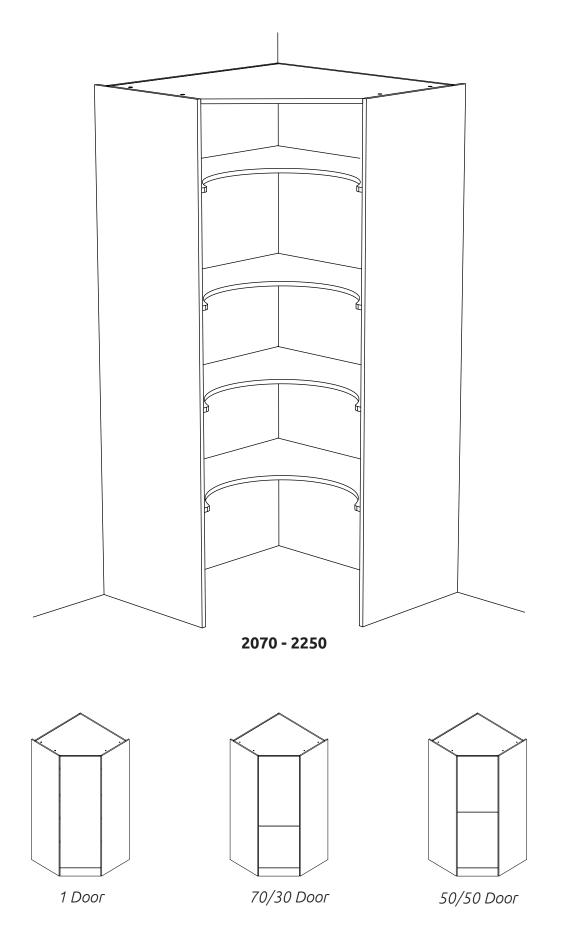

wren

TOWER UNIŤ


2070 & 2250 Walk In Tower Assembly Guide

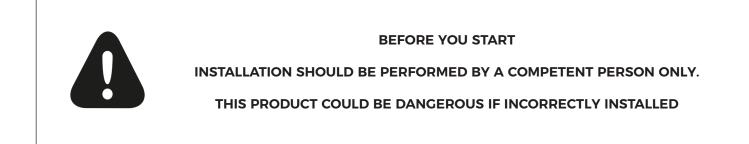



Screws and fixings for attaching to walls are not provided as these vary depending on materials and construction. Ensure appropriate fixings for wall are used.

wren

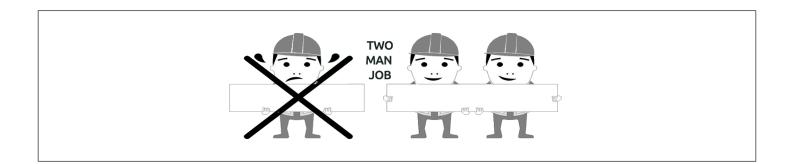






TOWER UNIŤ

2070 & 2250 Walk In Tower Assembly Guide

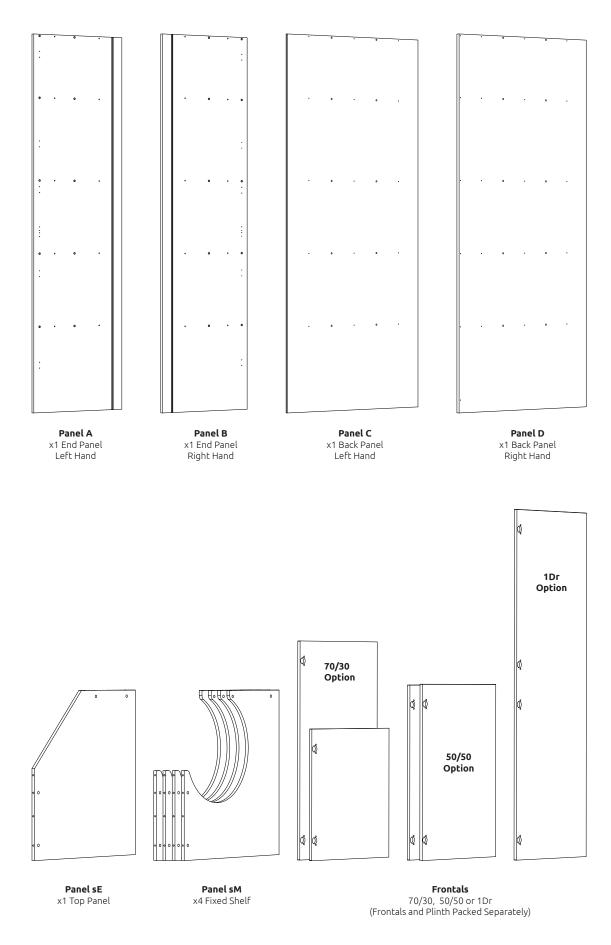




¥ V IR £ (F) x40 (W) x20 (K) x36 (L) x12 (H) x20 Wooden Dowel Cam Dowel 45mm Screws 15mm Screws Cam Lock \bigcirc \bigcirc ſΜ (M) x8 Fixing Plate (U) Door Buffer L Bracket LGE Cover Cap x4 x4 х1 Ø Ś W Hinge Hinge Mounting Plate Inc Screws Inc Screws


wren

Step 1. Seat cam dowel (W) into holes in end panel (A) as shown.

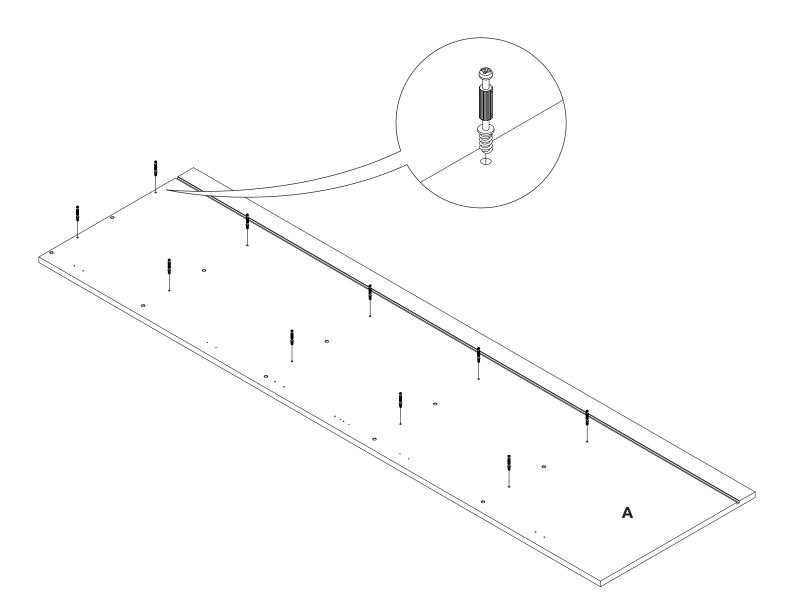



Step 2. Seat dowel (F) into holes in end panel (A) as shown.

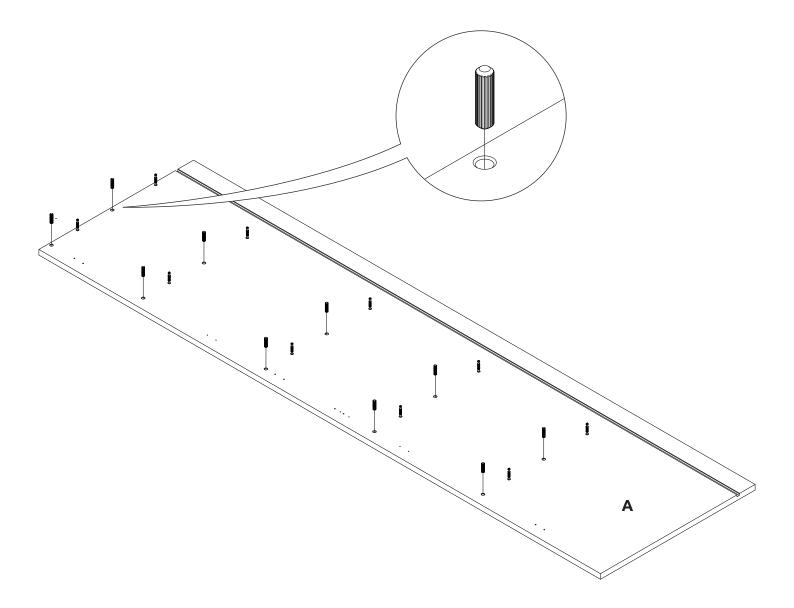








Step 3.

Attach panels **(sM)** and **(sE)** to end panel **(A)**, using cam dowel **(W)** and dowels **(F)** in positions as shown. Panel **(sE)** cam holes to face the outside of the unit. Panels **(sM)** cam holes to face downwards.

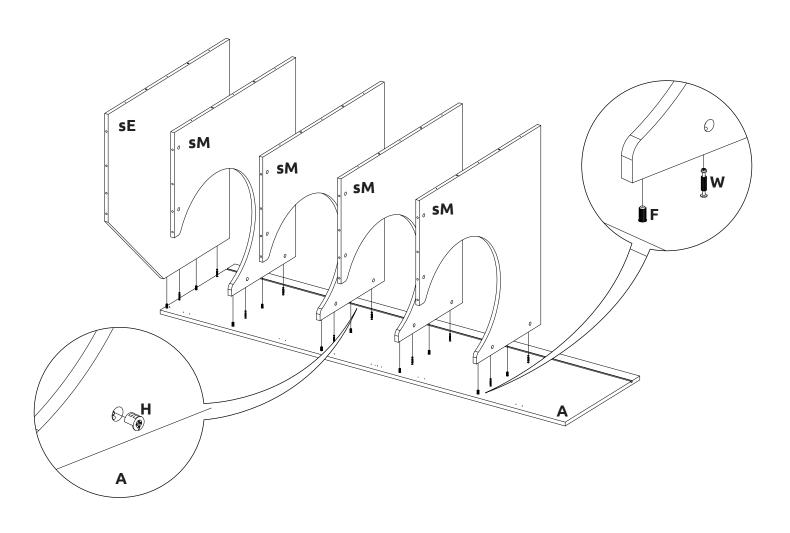




0 sМ


0 sМ

0 sМ 0 sМ

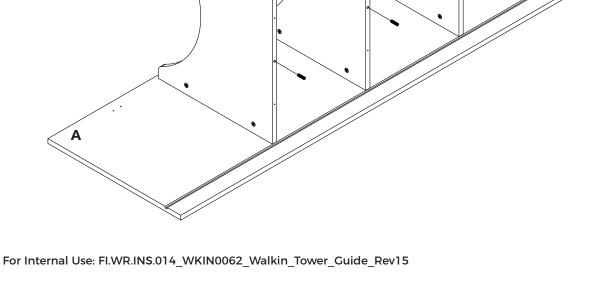





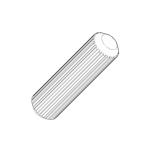


sE





wren

Step 6.

Slide back panel (C) into groove of end panel (A). Also insert dowels (F) from panels (sM) and (sE) into the required holes in back panel (C). Once back panel (C) is in position, ensure the panel is flush & square with bottom of end panel (A) and secure in place with 15 x 45mm screws (K) through panel (C) into panels (sM) and (sE).

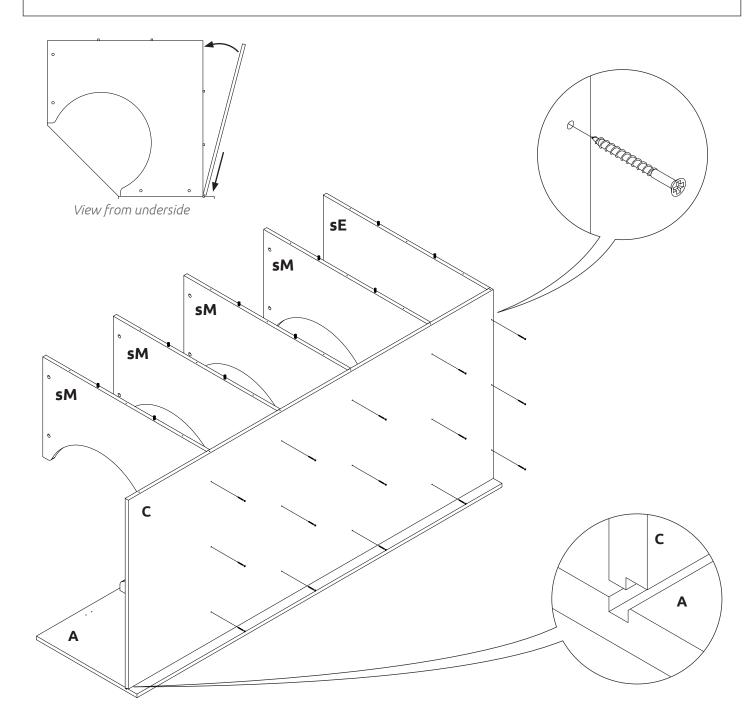

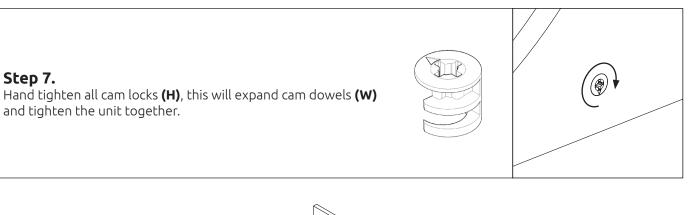

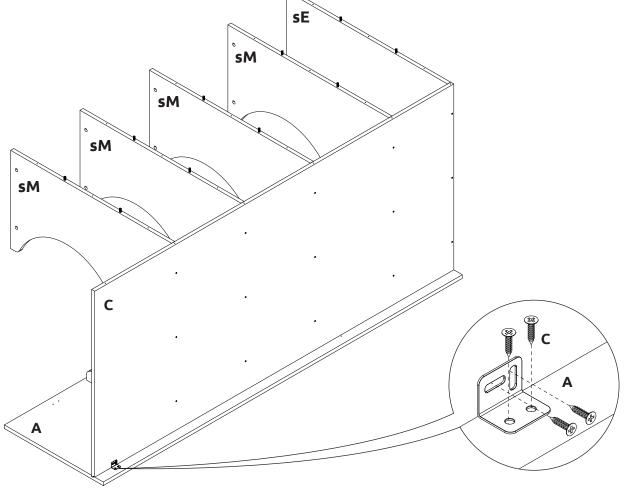


Step 8.

Secure back panel **(C)** to end panel **(A)** at the bottom using 1 x L bracket LGE as shown. Secure the L Bracket LGE in place with 4 x 15mm screws **(L)**.




Step 9. Seat cam dowel (W) into holes in end panel (B) as shown.

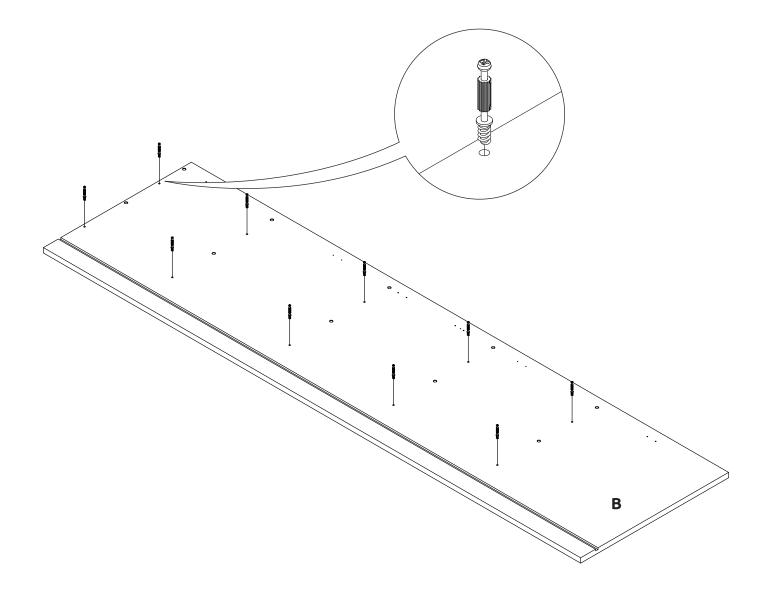



Step 10. Seat dowel (F) into holes in end panel (B) as shown.

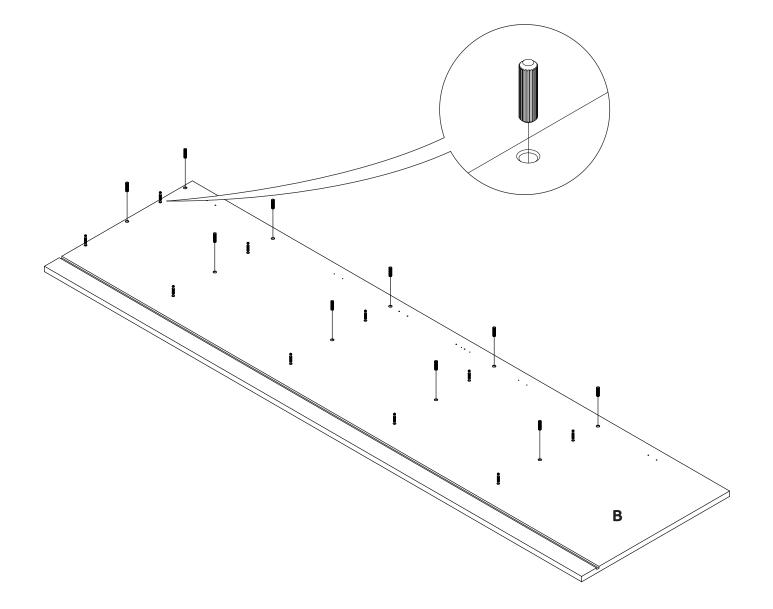







wren

Step 11.

Attach end panel (B) to panels (SM) and (SE) using cam dowel (W) and dowels (F) in positions as shown.

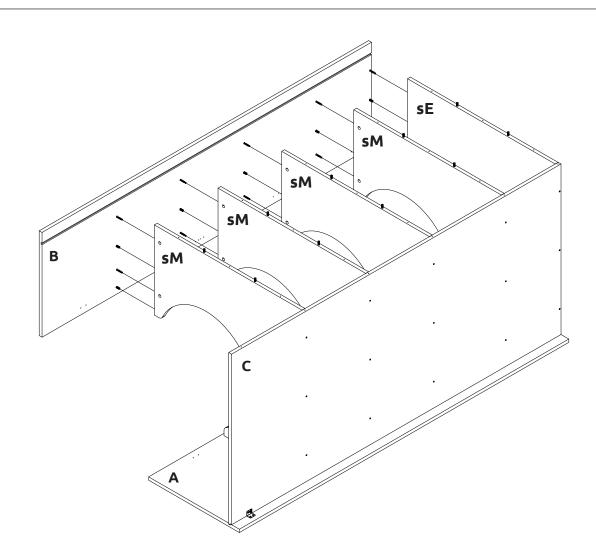




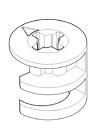



Step 13.


Slide back panel (D) into groove of end panel (B). Also insert dowels (F) from panels (sM) and (sE) into the required holes in back panel (D). Once back panel (D) is in position, ensure the panel is flush & square with bottom of end panel (B) and secure in place with 21 x 45mm screws (K) through panel (D) into panels (sM) and (sE).

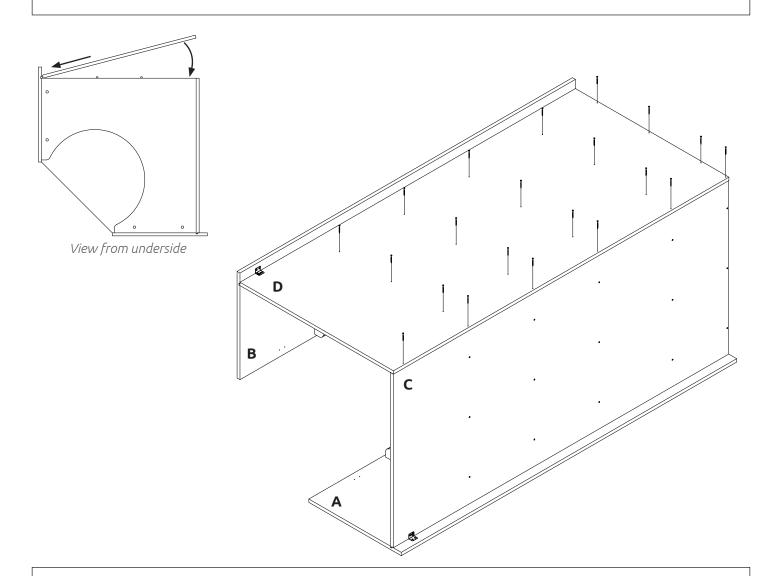


Step 14.

Secure back panel (D) to end panel (B) at the bottom using 1 x L bracket LGE as shown. Secure the L Bracket LGE in place with 4 x 15mm screws (L).



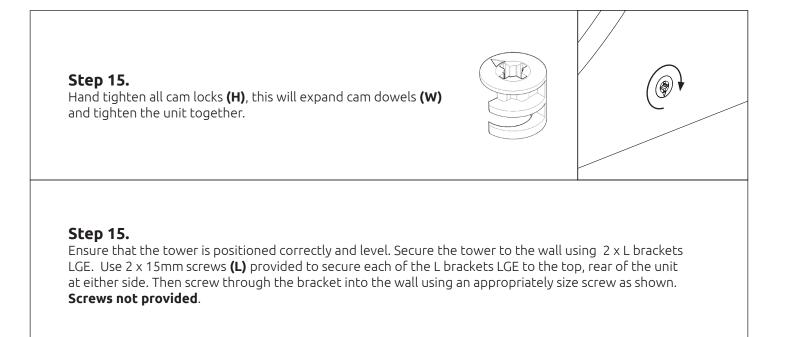


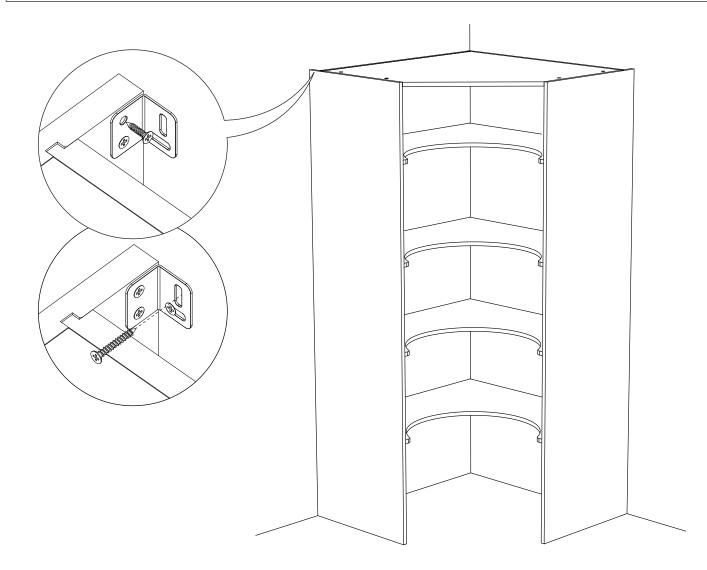

2070

Step 19.

Attach hinge plates onto end panel (A) or (B) to suit as shown using screws already positioned within the hinge plate. Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.

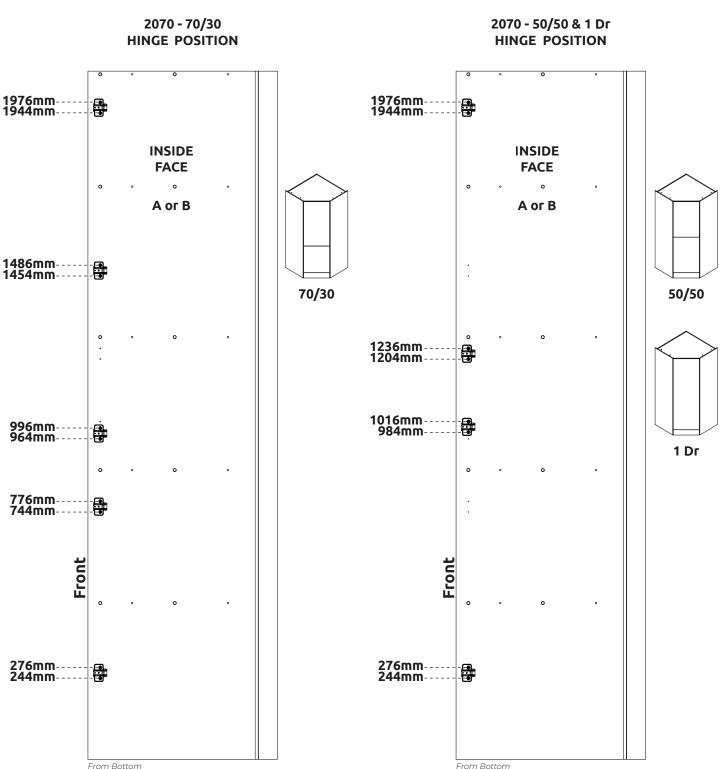

For Internal Use: FI.WR.INS.014_WKIN0062_Walkin_Tower_Guide_Rev15




From Bottom

2250

Step 19.

Attach hinge plates onto end panel (A) or (B) to suit as shown using screws already positioned within the hinge plate. Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.

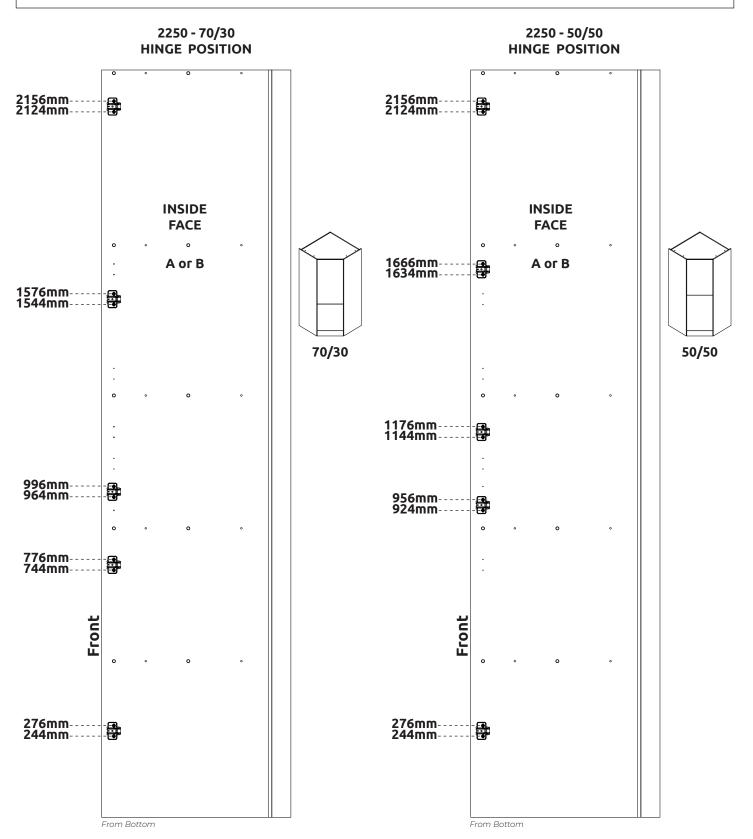




2250

Step 19.

Attach hinge plates onto end panel (A) or (B) to suit as shown using screws already positioned within the hinge plate. Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.

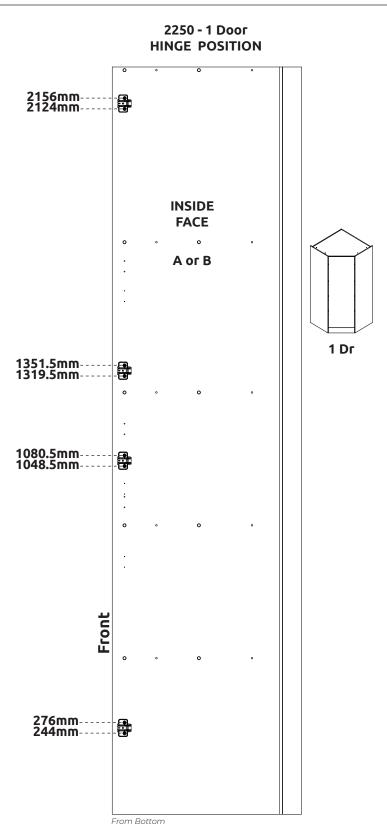


For Internal Use: FI.WR.INS.014_WKIN0062_Walkin_Tower_Guide_Rev15




wren

Hinge Attachment and Adjustment

Doors supplied in accordance to customer specific kitchen plan

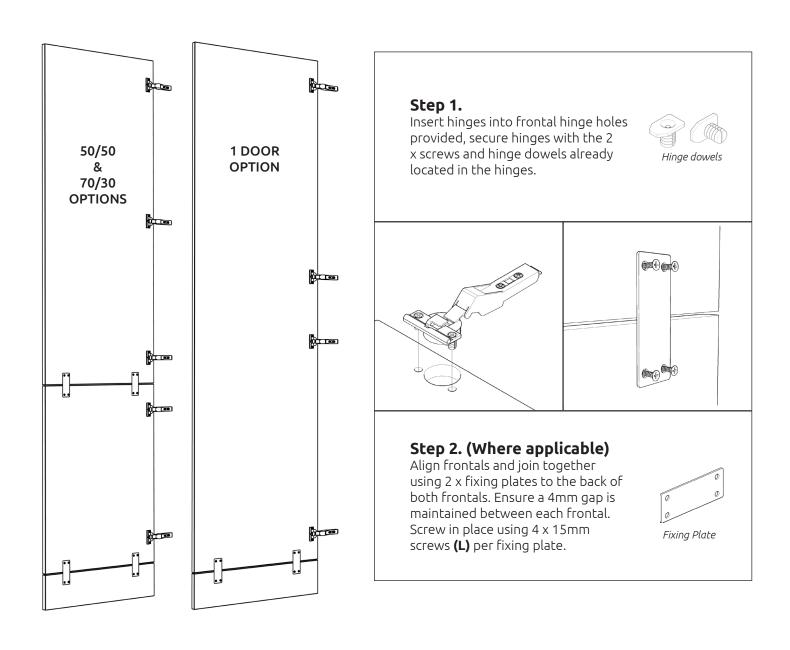

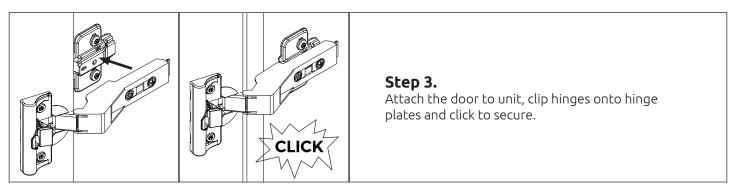

Step 4.

Adjust hinges to suit, using the highlighted screws shown.

