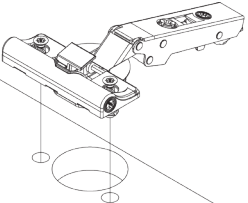

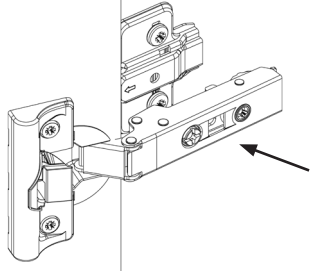
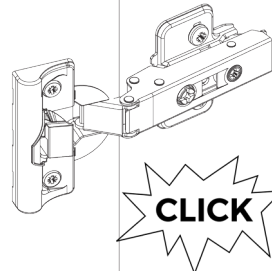
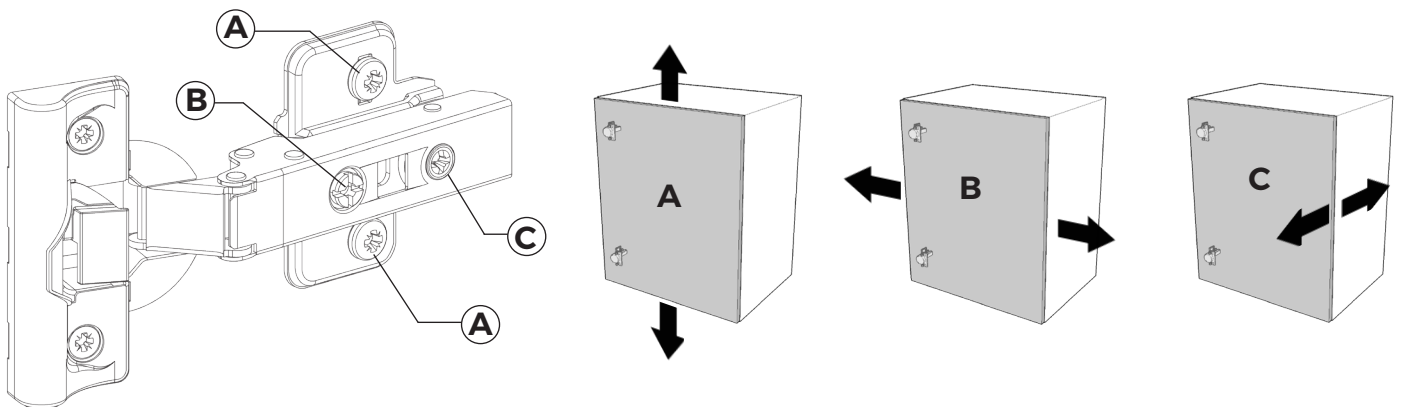
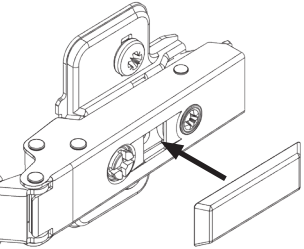
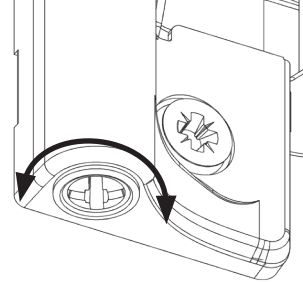


## Titus Hinge - Replacement Frontal Attachment Guide

|                                                                                        |                                                                                                                                                                                                                                                                                                                              |                                                                                                       |
|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|       | <p><b>Step 1.</b><br/>Discard original hinge dowels and replace with new ones provided. Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws already located in the hinges.</p>  <p><i>Hinge dowels</i></p> |                                                                                                       |
|        |  <p><b>CLICK</b></p>                                                                                                                                                                                                                        | <p><b>Step 2.</b><br/>Attach the door to unit, clip hinges onto hinge plates and click to secure.</p> |
| <p><b>Step 3.</b><br/>Adjust hinges to suit, using the highlighted screw(s) shown.</p> |                                                                                                                                                                                                                                                                                                                              |                                                                                                       |



|                                                                                    |                                                                                   |                                                                                       |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  | <p><b>Step 4.</b><br/>Fit cover caps to hinges and adjust soft-close to suit.</p> |  |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.