

FRONTALŠ

Lift Mechanism Replacement Frontal Guide

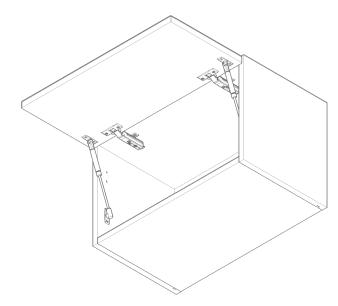

Piston Lift



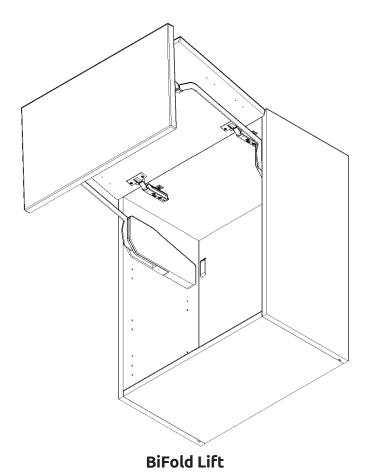




Piston Lift Replacement Frontal Guide

PISTON LIFT

Step 1.


Secure piston brackets with 2×15 mm screws into position as shown, using pilot holes on the frontal as a guide.

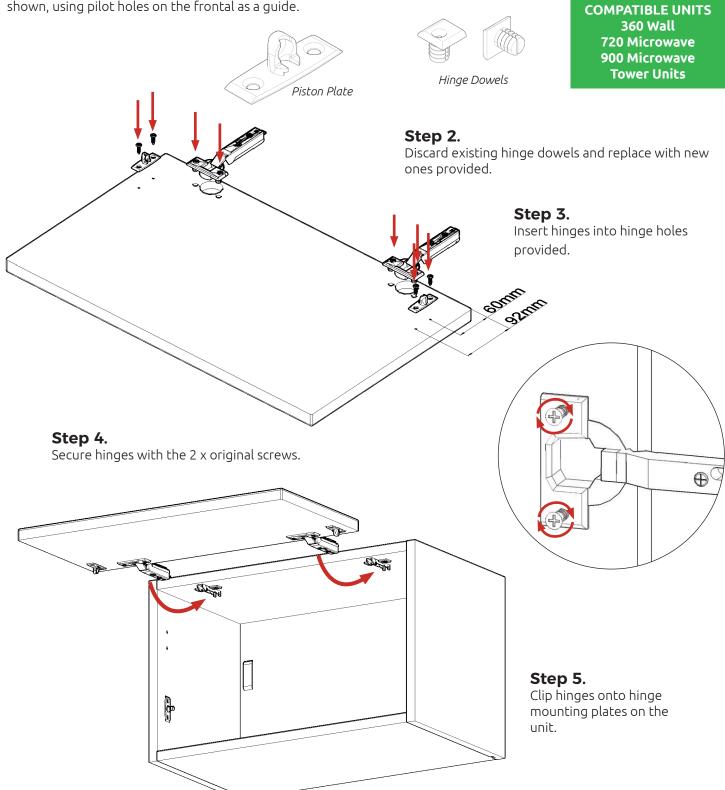

INFINITY + HINGE ADJUSTMENT

(WHERE APPLICABLE)

Step 6. Adjust hinges to suit. As shown below.

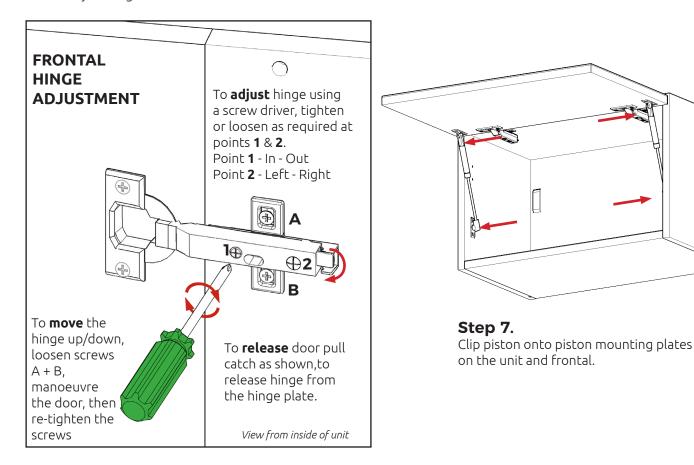

Step 8. Fit cover caps to hinges. Adjust softclose to suit.







Piston Lift Replacement Frontal Guide

INFINITY HINGE ADJUSTMENT

(WHERE APPLICABLE)

Step 6. Adjust hinges to suit. As shown below.

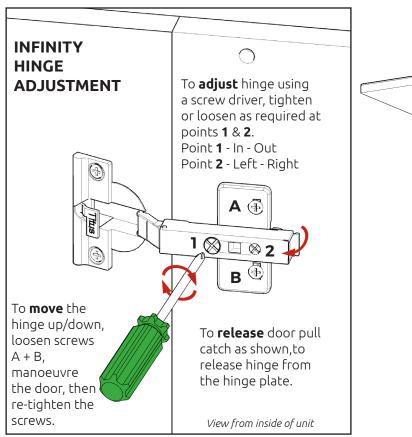

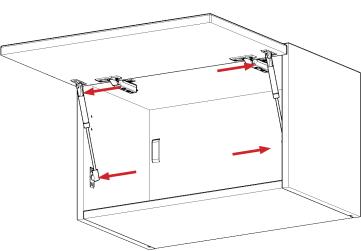


Step 7.Clip piston onto piston mounting plates on the unit and frontal.

Step 8. Fit cover cap to hinges. Adjust softclose to suit.





BIFOLD LIFT


Step 1. Line up and insert 3 x mechanism pins into holes provided as shown.

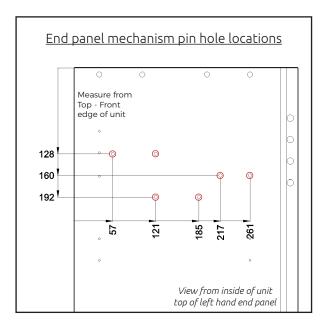

Step 2.Tighten 3 x screws on each BiFold mechanism into the unit. These are already positioned within the mechanism.

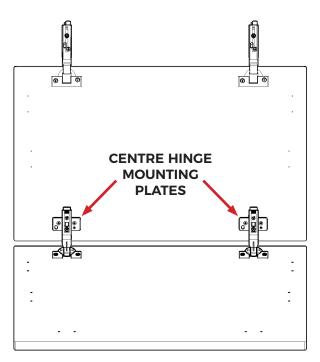

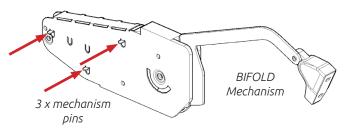

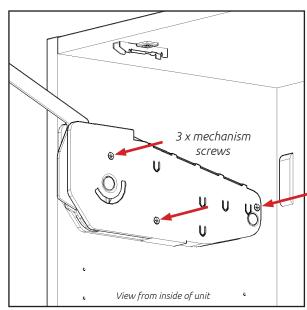

Step 3.

Discard existing hinge dowels and replace with new ones provided.



Insert top hinges into hinge holes provided on one frontal. On the same frontal, fix centre hinge mounting plates as shown.





Hinge Dowels

Step 5.

Insert centre hinges into hinge holes provided on the second frontal. Secure all hinges with 2 x original screws per hinge.


Centre hinge with mounting plate

Step 6.

Attach frontals together, clip centre hinge into hinge mounting plate & click to secure.

FRONTALŠ


BiFold Lift - Replacement Frontal Guide

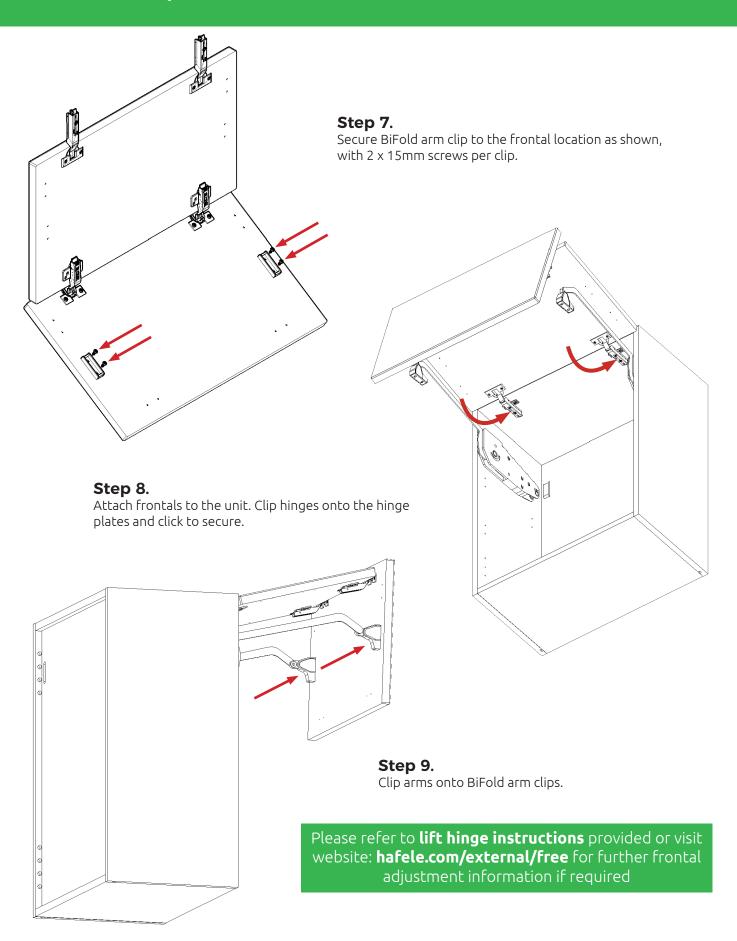


INFINITY + HINGE ADJUSTMENT


(WHERE APPLICABLE)

Step 10. Adjust hinges to suit. As shown below.

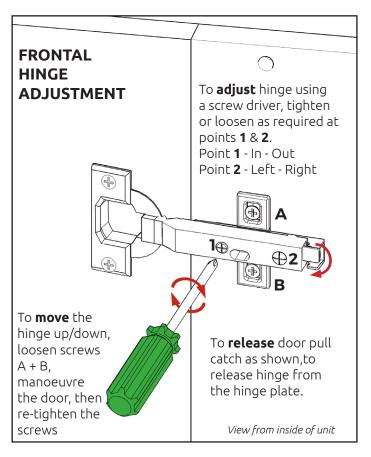

Step 11. Fit cover caps to hinges. Adjust softclose to suit.

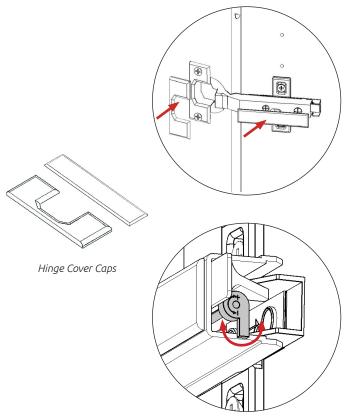

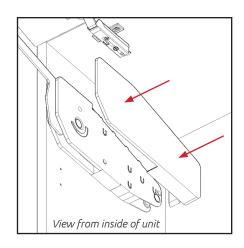

Step 12. Fit covers to lift mechanisms.



Piston Lift Replacement Frontal Guide


INFINITY HINGE ADJUSTMENT


(WHERE APPLICABLE)

Step 10. Adjust hinges to suit. As shown below.

INFINITY HINGE To **adjust** hinge using **ADJUSTMENT** a screw driver, tighten or loosen as required at points 1 & 2. Point 1 - In - Out Point 2 - Left - Right **A** (4) 1 ⊗ □ ⊗ 2 В⊕ To **move** the hinge up/down, To **release** door pull loosen screws catch as shown,to A + Brelease hinge from manoeuvre the hinge plate. the door, then re-tighten the screws. View from inside of unit

Step 11. Fit cover caps to hinges. Adjust softclose to suit.

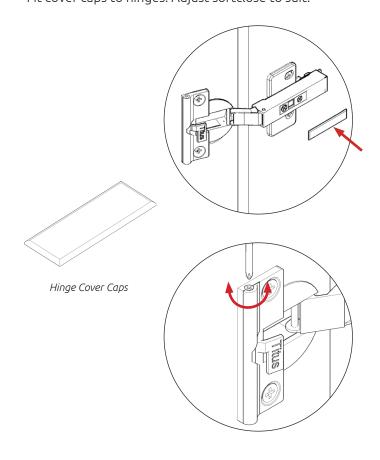

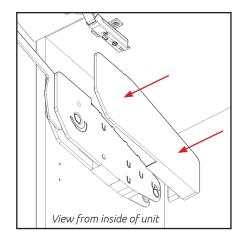

Step 12. Fit covers to lift mechanisms.