



Vogue

BASE UNIT


600 2/3 Drawer Assembly Guide

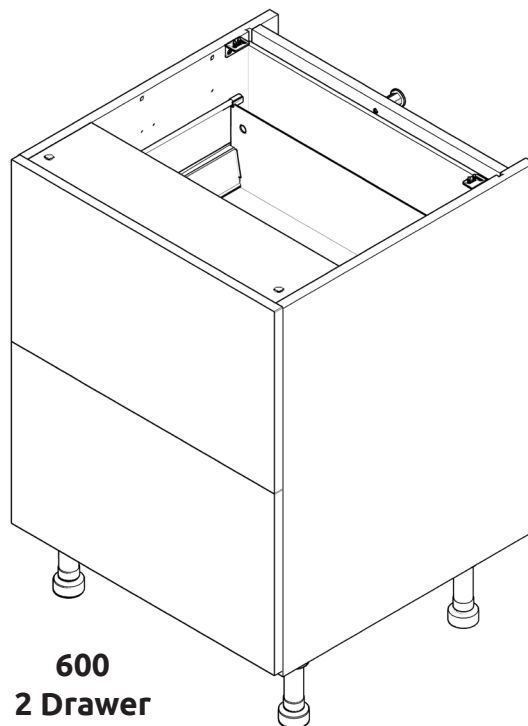

**600
2 Drawer**

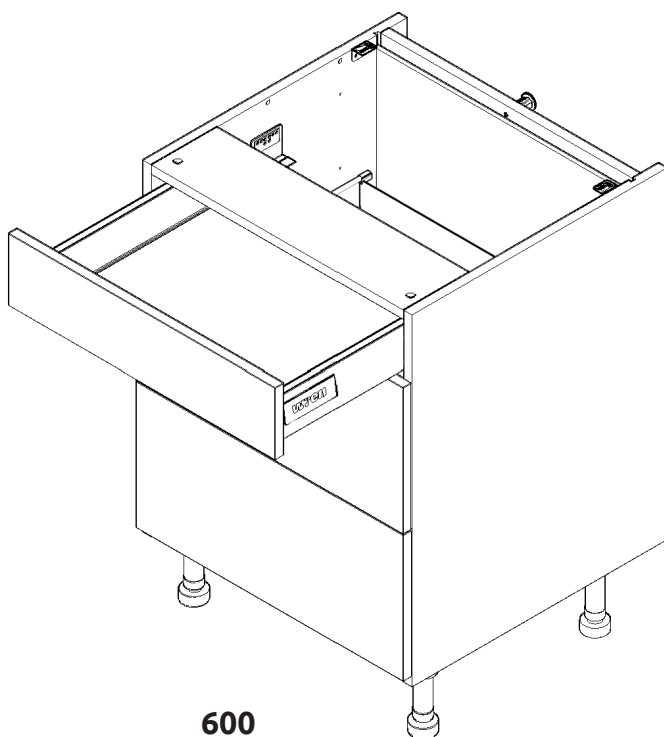


**600
3 Drawer**

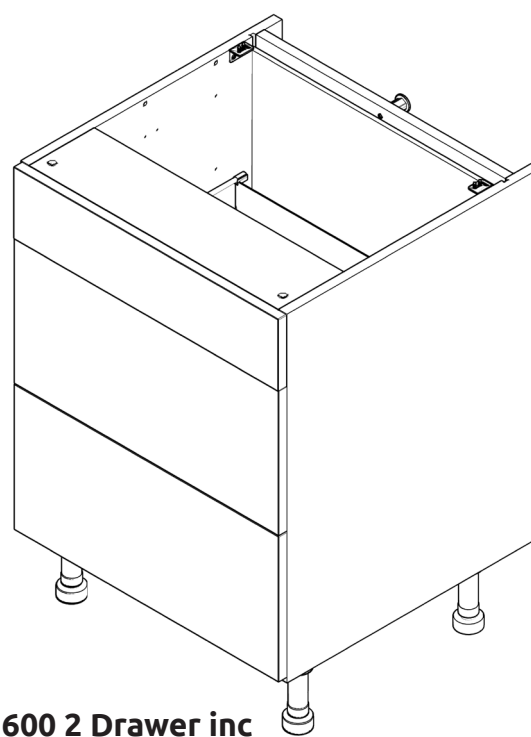

**600 2 Drawer inc
Dummy Drawer**

BASE UNIT

600 2/3 Drawer Assembly Guide

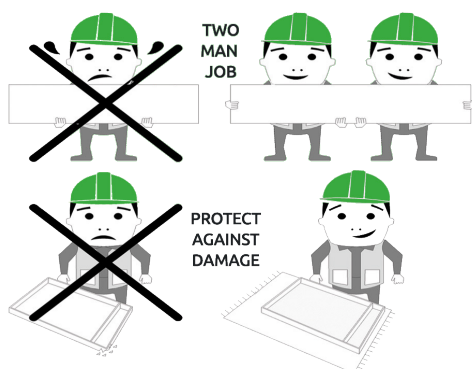

BEFORE YOU START


INSTALLATION
SHOULD BE
PERFORMED BY A
COMPETENT
PERSON ONLY.

THIS PRODUCT COULD
BE DANGEROUS
IF INCORRECTLY
INSTALLED

Standard Drawer (Packed Separately)

Fitting Pack Contents

METAL BACK
PANEL
x 1

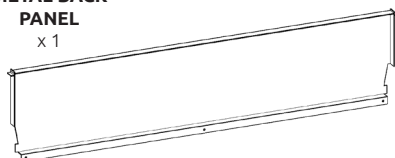

(J) x16
Drawer Runner
16mm Screws




(Q) x4
21mm
Screw




(N) x1
Door Buffer


DRAWER
COVER CAP
x2

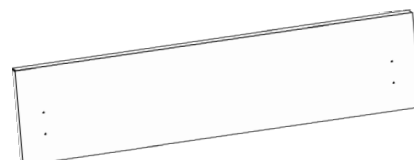


FRONTAL
(Supplied separately)

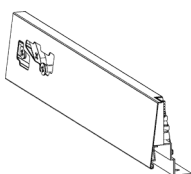

DRAWER SIDE
x1 Right Hand

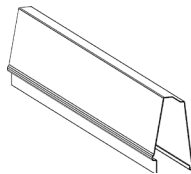


DRAWER SIDE
x1 Left Hand




DRAWER
FRONT
FIXING
x 2

DRAWER
BASE
x 1

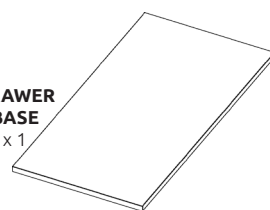

DRAWER
RUNNER
x 1 Left Hand

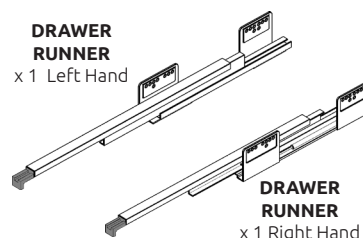


DRAWER
RUNNER
x 1 Right Hand

Deep Drawer (Packed Separately)

Fitting Pack Contents

METAL BACK
PANEL
x 1

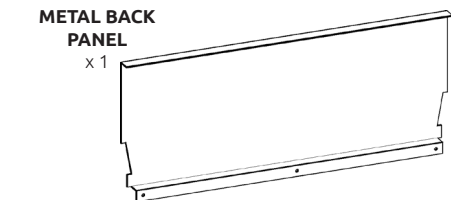

(Y) x2
Gallery
Head



(J) x16
Drawer Runner
16mm Screws



(Q) x4
21mm
Screw




(L) x2
15mm
Screw




(N) x1
Door Buffer


DRAWER
COVER CAP
x2

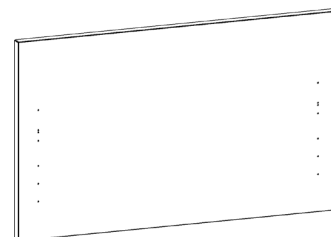

FRONTAL
(Supplied separately)

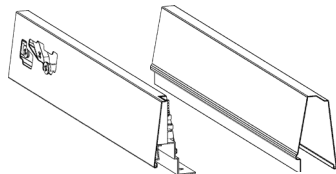


DRAWER SIDE
x1 Right Hand

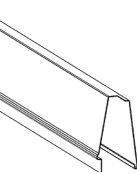

DRAWER SIDE
x1 Left Hand




GALLERY
RAIL
x 2




DRAWER
FRONT
FIXING
x 2

DRAWER
BASE
x 1

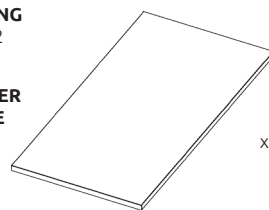

DRAWER
RUNNER
x 1 Left Hand

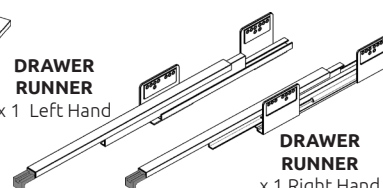


DRAWER
RUNNER
x 1 Right Hand

REQUIRED TOOLS



NOT to be used
with CAM DOWEL
& CAM LOCK



Step 1.

Secure drawer base to drawer side using 4 x 16mm drawer runner screws (**J**) in holes provided.



Seat the edge of drawer base tight into corner of casing, as shown.

The decorative face of drawer base to be positioned as shown.

Repeat step 1 so both drawer sides are attached to drawer base.


Step 2.

Clip on metal back panel to drawer base & drawer sides.

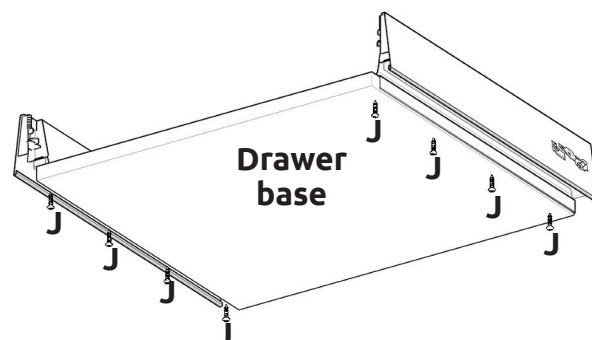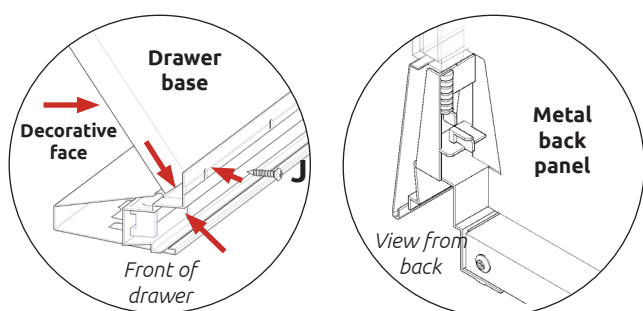


Step 3.

Screw back panel in position using 2 x 16mm screws (**J**) to drawer base in holes provided.

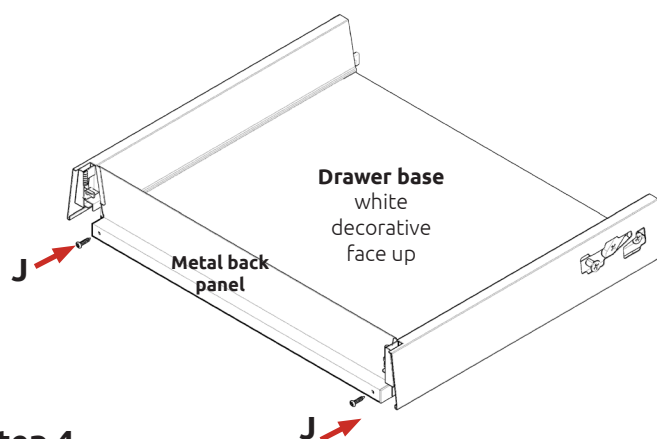




Step 5.

Draw Adjustment
Screw point **1** as shown to adjust drawer frontal right & left.

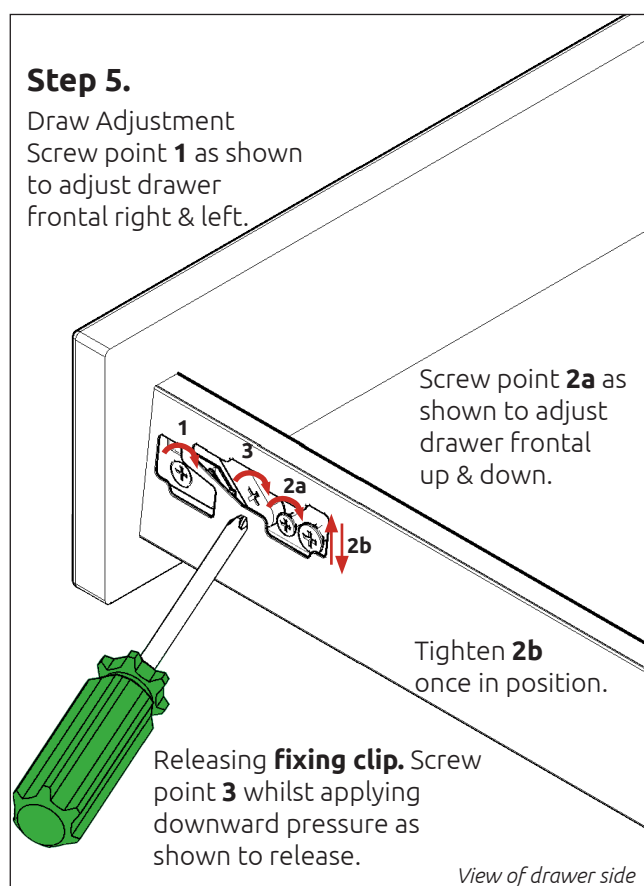

Step 4.

Frontal Attachment
Secure drawer Side Fixing Clips using 2 x 21mm screws (**Q**) in pilot holes provided as shown.

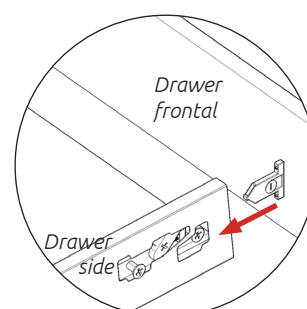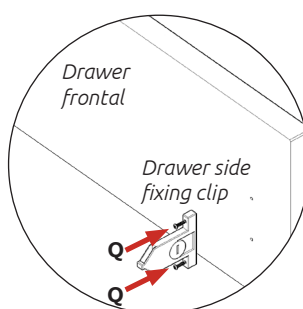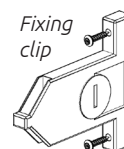

Step 6.

Fit Drawer Cover Caps over drawer side adjustment.

BASE UNIT

600 2/3 Drawer Assembly Guide

Step 1.

Secure drawer base to drawer side using 4 x 16mm drawer runner screws (**J**) in holes provided.


Seat the edge of drawer base tight into corner of casing, as shown.

The decorative face of drawer base to be positioned as shown.


Repeat step 1 so both drawer sides are attached to drawer base.

Step 2.

Clip on metal back panel to drawer base & drawer sides.

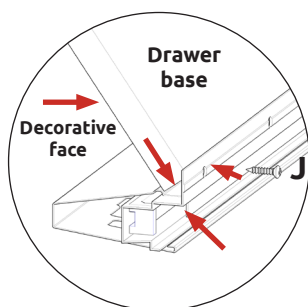



Front of drawer

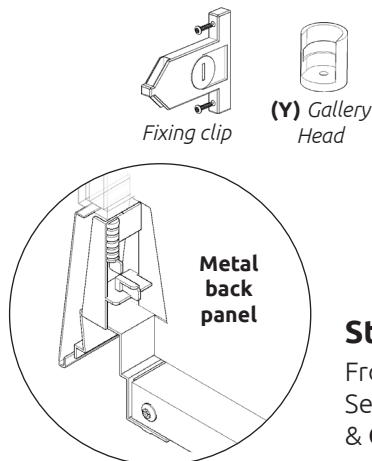

View from back

Step 3.



Screw back panel in position using 2 x 16mm screws (**J**) to drawer base in holes provided.

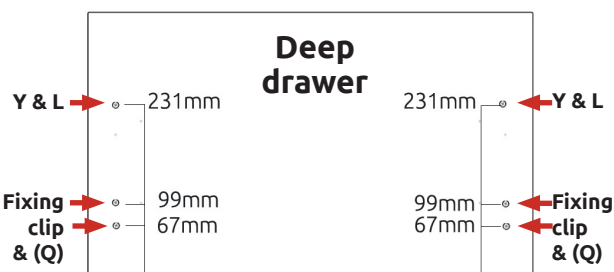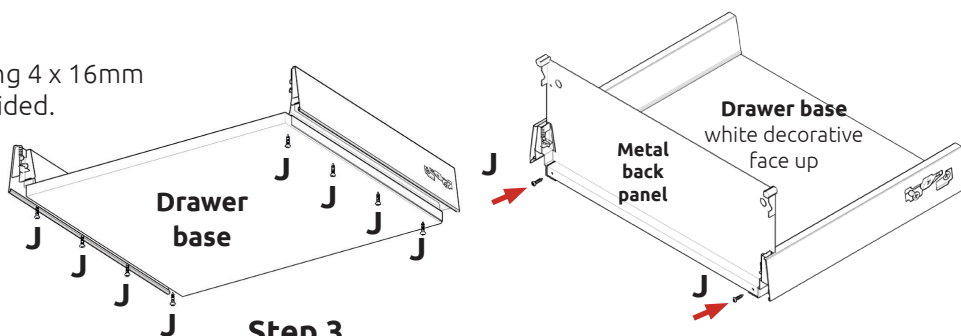

Step 4.

Frontal Attachment

Secure **drawer side fixing clips** using 2 x 21mm screws (**Q**) & **Gallery Head (Y)** using 1 x 15mm screw (**L**) in pilot holes provided as shown.

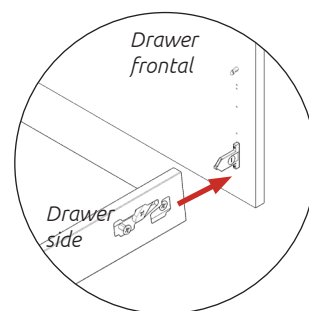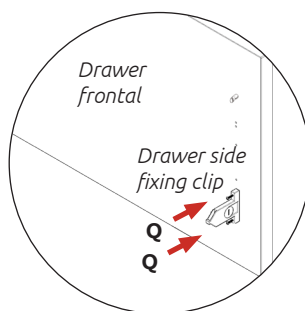

Drawer Frontal Adjustment

Step 5.

Draw Adjustment

Screw point **1** as shown to adjust drawer frontal right & left.


Screw point **2a** as shown to adjust drawer frontal up & down.

Releasing fixing clip.

Screw point **3** whilst applying downward pressure as shown to release.

Tighten **2b** once drawer is in position.

View on side of drawer side

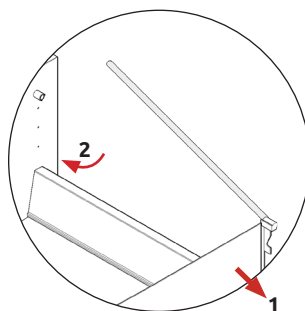

Step 6.

Fit Gallery Rail into the top corners of Metal Back Panel. Locate front end of the Gallery Rail into the opening of the gallery Head, which is secured to the frontal as shown




Drawer Cover Cap

Step 7.

Fit Drawer Cover Caps over drawer side adjustment.



600 Drawer Unit Contents

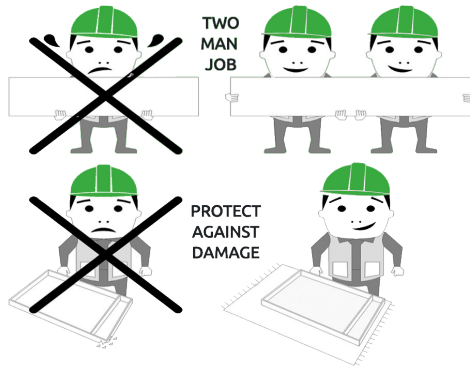

BEFORE YOU START

INSTALLATION
SHOULD BE
PERFORMED BY A
COMPETENT
PERSON ONLY.

THIS PRODUCT COULD
BE DANGEROUS
IF INCORRECTLY
INSTALLED

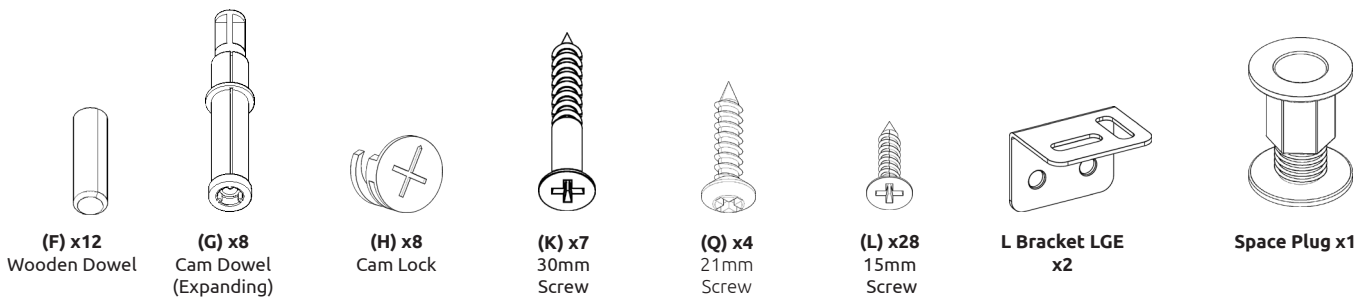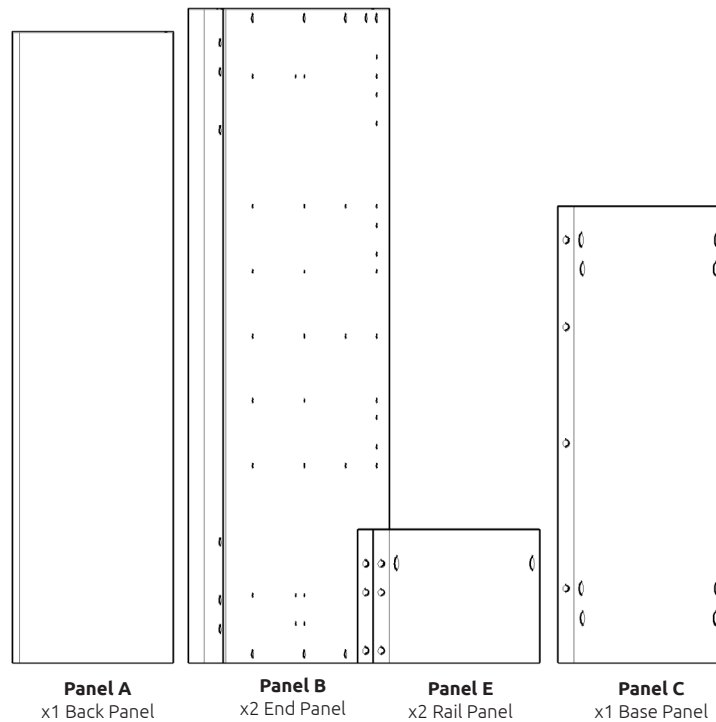

REQUIRED TOOLS





BASE UNIT

600 2/3 Drawer Assembly Guide

Step 1.

To attach drawer runner screw into end panels **(B)** using 2 x 16mm screws **(J)** per drawer rail, into pilot holes provided, as shown.


Drawer runner bracket screw position

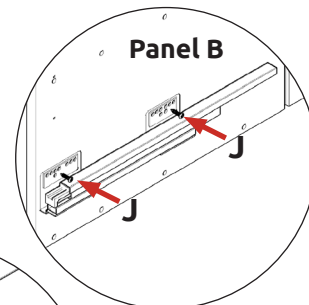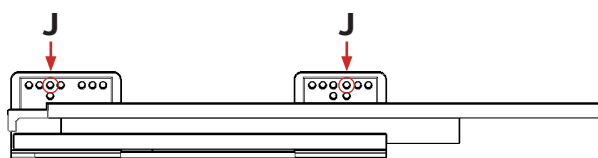


Step 2.

Where applicable, secure dummy fixing clip parts **(A)** onto both End Panels **(B)** using 2 x 15mm screws **(L)** each, as shown. The top screw hole is to be positioned 52mm from the top of the panel (marked by an indentation).



Part B




Part A

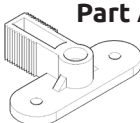


Dummy Fixing Clip

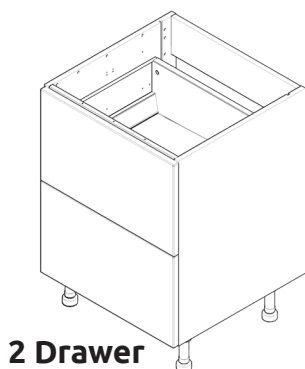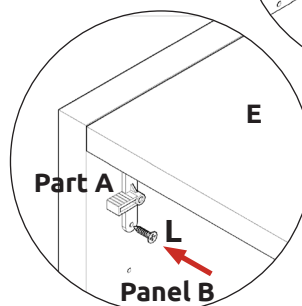


2 Drawer

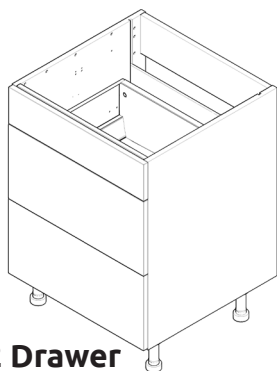


2 Drawer
inc Dummy Drawer

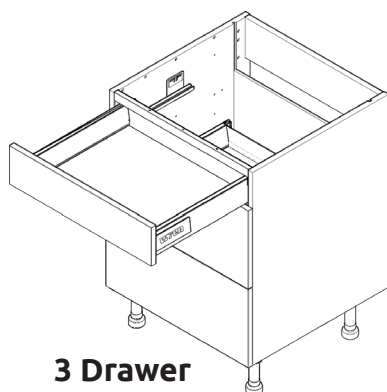


3 Drawer



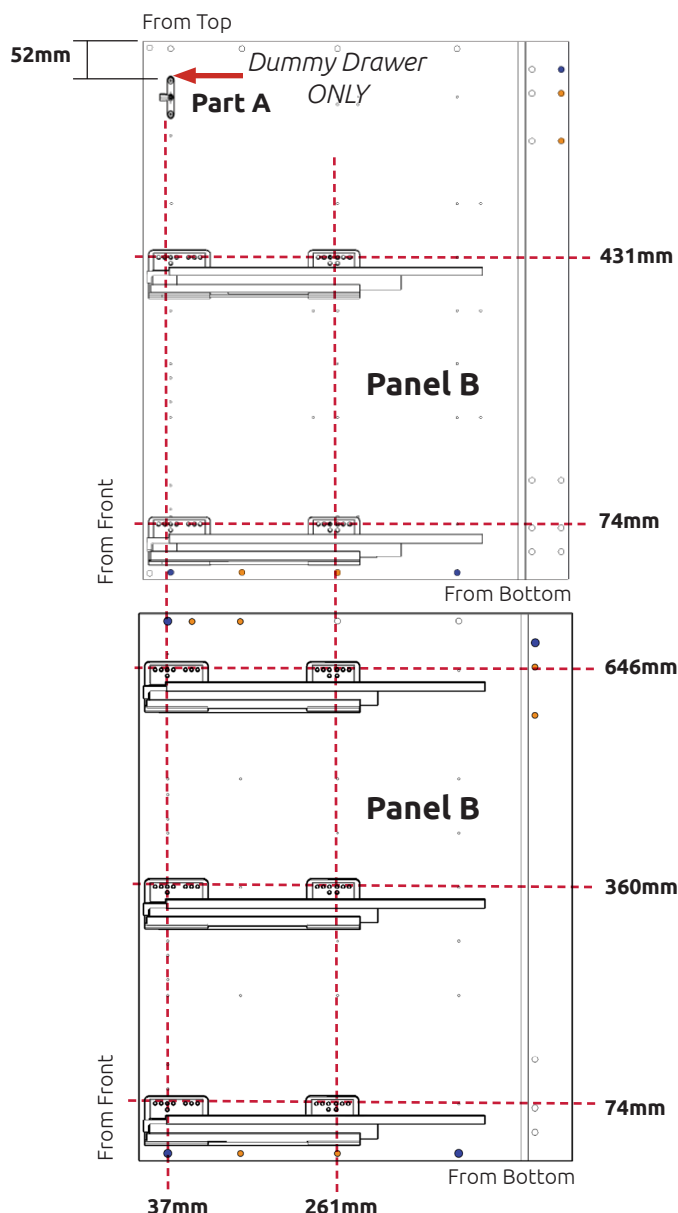


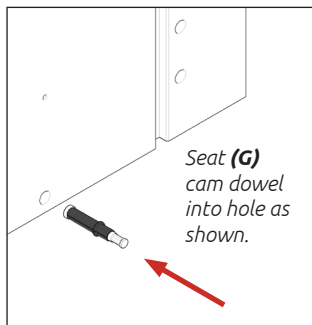

Step 3.
Seat dowel (F) into holes in both end panels (B) as shown.



Step 4.
Seat cam dowel (G) into holes in both end panels (B) as shown.

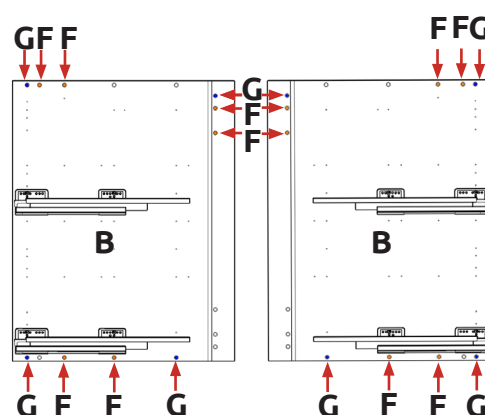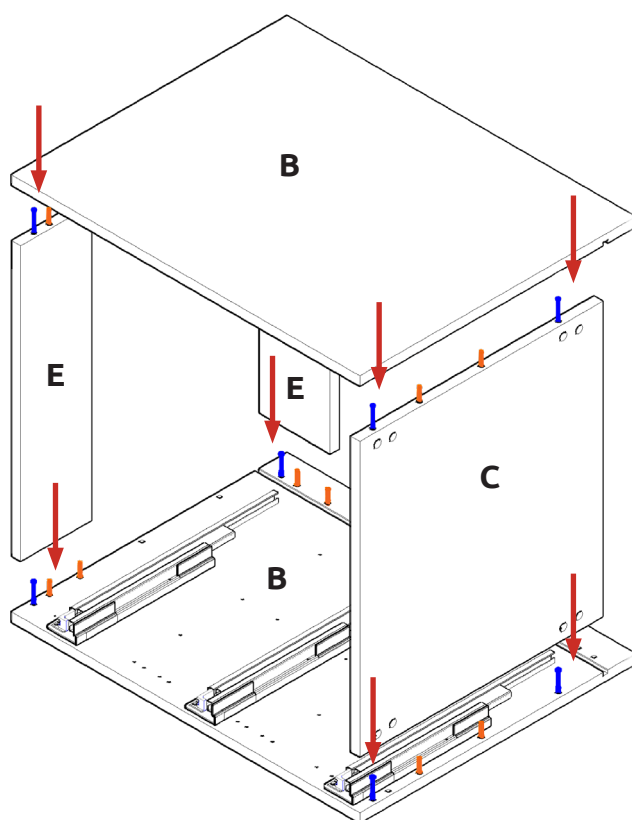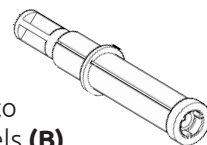



Dowel (F) & Cam Dowel (G) location detail

Step 5.
Attach panels (C) & (E) to panels (B), using cam dowel (G) (in blue), and also using dowels (F) (in orange) in positions as shown.



NB. All Cam Locks (H) are to be positioned facing the outside of the unit carcass, for ease of tightening.

Do **not** use power tools with cam dowel (G) or cam lock (H)

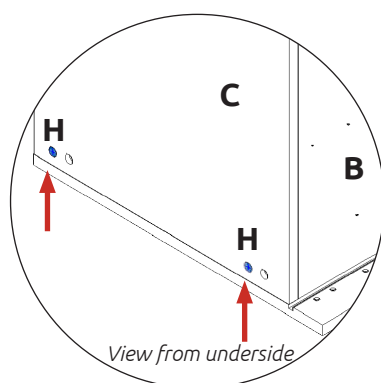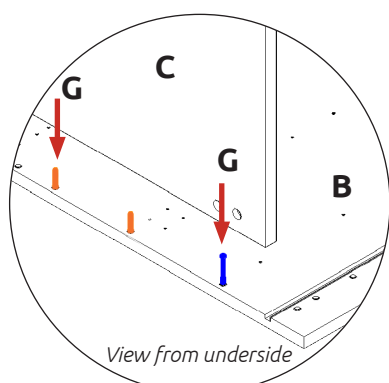

Step 6.
Insert cam lock (H).
Do **NOT** tighten until Step 7.




BASE UNIT

600 2/3 Drawer Assembly Guide

Step 6.

Slide back panel **(A)** into groove of end panels **(B)**.

Once back panel **(A)** is in position, ensure the panel is flush & square with bottom of end panels **(B)**.

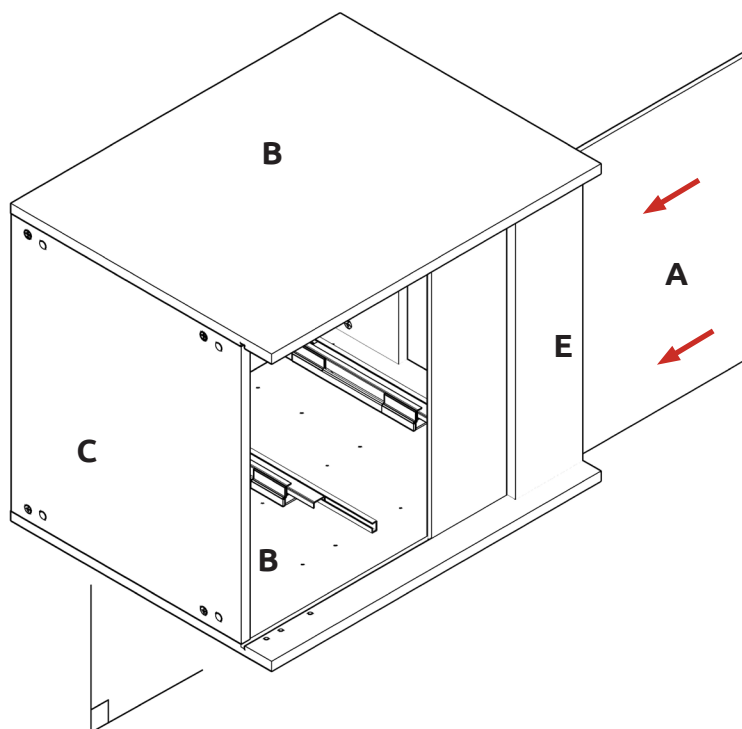


Step 7.


Hand tighten all cam locks **(H)**, this will expand cam dowels **(G)** and tighten the unit together.

Step 8.

Ensure unit is square. Secure back panel **(A)** with 3 x 30mm screws **(K)** equally spaced at the bottom of back panel **(A)** into base panel **(C)**, as shown.

Ensure you screw into the centre of base panel **(C)** (9mm from bottom edge).

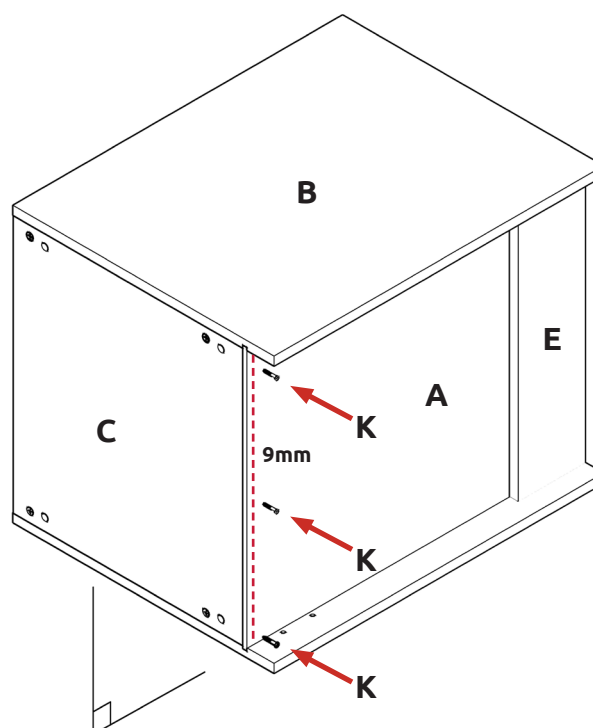

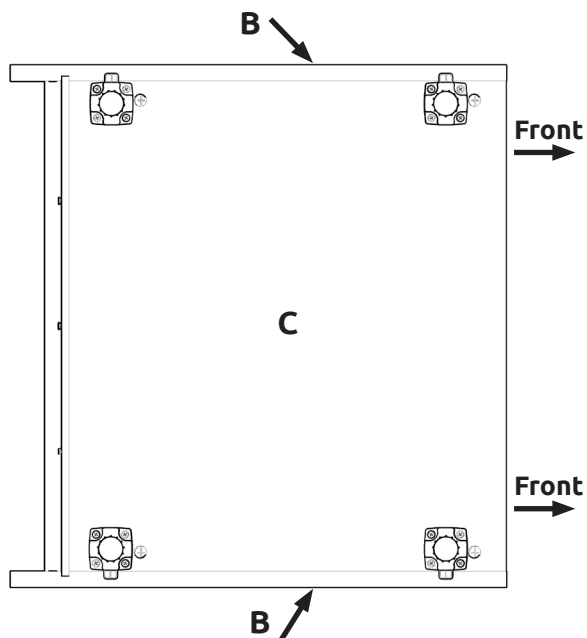


Leg position diagram

Step 9.

Position legs as shown. Ensure legs are rotated to also provide support to the end panels (**B**).


Step 10.

Secure each of the legs into place with 4 x 15mm screws (**L**) per leg.

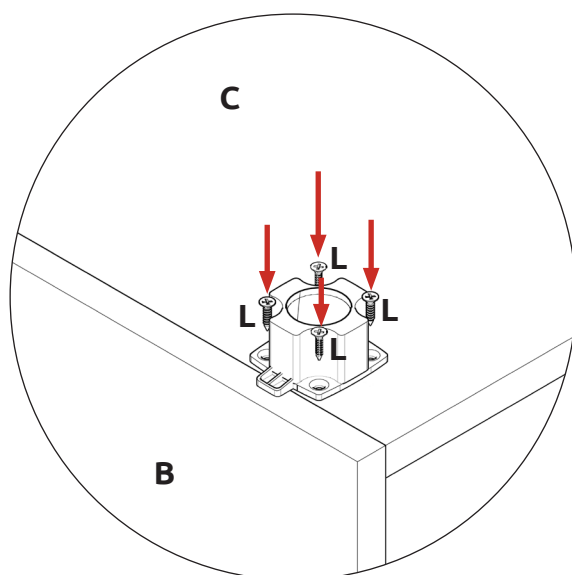


Step 11.

Push leg firmly down into leg base.
Adjust legs to 155mm before turning unit upright. Once in situ level accordingly.


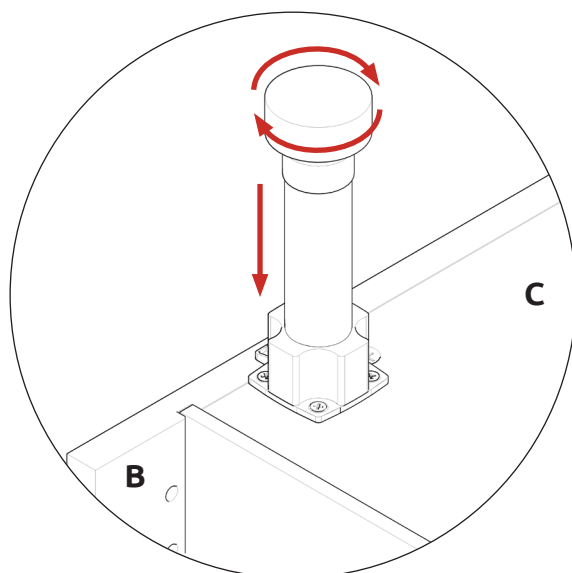


Screw into any side units using the 30mm screws **(K)** provided to secure to the unit. Screw just to the rear of the indentations at the top and bottom on sides of the unit where applicable. Place a cover cap **(M)** on the head of the screw to conceal it.

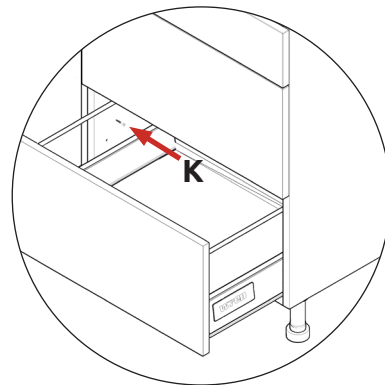



Screws for attaching to walls and worktop are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

Secure unit to wall using **Space Plug(s)**. Drill pilot hole(s) through the back rail into the wall and insert wall plug(s). Then unwind space plug(s) until it contacts both surfaces. Finally, tighten the screw(s).

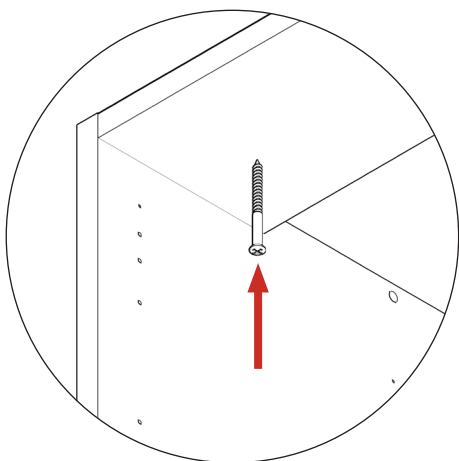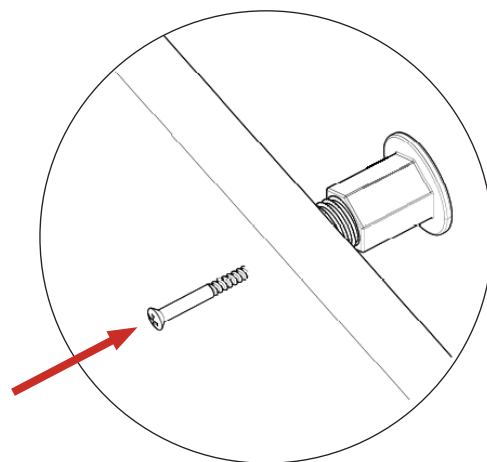



Screw up through the front rail into your worktop to secure it in place.

Use 2 x 15mm screws **(L)** to secure each of the L brackets to the unit at either side. Then screw up through into the worktop as shown.

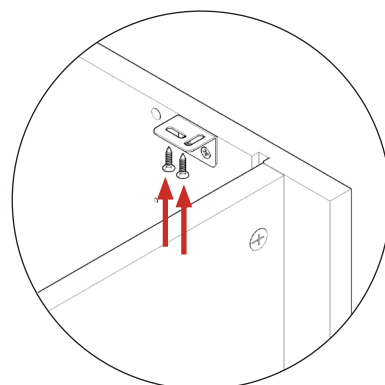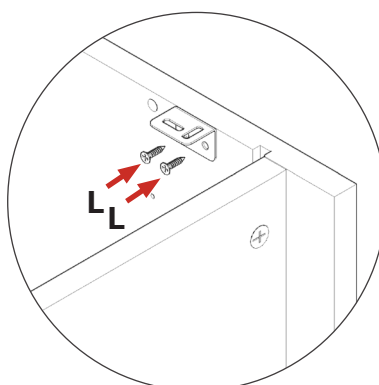


Dummy Draw Frontal Fixing (Where Applicable)

Drawers Supplied in accordance to Specific Customer Kitchen Plan

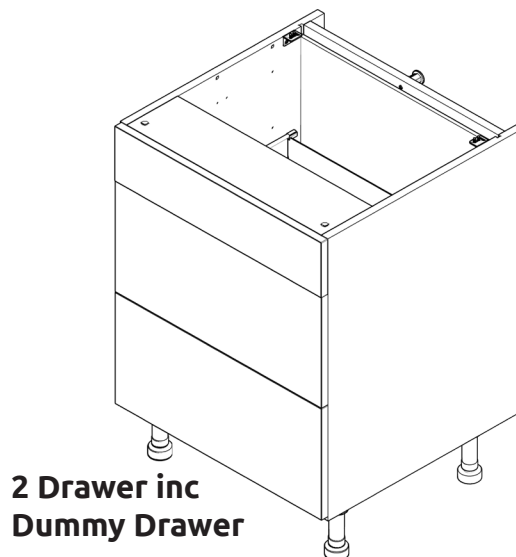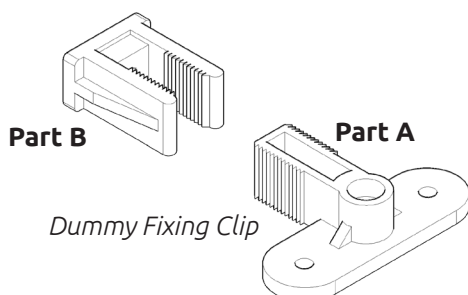


Step 1.

Secure 2 x dummy fixing clip parts **(B)** onto the inside face of dummy draw front, 22mm from the edge spaced evenly either side as shown, using 1 x 21mm screw **(Q)** per part **(B)**. Align so frontal is in line with adjacent frontals.

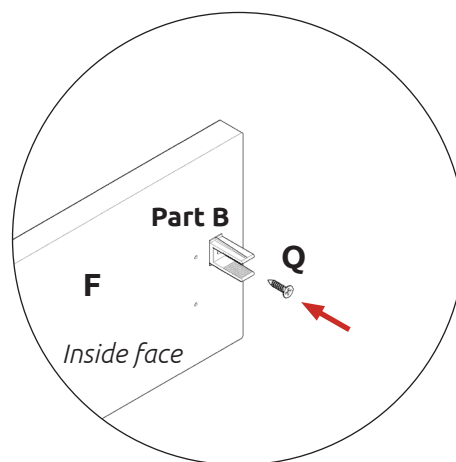

Step 2.

Align and push panel **(F)** into place. Ensure frontal is in line with adjacent units. Space appropriately from unit.

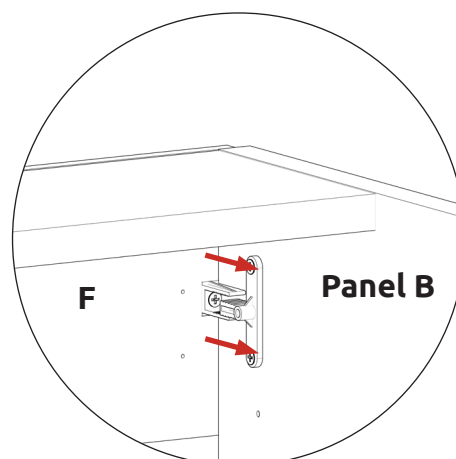

View from inside of unit

