
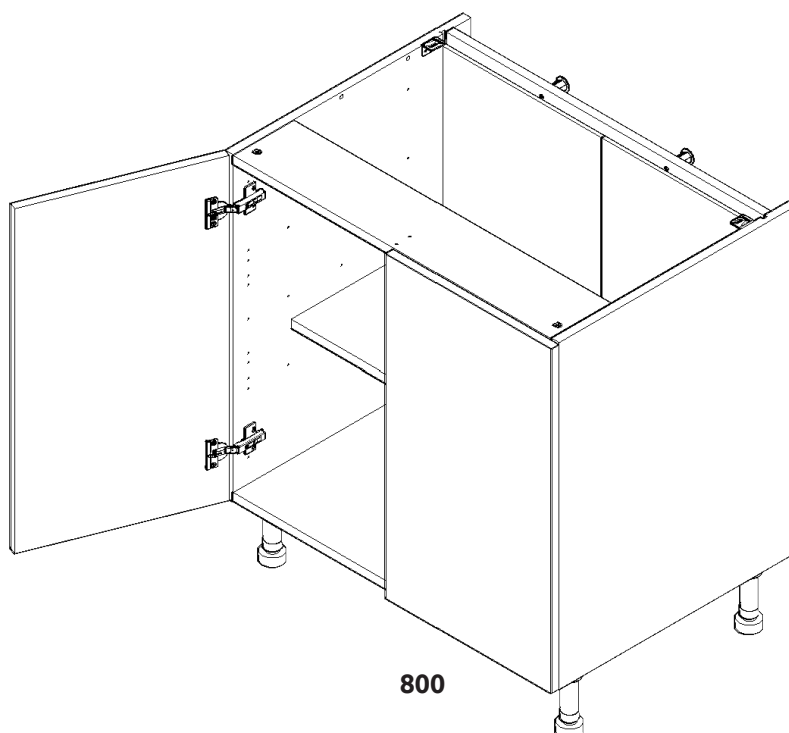


*Vogue*


# BASE UNIT

## 700 - 800 2 Door Assembly Guide

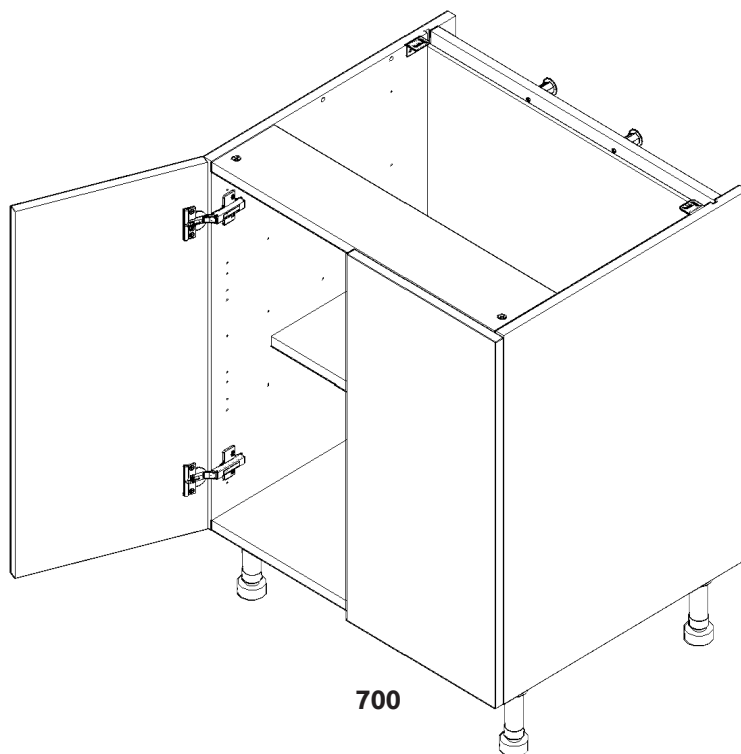

# BASE UNIT


## 700 - 800 2 Door Assembly Guide

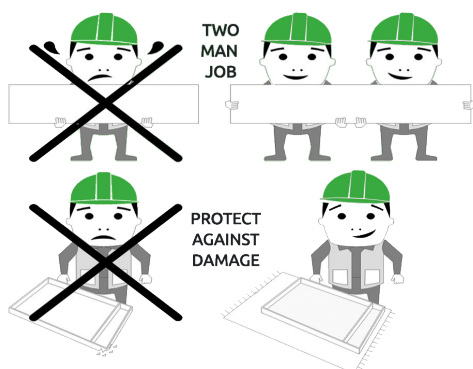

### BEFORE YOU START

INSTALLATION  
SHOULD BE  
PERFORMED BY A  
COMPETENT  
PERSON ONLY.

THIS PRODUCT COULD  
BE DANGEROUS  
IF INCORRECTLY  
INSTALLED

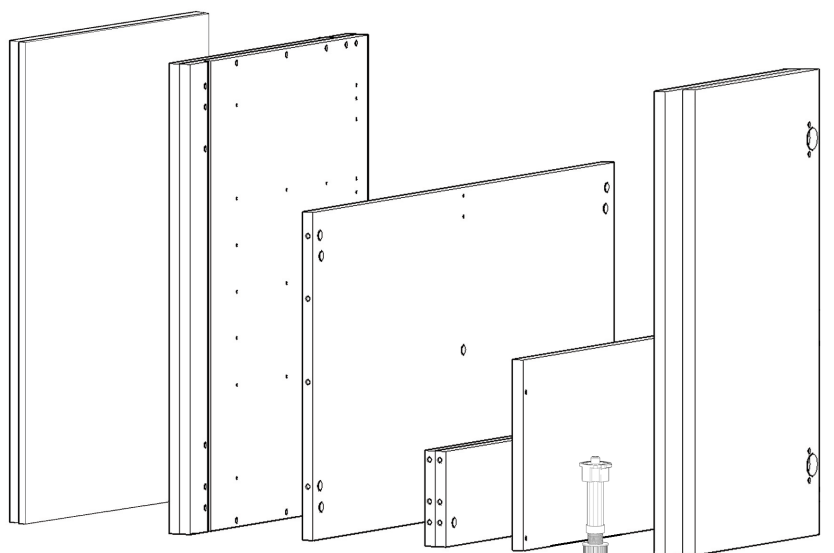


**Panel A**  
x1 Back Panel  
(800 only folded)

**Panel B**  
x2 End Panel

**Panel C**  
x1 Base Panel

**Panel D** x2 Rail  
**Shelf** x1  
**Legs** x5


**Frontal**  
(Packed separately)  
x2




**Hinge Mounting Plate**  
x4 Inc Screws



**L Bracket**  
x2



**Space Plug**  
x2

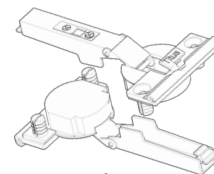

**Hinge**  
x4 Inc Screws



**(F)** x12  
Wooden Dowel



**(G)** x8  
Cam Dowel  
(Expanding)



**(H)** x8  
Cam Lock



**(J)** x4  
45mm  
Screw Black



**(K)** x8  
30mm  
Screw



**(L)** x32  
15mm  
Screw



**(M)** x4  
Cover Cap



**(N)** x2  
Door Buffer





**(Z)** x5  
Shelf Peg  
Plastic

### REQUIRED TOOLS




NOT to be  
used with CAM  
DOWEL & CAM  
LOCK






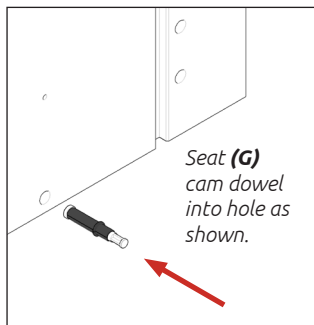

**Step 1.**  
Seat dowel (F)  
into holes in  
both end panels (B)  
as shown.



**Step 2.**  
Seat cam dowel (G)  
into holes in both end panels (B)  
as shown.

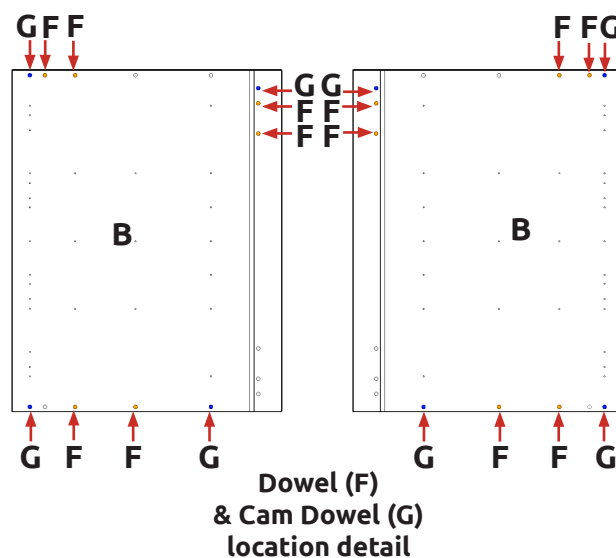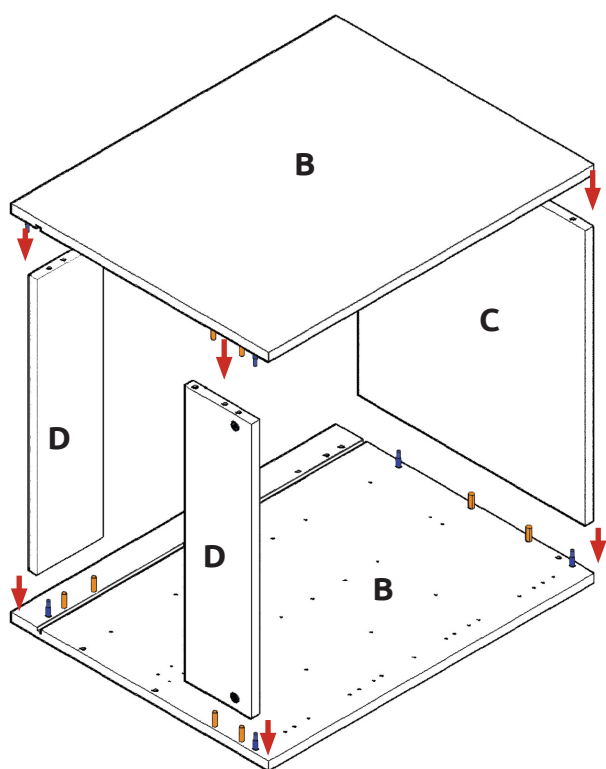
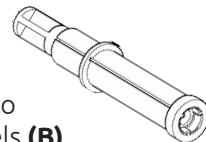


**Step 3.**  
Attach panels (C) to panels (B),  
using cam dowel (G) (in blue), and  
also using dowels (F) (in orange)  
in positions as shown.



All Cam Locks (H) are to be positioned facing the outside of the unit carcase, for ease of tightening.

Do **NOT** use power tools with  
cam dowel (G) or cam lock (H)

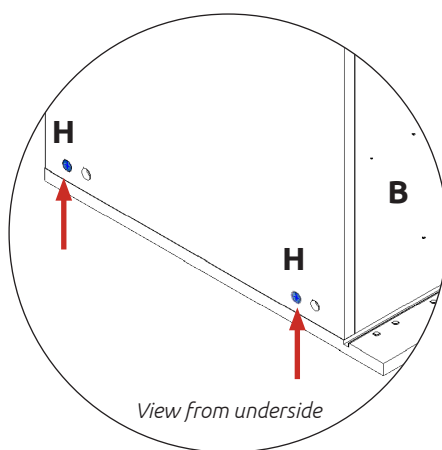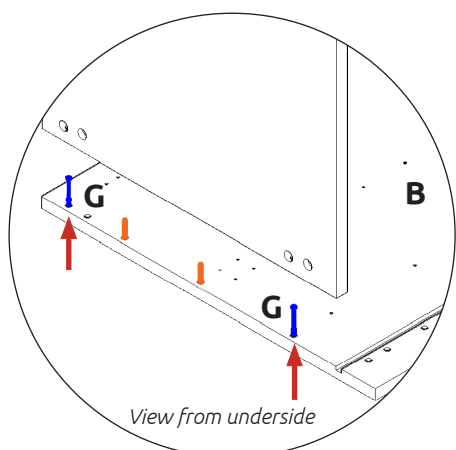

**Step 4.**  
Insert cam lock (H).  
Do NOT tighten until Step 6.




# BASE UNIT

## 700 - 800 2 Door Assembly Guide

### Step 5.

Slide back panel **(A)** into groove of end panels **(B)**.

Once back panel **(A)** is in position, ensure the panel is flush & square with bottom of end panels **(B)**.

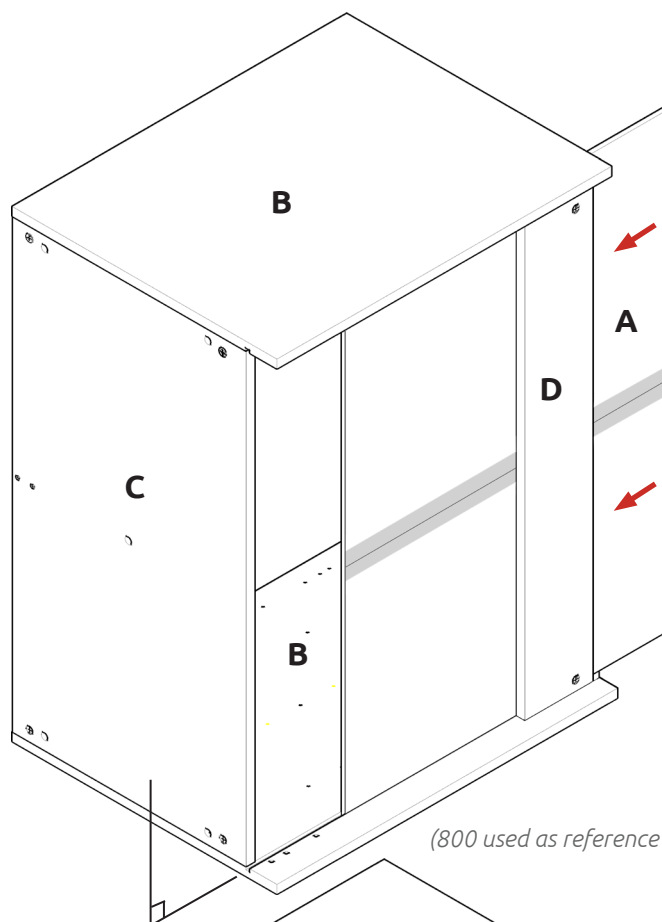


### Step 6.


Hand tighten all cam locks **(H)**, this will expand cam dowels **(G)** and tighten the unit together.

### Step 7.

Ensure unit is square. Secure back panel **(A)** with 4 x 30mm screws **(K)** equally spaced at the bottom of back panel **(A)** into base panel **(C)**, as shown.

Ensure you screw into the centre of the base panels **(C)** (9mm from the edge).

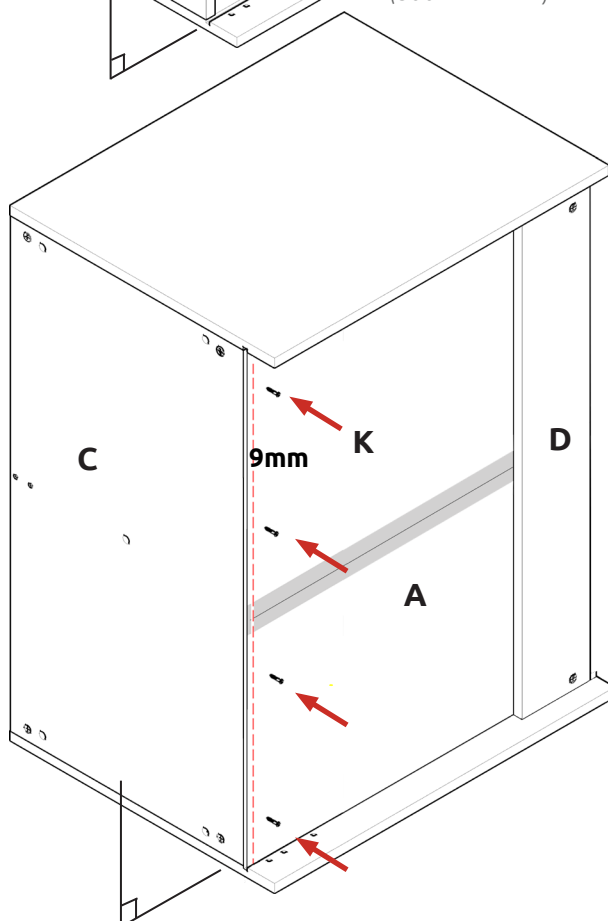

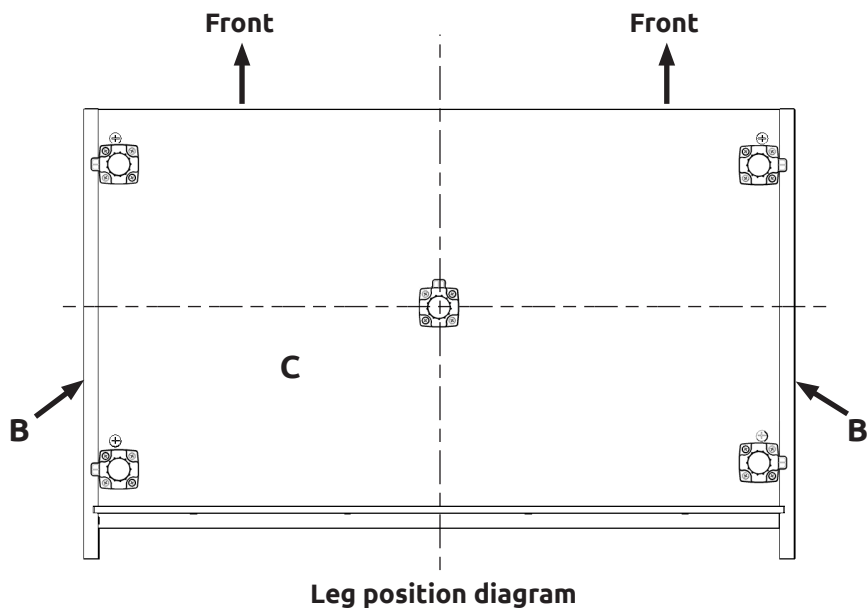


### Step 8.

Position legs as shown. Ensure legs are rotated to also provide support to the end panels (**B**).


### Step 9.


Secure each of the legs into place with 4 x 15mm screws (**L**) per leg.

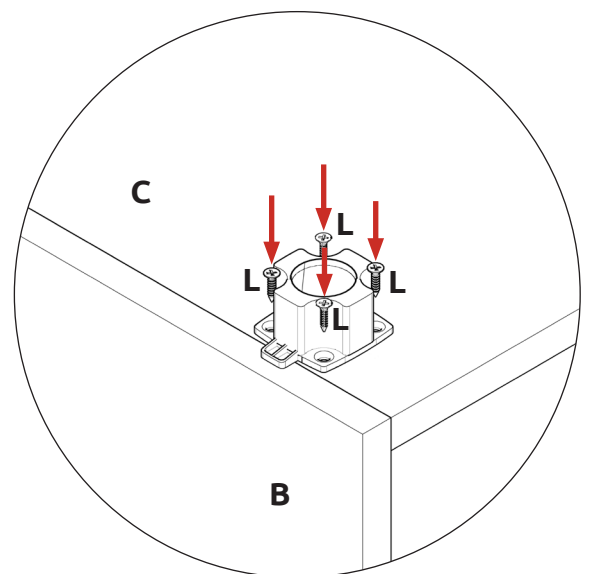

### Step 10.

Push leg firmly down into leg base. Adjust legs to 155mm before turning unit upright. Once in situ level accordingly.

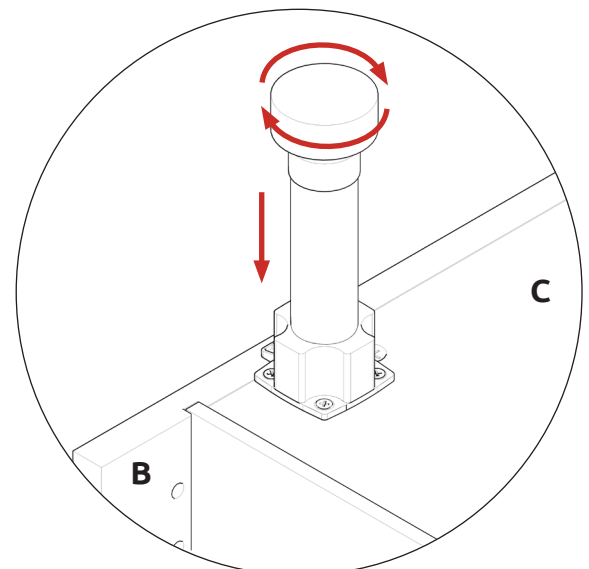




Hinge Plates

### Step 11.


Attach hinge mounting plate onto both End Panels (**B**) as shown, using screws which are already positioned within the hinge plates.

**Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.**

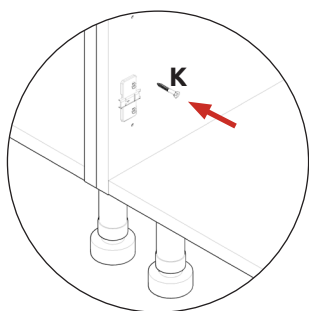


### Securing to Adjacent Units

Screw into any side units using the 30mm screws (**K**) provided to secure to unit. Screw just to the rear of the hinge plate at the top and bottom of both sides of the unit, place a cover cap (**M**) on the head to conceal it.

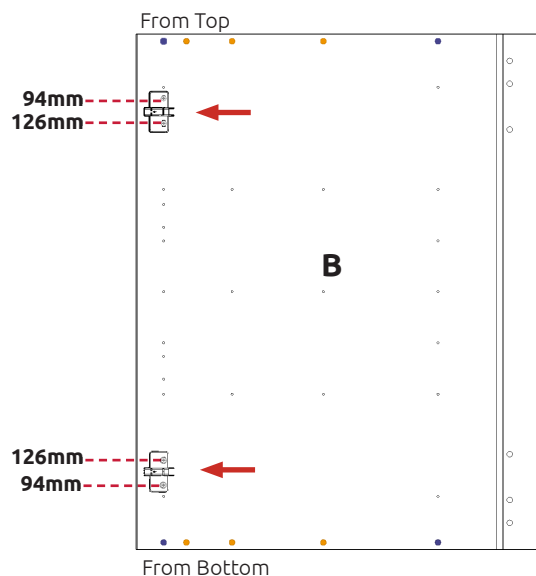

Screws for attaching to walls and worktop are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.



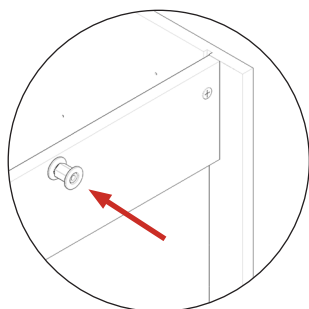


### Space Plugs

Secure unit to wall using space plugs. Drill 2 pilot holes through the back rail into the wall and insert wall plug. Then unwind space plug until it contacts both surfaces. Finally, tighten the screws.

### L Brackets

Use 2 x 15mm screws (**L**) to secure each of the L brackets to the unit at either side. Then screw up through into the worktop as shown.

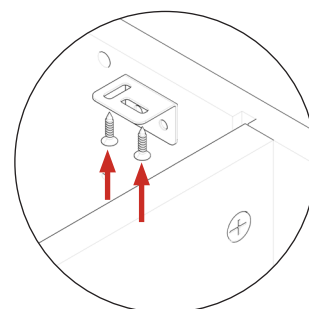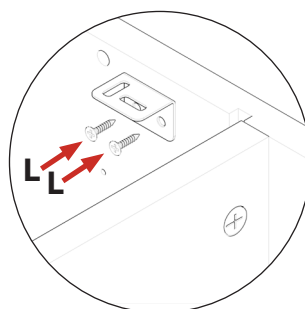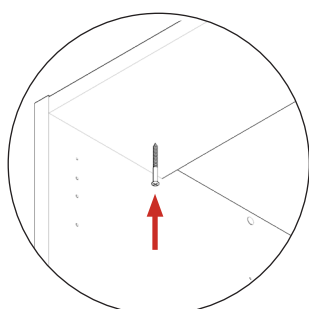

### Worktop

Screw up through the front rail into your worktop to secure it in place.




### Step 12.

Insert hinge in top & bottom holes as shown below.

### Step 13.

Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

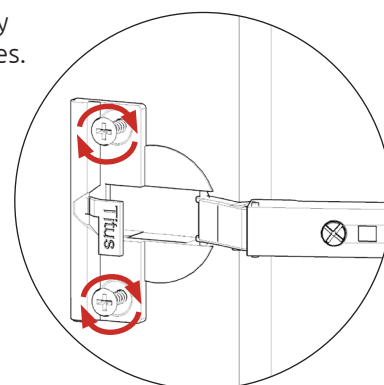



### Step 14.

Attach the door to unit where required.

To attach door, clip hinge onto hinge plate and click to secure.

### Step 15.


Adjust hinge to suit. As shown below.

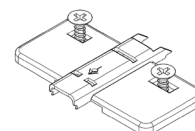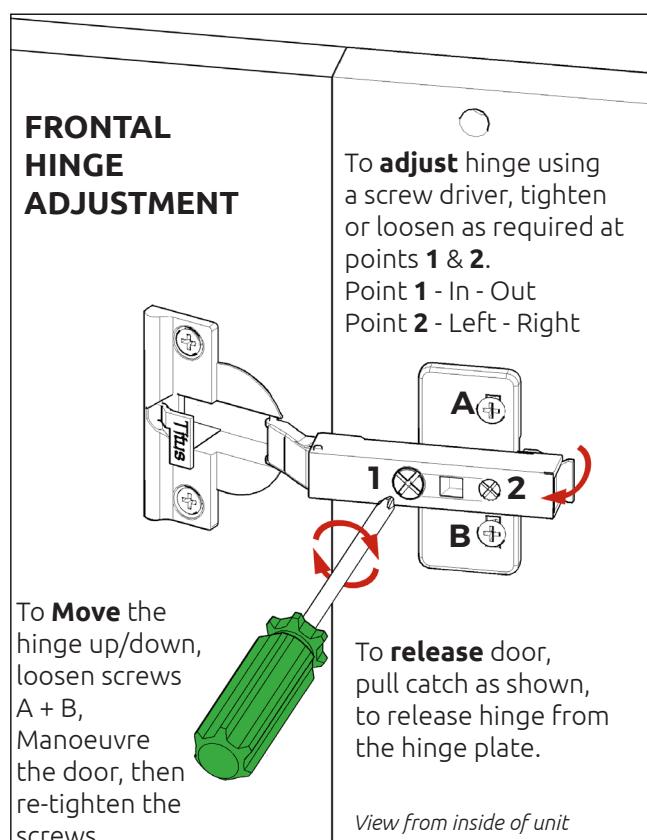


Hinge Plates

### Step 16.

Fit cover caps to hinge. Adjust Soft close to suit.

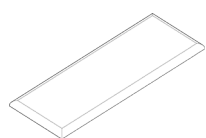

Hinge Cover Caps

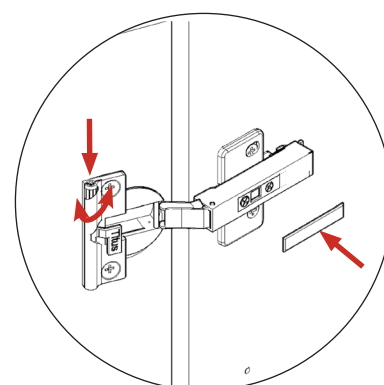

The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

