


Vogue

WALL UNIT


1000 Tall 2 Door Assembly Guide

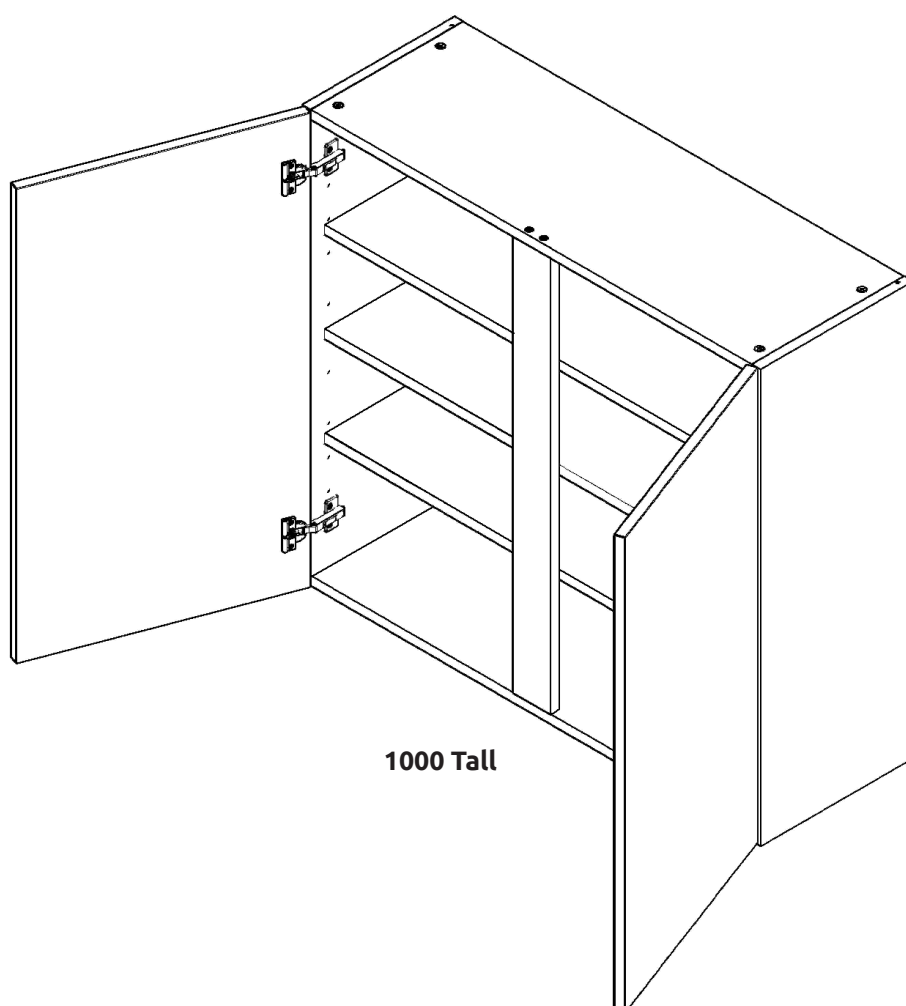

1000 Tall

WALL UNIT



1000 Tall 2 Door Assembly Guide

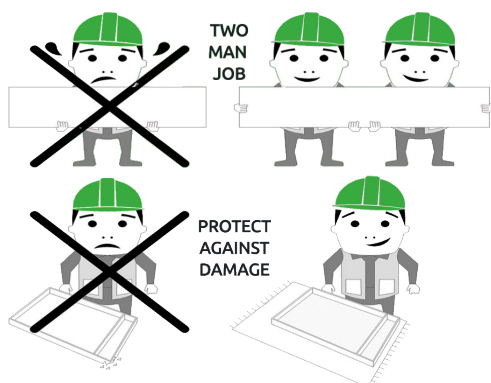


BEFORE YOU START

INSTALLATION
SHOULD BE
PERFORMED BY A
COMPETENT
PERSON ONLY.


THIS PRODUCT COULD
BE DANGEROUS
IF INCORRECTLY
INSTALLED

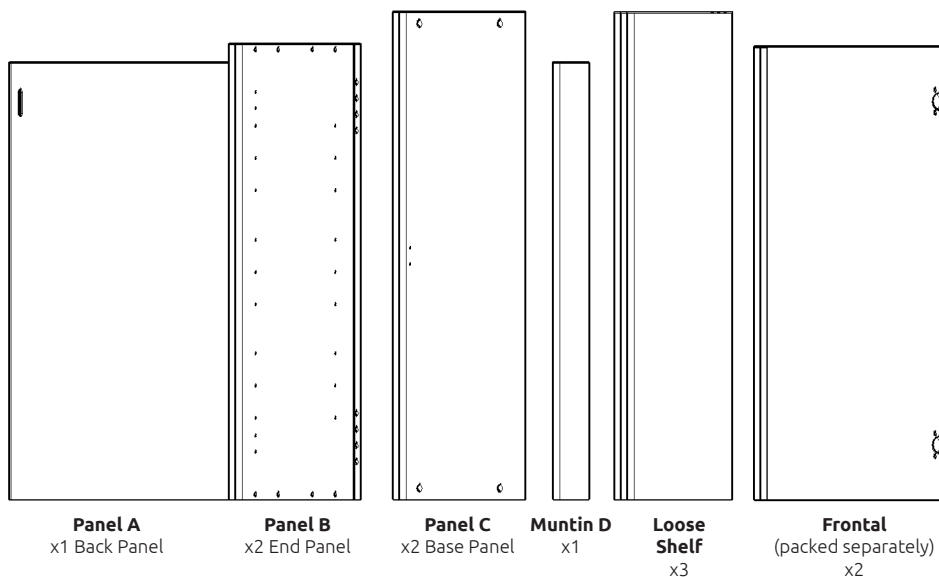


HANGING BRACKET
x2 Inc Screws




**HANGING
BRACKET PLATE**
x2 (Screws NOT included)

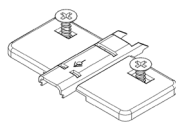


**HINGE
MOUNTING PLATE**
x4 Inc Screws

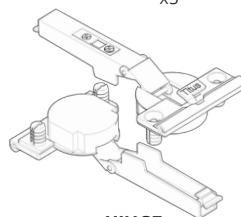

HINGE
x4 Inc Screws




**CORNER
GUSSET**
x2



**HANGING BRACKET
COVER CAP**
x2



(F) x8
Wooden Dowel




(G) x8
Cam Dowel
(Expanding)



(H) x8
Cam Lock




(P) x4
45mm
Screw



(K) x4
30mm
Screw




(L) x8
15mm
Screw



(S) x4
20mm
Screw



(M) x4
Cover Cap



(N) x2
Door
Buffer



(Z) x10
Shelf Peg
Plastic




(T) x12
Back Panel
Support Clip

REQUIRED TOOLS




NOT to be used
with CAM DOWEL
& CAM LOCK



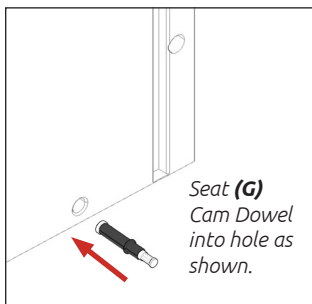


Step 1.

Seat dowel (F) into holes in end panel (B) as shown.




Step 2.

Seat cam dowel (G) into holes in end panel (B) as shown.

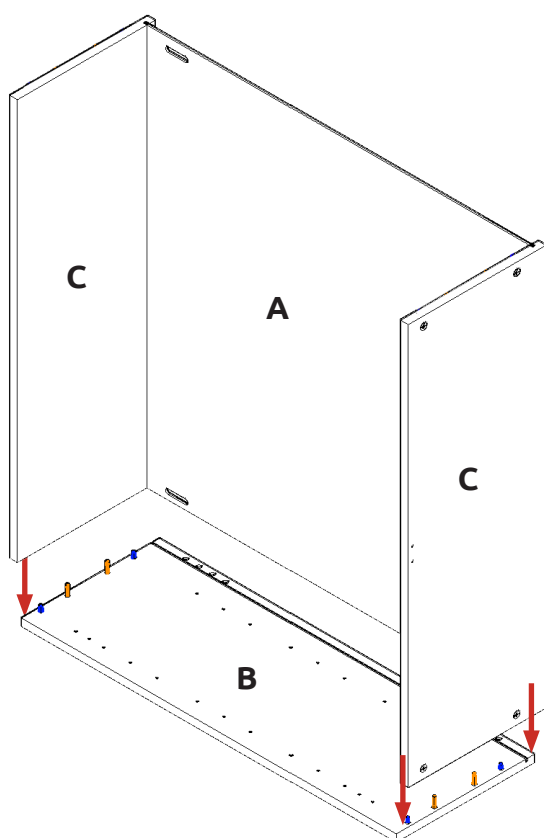

Step 3.

Attach panels x2 (C) to panel (B), using cam dowels (G) (in blue) and also using dowels (F) (in orange) in positions as shown.

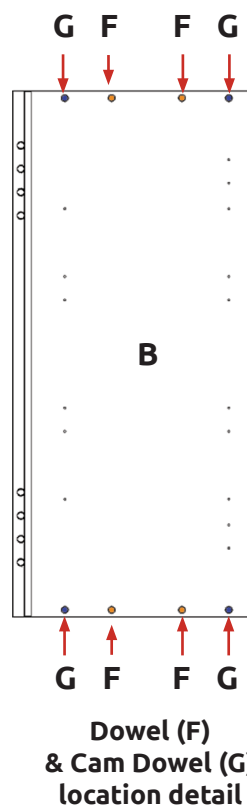



Step 4.

Slide panel (A) into the groove of panels (B) and x 2 (C).



NB. All cam locks (H) are to be positioned facing the outside of the unit carcass, for ease of tightening.

Do **not** use power tools with cam dowel (G) or cam lock (H)

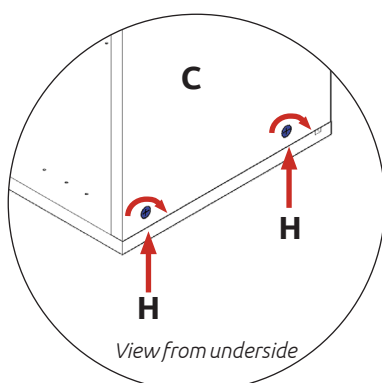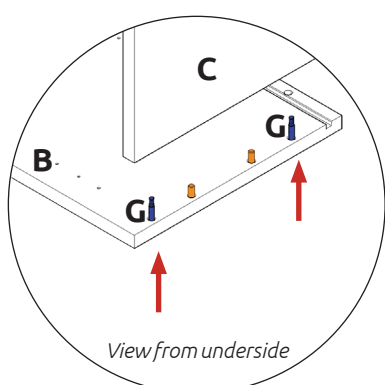

Step 5.

Insert cam lock (H). Hand tighten all cam locks (H), this will expand the cam dowels (G) and tighten the unit together.



WALL UNIT

1000 Tall 2 Door Assembly Guide



Step 6.

Seat dowel (F) into holes in both panels (B) as shown.




Step 7.

Seat cam dowel (G) into holes in both end panels (B) as shown.

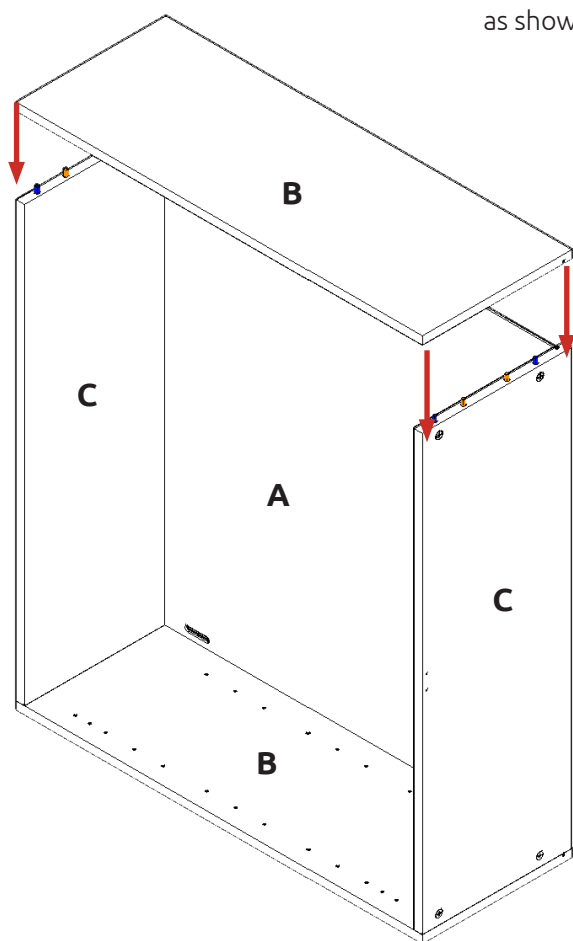
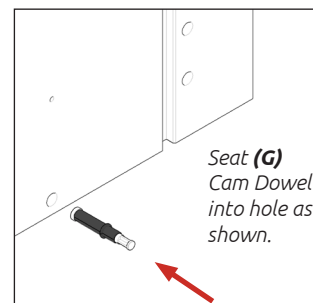


Step 8.

Attach panel (B) to panels (C) using cam dowels (G) (in blue) and also using dowels (F) (in orange) in positions as shown. Ensure panel (A) is seated into the groove of panel (B).

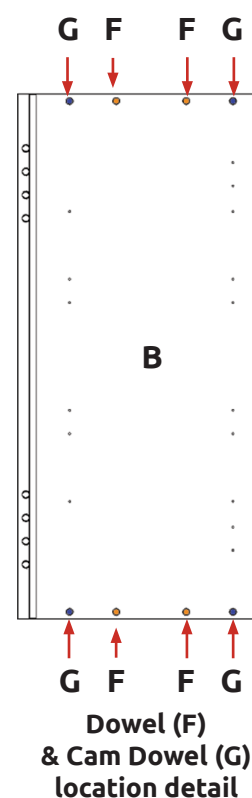

NB. All cam locks (H) are to be positioned facing the outside of the unit carcass, for ease of tightening.

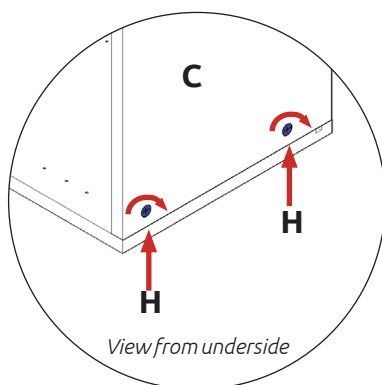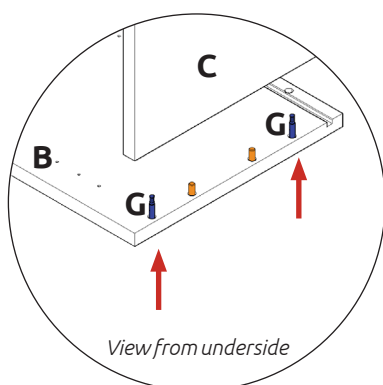


Do **not** use power tools with cam dowel (G) or cam lock (H)

Step 9.

Insert cam lock (H). Hand tighten all cam locks (H), this will expand the cam dowels (G) and tighten the unit together.






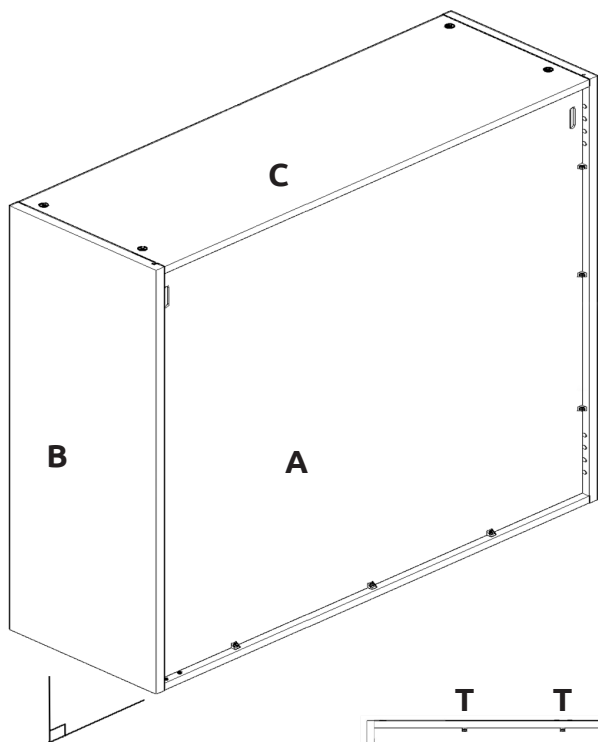


Step 10.

Ensure unit is square.

Step 11.

Slide the back panel clips (T) into the groove of both panels (B) & (A). The back panel clips (T) should be evenly spaced as shown and positioned to allow the hanging bracket and corner gussets to be fitted. Once in place, tighten screw.

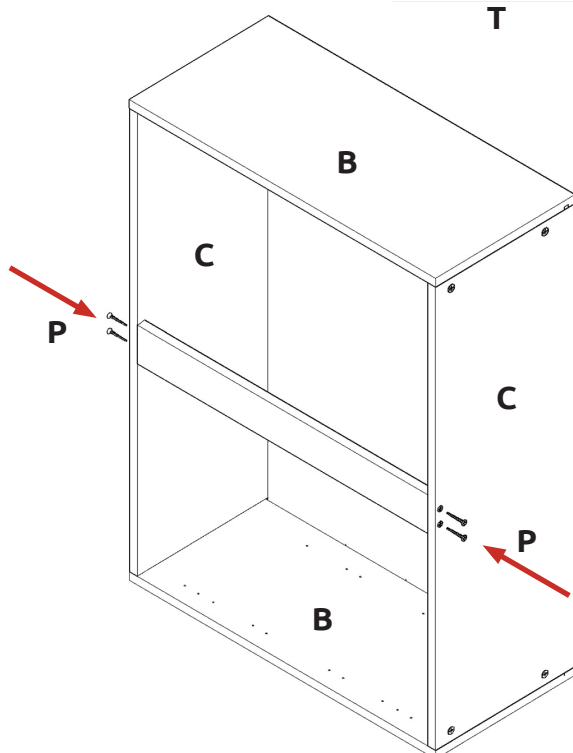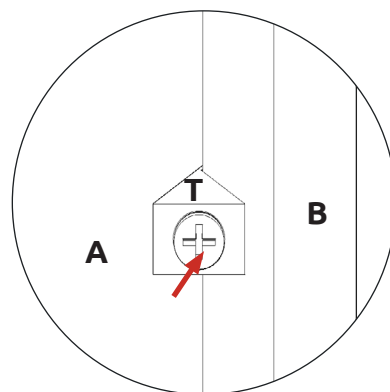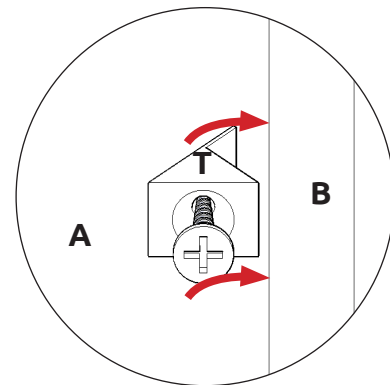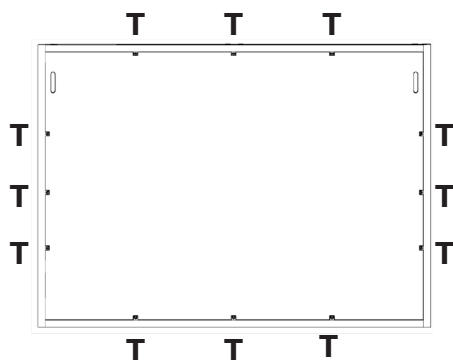

Step 12.

Join muntin panel (D), to both panels (C) using 4 x 45mm screws (P) as shown.


Step 13.

Attach hinge mounting plates onto end panels (B) in locations shown using screws already in the hinge plates.

Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.

94mm
126mm

from top

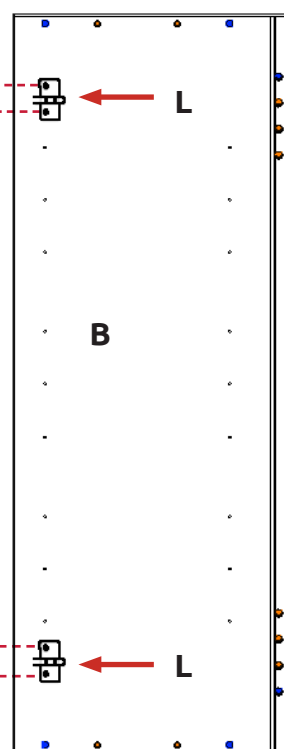


126mm
94mm

from base




Care to be taken. Hanging procedure is necessary for a safe installation.

Step 14. Hanging Brackets steps a,b & c to be carried out on both sides as shown

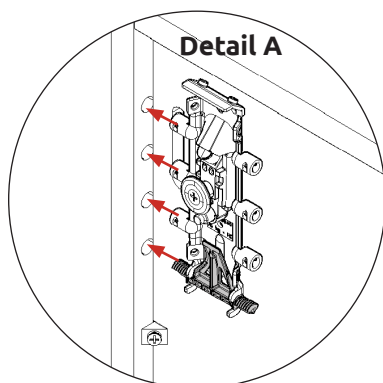


Step a

Insert hanging bracket into pre-drilled holes

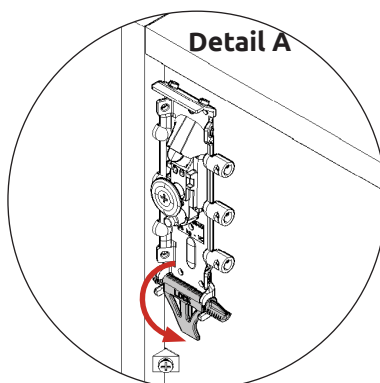


Step b

Rotate locking lever 180 degrees

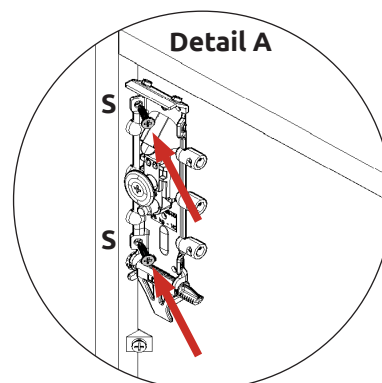


Step c

Secure with provided 2 x 20mm screws (S) per bracket

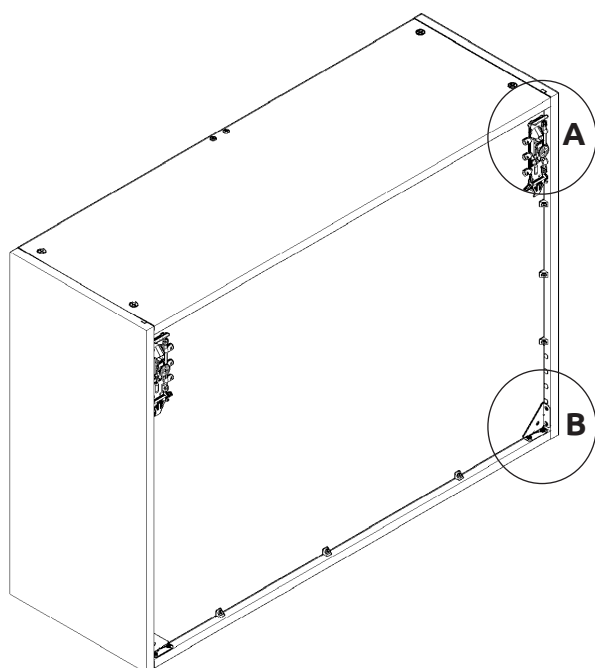


Step 15.

Secure corner gussets to the bottom left and right hand side of the wall unit using 4 x 15mm screws (L) per plate.

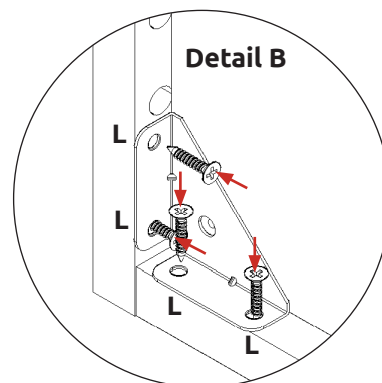

Detail B

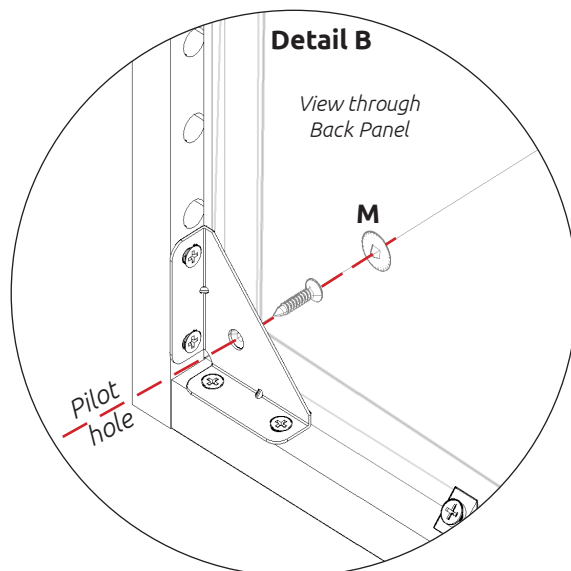

Detail B

View through Back Panel

Step 16.

Drill a small pilot hole through the centre of the corner gussets, through the back of the unit. Use this hole at the end of the process to screw through and into the wall. Cover the screw heads using the cover caps (M) provided.

Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.





Screws for attaching to walls are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

Step 17.

Measure appropriately and attach the 2 x hanging bracket plates onto the wall screwing through the provided holes into your wall.


Step 18.

Hang the unit using the brackets to hook onto the plate as shown

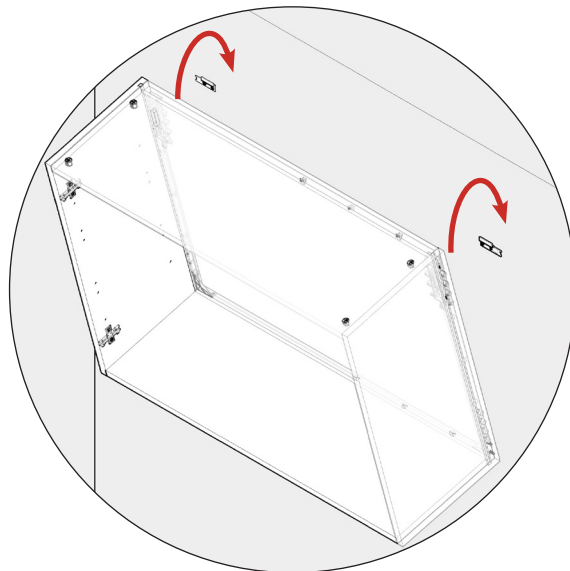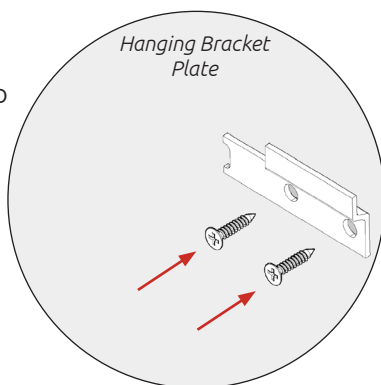


Step 19.

Using points a, b & c adjust the unit to suit.

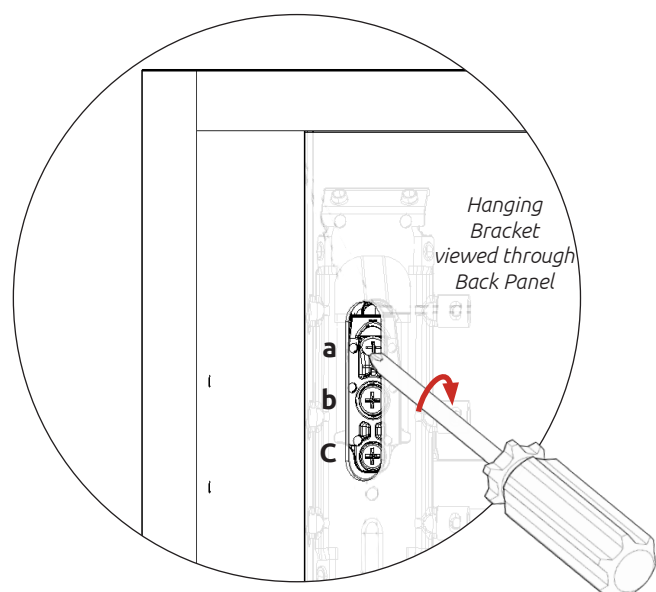


Step a.

Rotate the screw clockwise to move the unit up. Anti-clockwise for down.

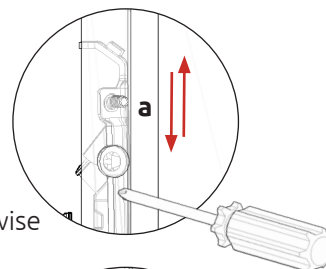



Step b.

Adjust the depth using centre screw.

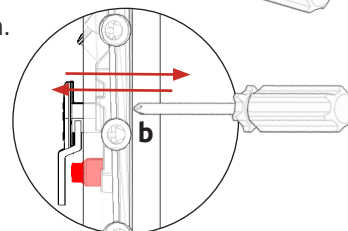

Step c.

Screw the red screw until it touches the plate to lock in position.

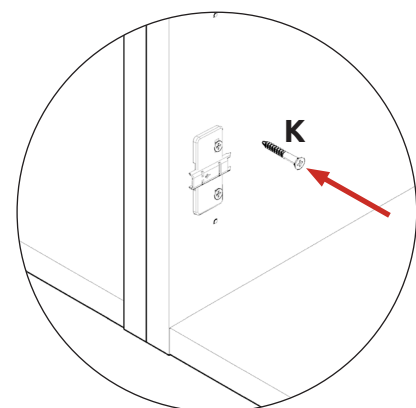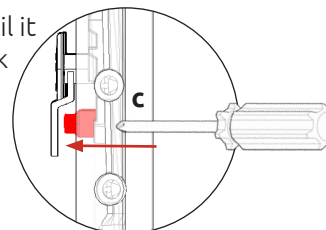


Step 20.

Screw into any side units using the provided 2x 30mm screws (K) to secure the unit. Screw just to the rear of the hinge plate then place a cover cap (M) on the head to conceal it.

WALL UNIT

1000 Tall 2 Door Assembly Guide

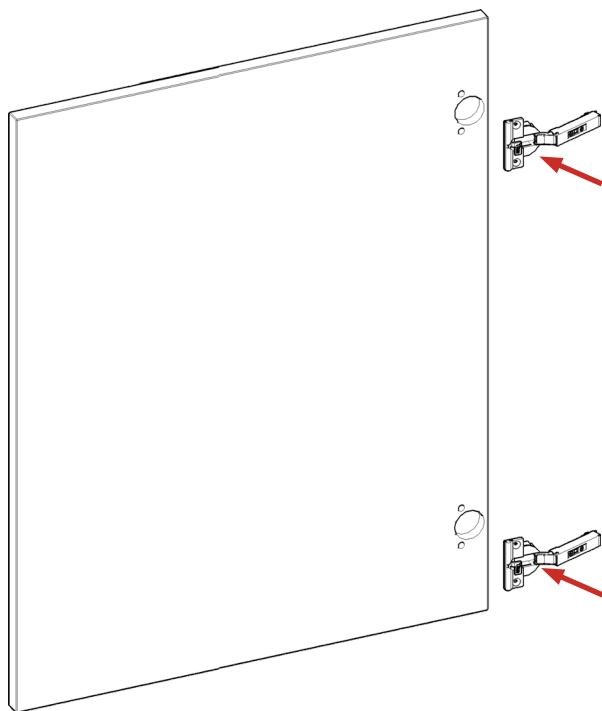


Step 20.

Insert hinge in top & bottom holes as shown below.


Step 21.

Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

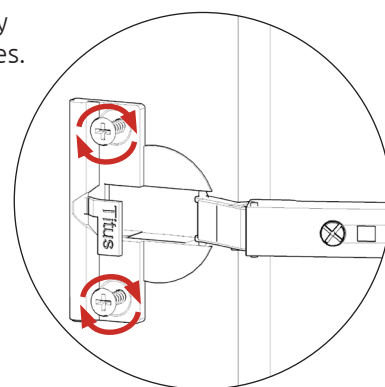

Step 22.


Attach the door to unit where required. To attach door, clip hinge onto hinge plate and click to secure.

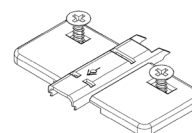

Hinge Plates


Step 23.

Adjust hinge to suit. As shown below.

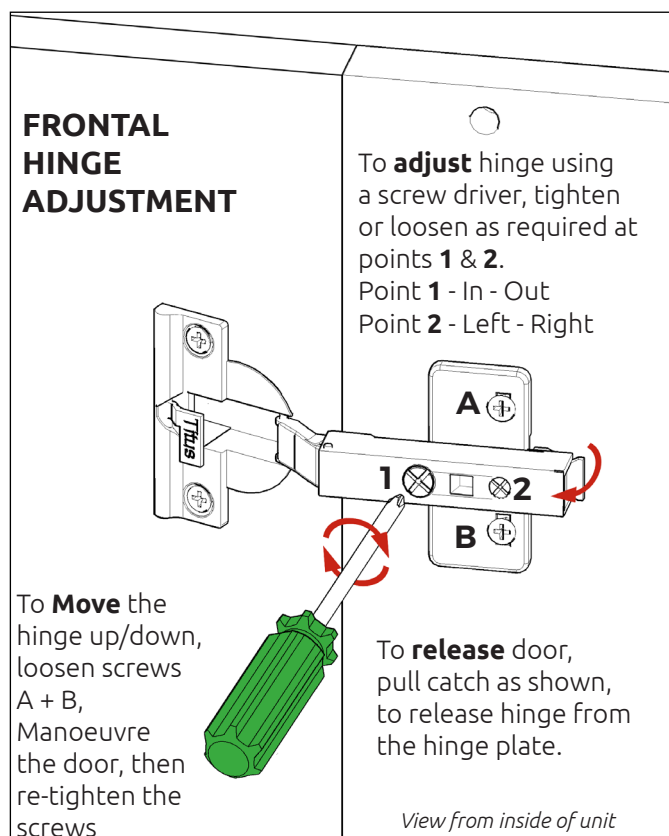


Step 24.

Fit cover caps to hinge. Adjust Soft close to suit.

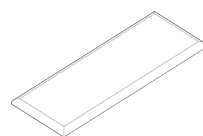

Hinge Cover Caps

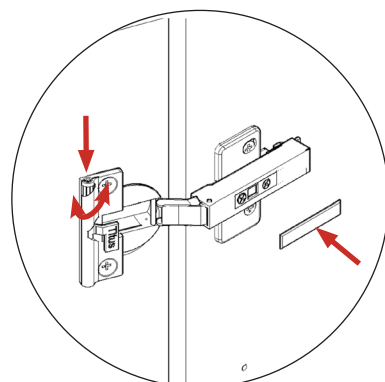

The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.