



# BASE UNIT


## Curved & Square Corner Post / Pilaster Attachment Guide

# wren



### **FI.PK.FIT.046 - FITTING PACK**

Supplied in pack:

**(P) x4** 45mm Screws 

**(L) x16** 15mm Screws 

**(FF) x8** L Brackets SML 

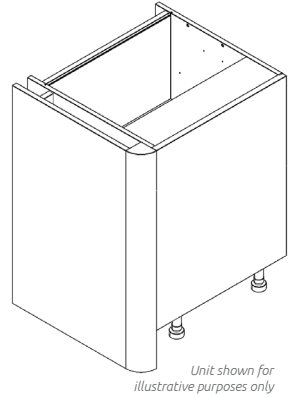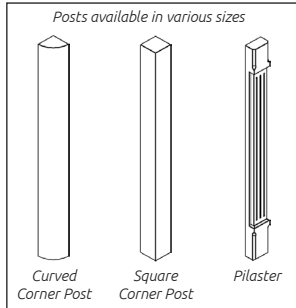

<p><b>Step 1.</b> Scribe/cut the back of the <b>décor end panel</b> to the wall.</p> <p><b>Include the size of the Post in your measurements, so it aligns with the frontals.</b></p>	
<p><b>Step 2.</b> If the height requires adjusting, remove material from the top edge to the required height. <b>See customer specific kitchen plan for reference.</b></p>	
<p><b>Step 3.</b> Fit <b>4 x L brackets SML</b> on the front edge of the décor end panel and then attach to the post using <b>15mm screws</b> provided. <b>Ensure décor panel sits flush with post.</b> Fix filler panel to rear of décor panel using <b>4 x L brackets SML</b> and the <b>15mm screws</b> provided.</p>	
<p><b>Step 4.</b> Attach the assembled décor end to unit with 2 x 45mm screws from inside of unit, in to the post. Then 2 x 45mm screws from inside of unit, in to the filler panel. <b>The screws should be equally spaced and positioned so they are least visible.</b></p>	