



TOWER UNIT

2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet


Assembly Guide

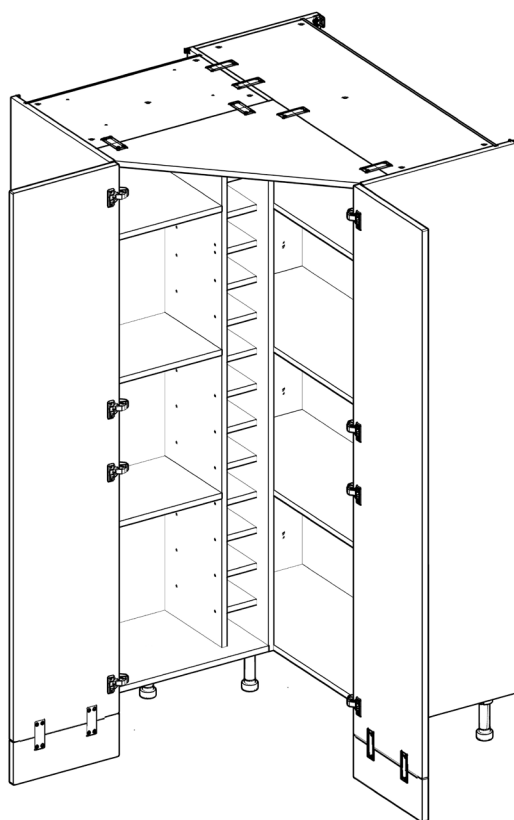


2070 x 600

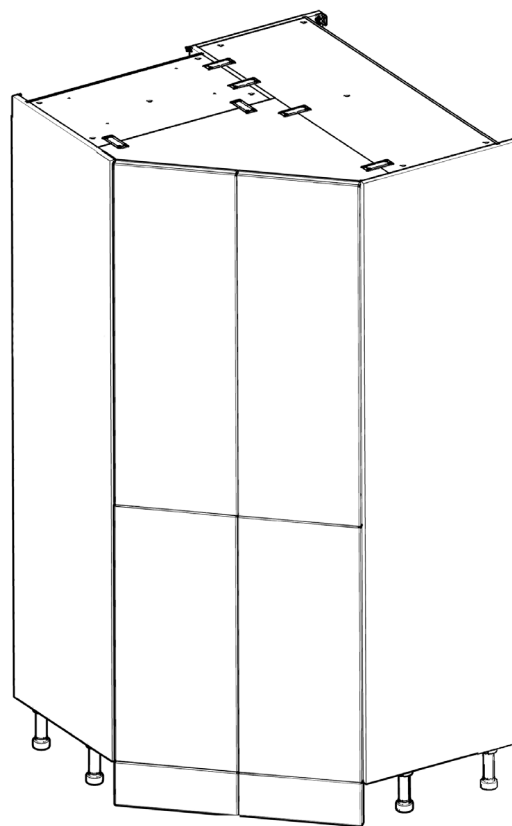


2250 x 600 Tall

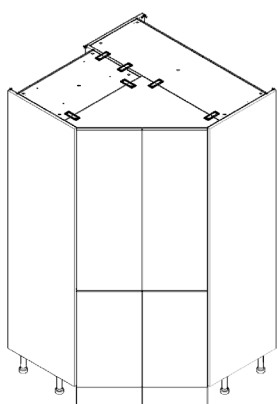

70/30 Door

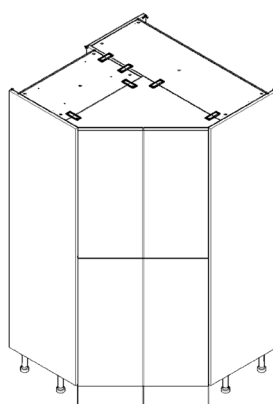

50/50 Door

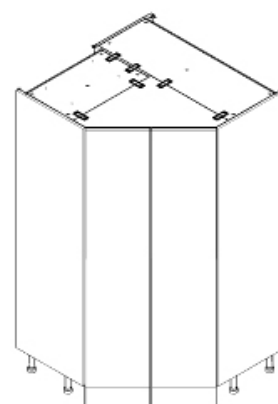


1 Door

TOWER UNIT

2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet


Assembly Guide

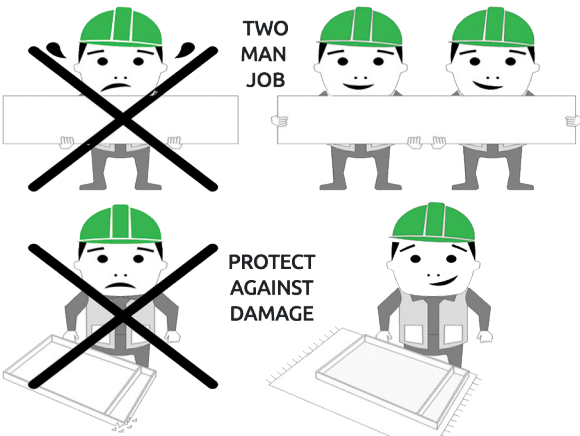


BEFORE YOU START

INSTALLATION
SHOULD BE
PERFORMED BY A
COMPETENT
PERSON ONLY.


THIS PRODUCT COULD
BE DANGEROUS
IF INCORRECTLY
INSTALLED

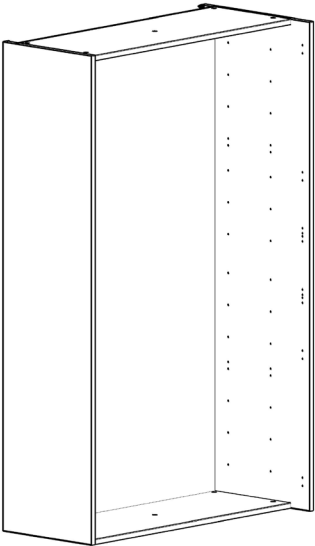


Carcase (RH)
Right Hand

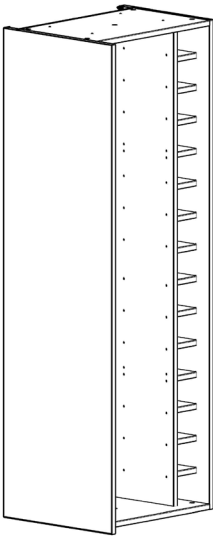

Carcase (LH)
Left Hand

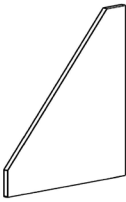

Panel C
x1 Top Panel

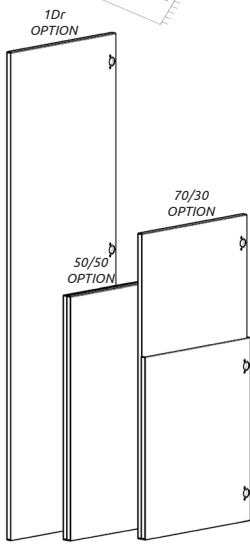

Frontals
50/50 or 1Dr or 70/30
(Packed Separately)




Frontal Plinth
(To order)




Cabinet Plinth
(To order)



Legs
x10

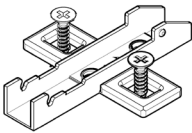


Hinge Mounting Plate
(To order) Inc Screws

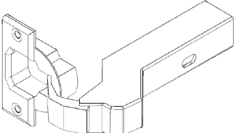


Hinge
(To order) Inc Screws



Fixing Plate (U)
x19

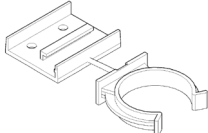


Plinth Attachment
(To order)




L Bracket LGE
x4



(FF) L Bracket SML
x6



Door Buffer
x4



(K) x6
30mm
Screw



(L) x142
15mm
Screw



Metal Shelf Peg
x56



(M) x8
Cover Cap
(Per Colour)



REQUIRED TOOLS



NOT to be used
with CAM DOWEL
& CAM LOCK



TOWER UNIT


2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide


Step 1.

Lay both carcasses **(LH)** & **(RH)** flat as shown.

Secure 5 x fixing plate **(U)** positioned onto outside face of panel **(B)** of carcass **(RH)** equally spaced using 2 x 15mm screws **(L)** as shown.

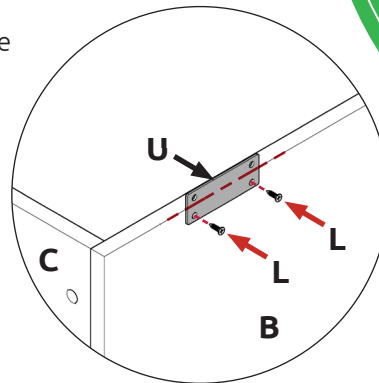


View from above
Carcass **RH**

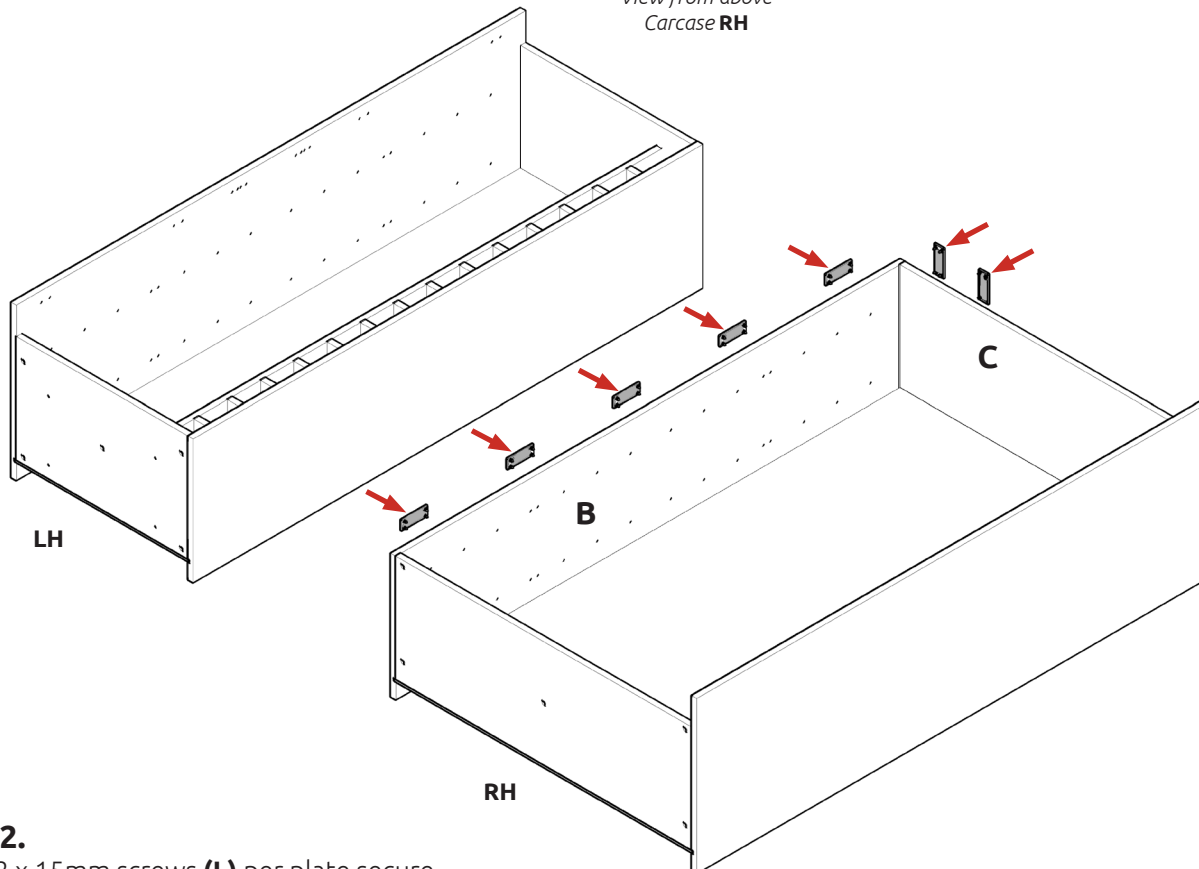


Step 2.

Using 2 x 15mm screws **(L)** per plate secure 2 x fixing plate **(U)** positioned onto outside face of panel **(C)** of carcass **(RH)** using measurements shown.

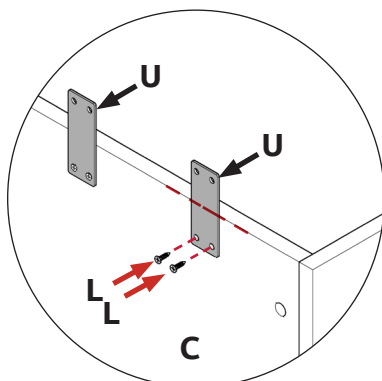

View from above
Carcass **RH**

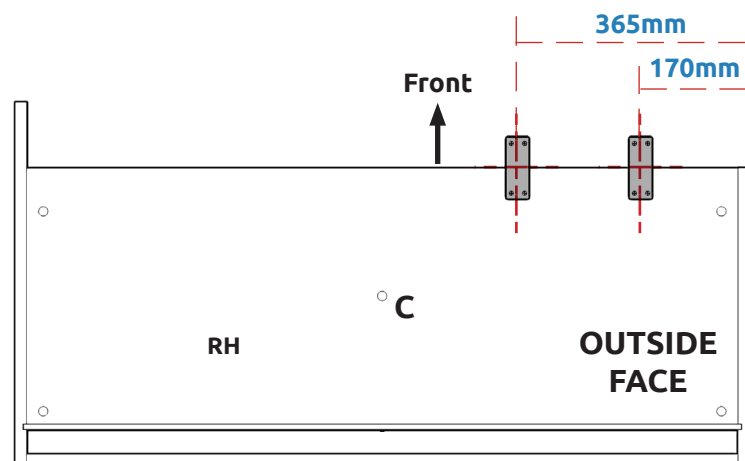

View from Above
Fixing Plate diagram

TOWER UNIT

2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet




Assembly Guide

Step 3.

Secure leg base into place with 2 x 15mm screws (**L**) per leg as shown.



Ensure legs are rotated to also provide support to the end panels (**B**).

Front legs should have flat edge to the front.

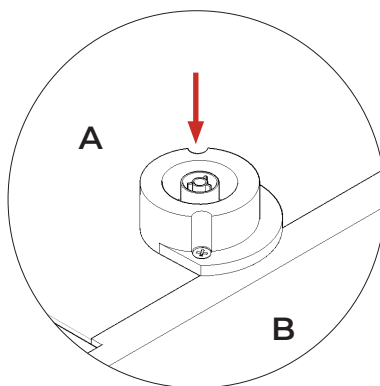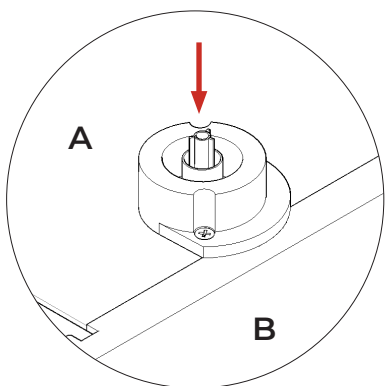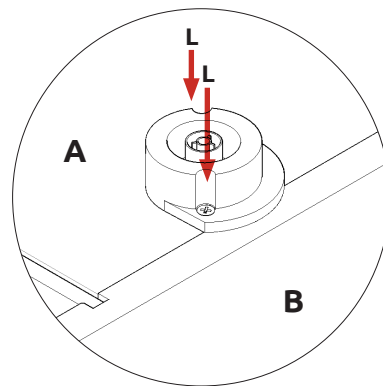

Step 4.

Lightly hit centre peg of leg base with hammer until flush.

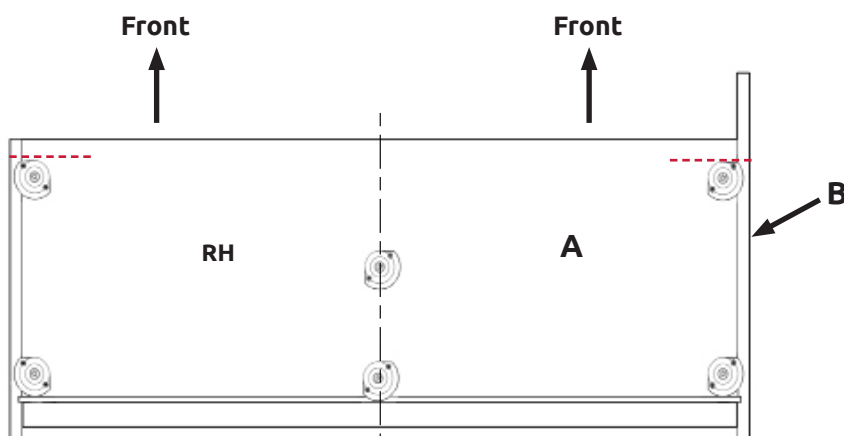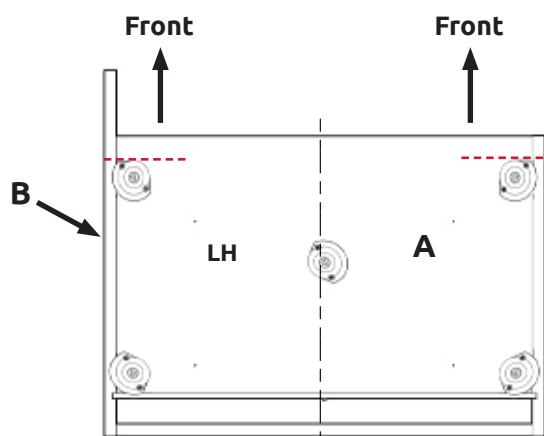

View From Underside


Leg position diagram

Step 5.

Push leg firmly down into leg base.

Adjust legs to 155mm before turning both carcass upright.

Once in situ level accordingly.

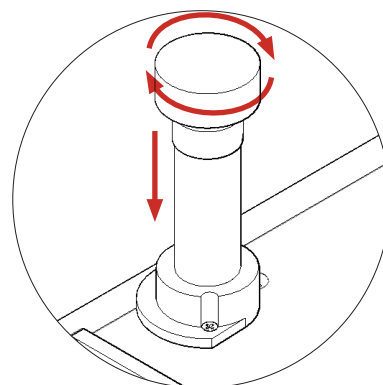

It is **important** to lift unit onto its legs. Do not tilt as depicted in image.

TOWER UNIT

2070 & 2250


Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 6.


Position carcass **LH** and carcass **RH** together as shown.

Ensure carcasses are flush & square.

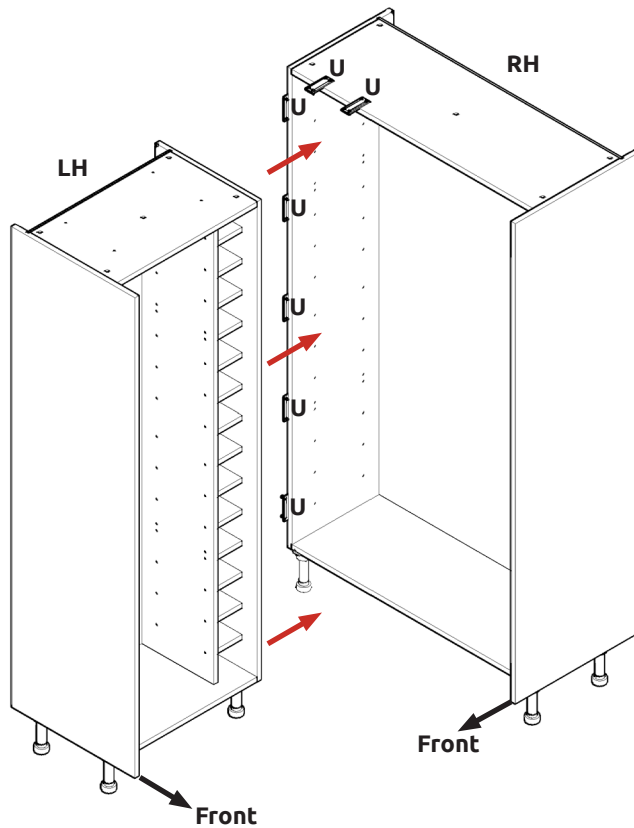



Step 7.

Screw through fixing plate **(U)** into adjoining carcass **LH** using 2 x 15mm screws **(L)** to secure both carcasses together. Repeat per fixing plate **(U)**.

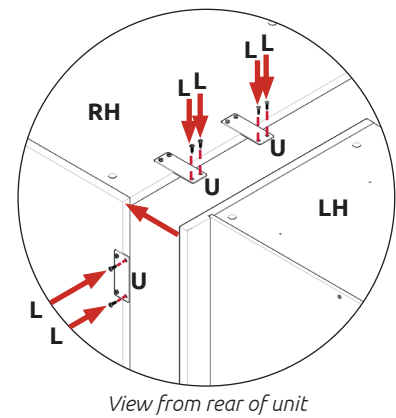

Step 8.

Align 2 x L bracket SML **(FF)** combined with 2 x 15mm screws **(L)** per bracket as shown. Secure carcass from inside the cabinet as shown.

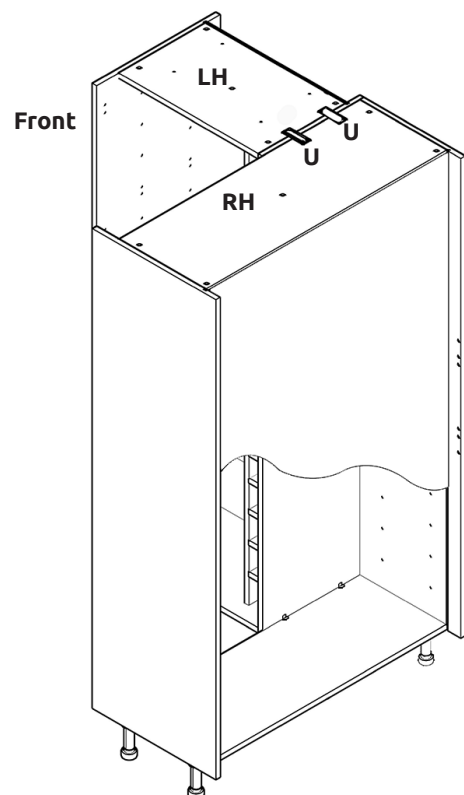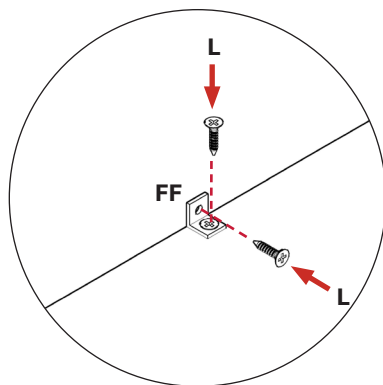



TOWER UNIT

2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide


Step 9.

Use 2 x 15mm screws (**L**) to secure each of the 4 x L brackets (**LGE**) to both carcasses positioned as shown.

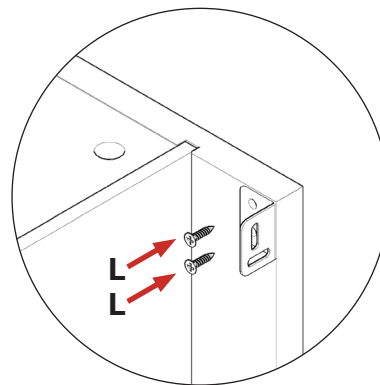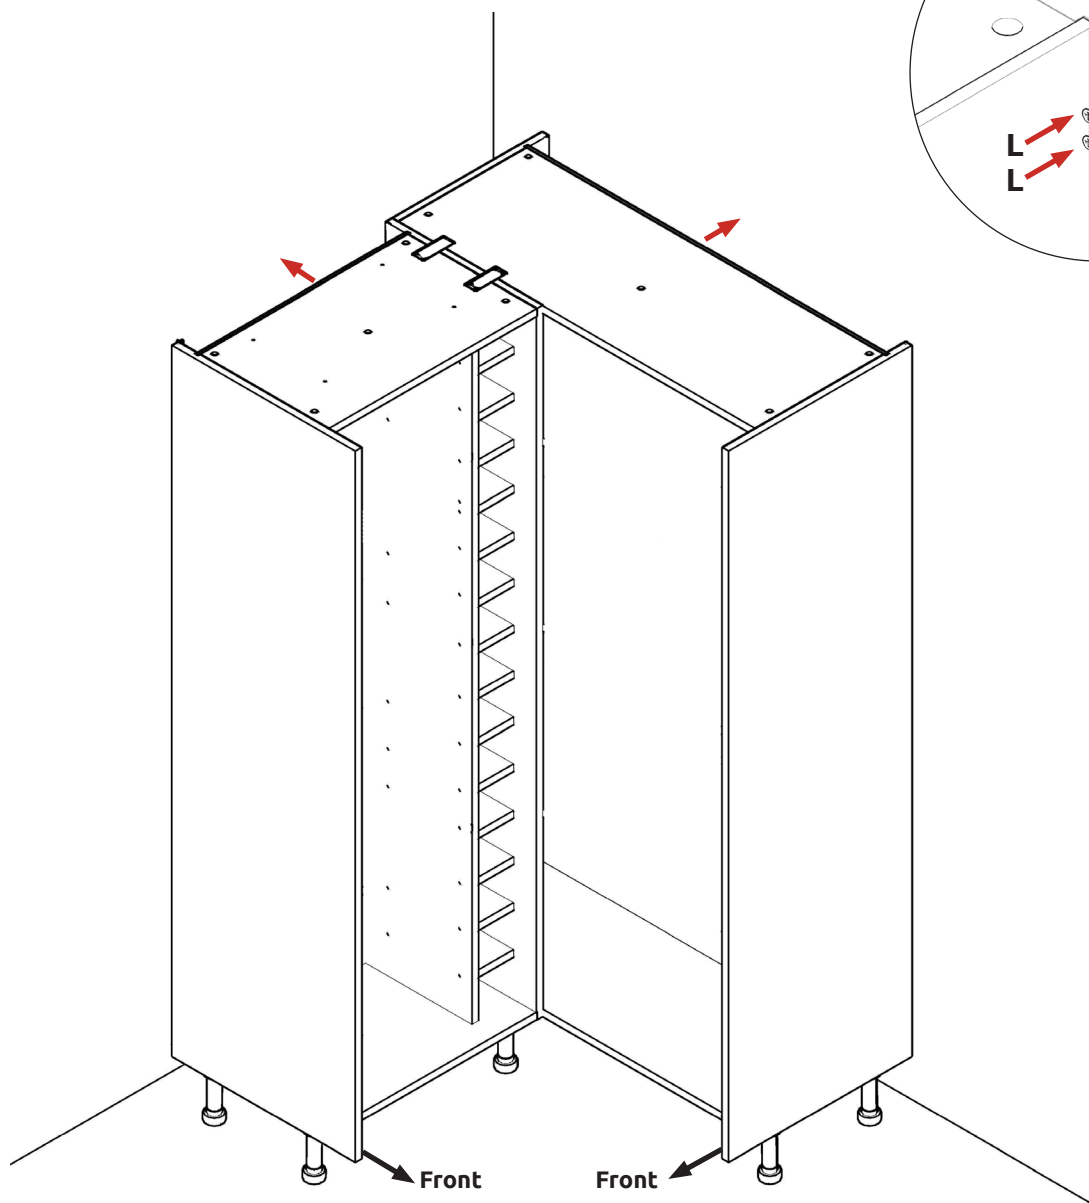


Step 10.

Screw through large L bracket (**LGE**) into the wall as shown.
Screws for fixing to walls are not provided as these vary depending on your wall material and construction.
Ensure appropriate fixings for wall constructions are used.

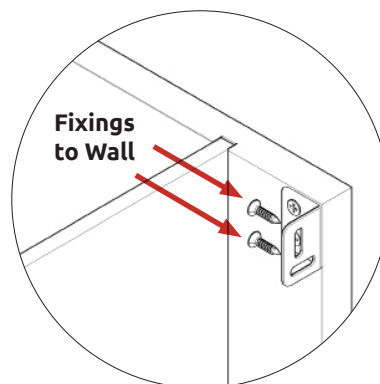




Step 11.

When combined cabinet is secured in position, attach top Panel (C), using 4x fixing plates (U) combined with 4 x 15mm screws (L) per plate, positioned as shown.

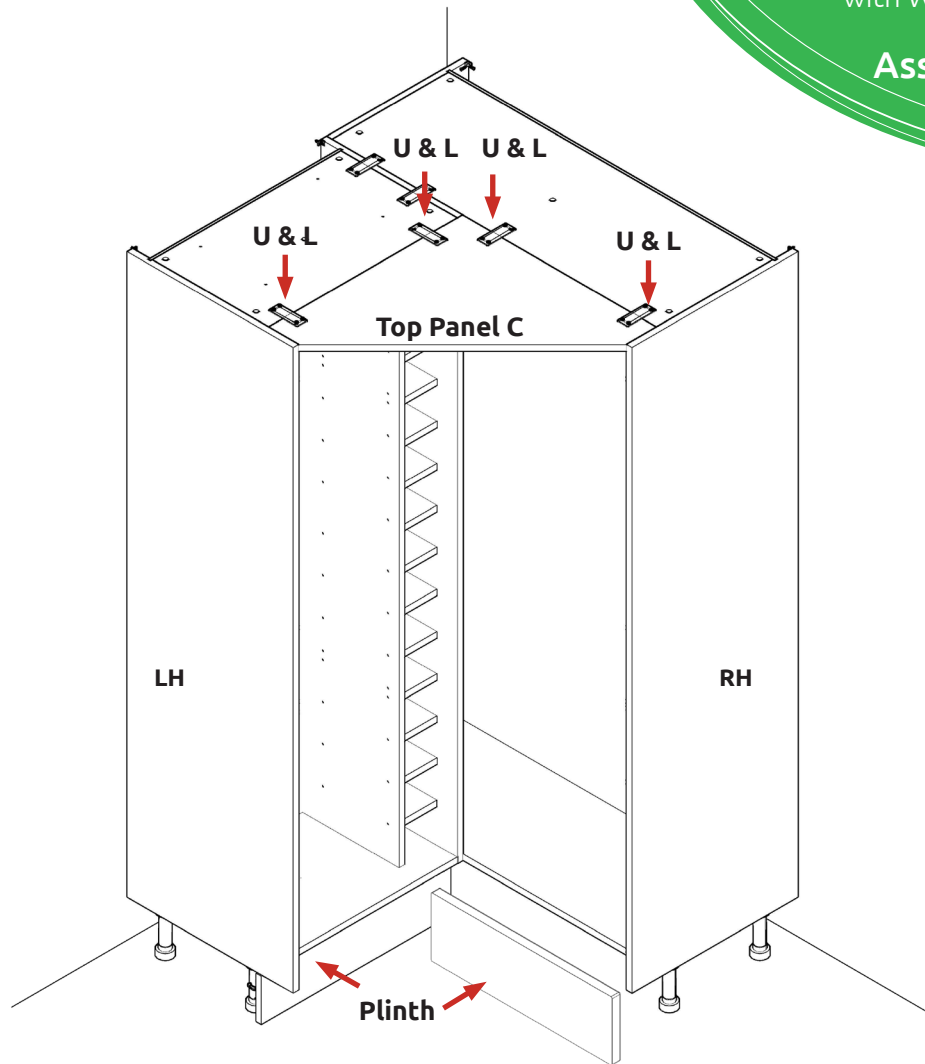

Step 12.

Measure plinth and cut to suit the width of carcase (LH) and again for (RH). Mark clip positions by aligning plinth sections to legs. Use 2 x 15mm screws (L) as shown to fix clip to plinth. Detach the leg clip from the plinth clip. Slide leg clip into plinth clip as shown.

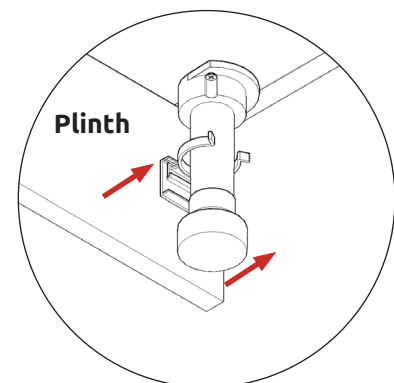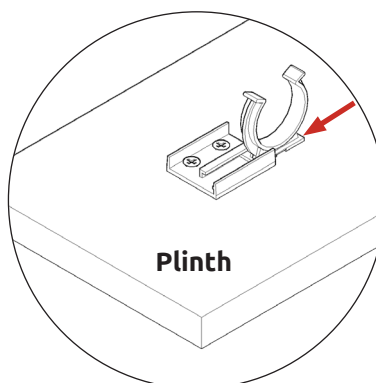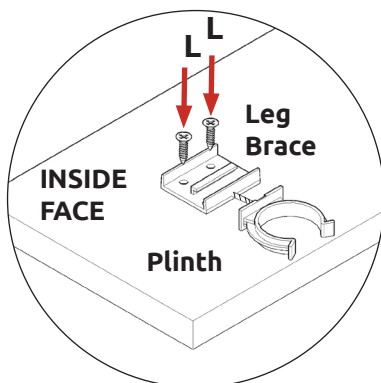

Step 13.

Secure plinth by pushing clip firmly onto legs, as shown.

TOWER UNIT


2070
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide



Step 14.

Attach hinge plates onto end panels (**B**) to suit as shown using 2 x 15mm screws (**L**) included per plate.




Hinge side to be mounted in accordance to customer kitchen plan.

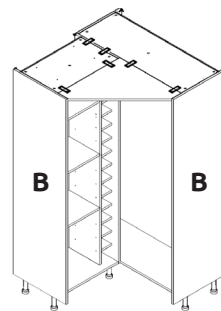

70/30 HINGE POSITION

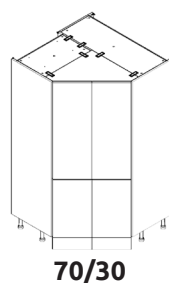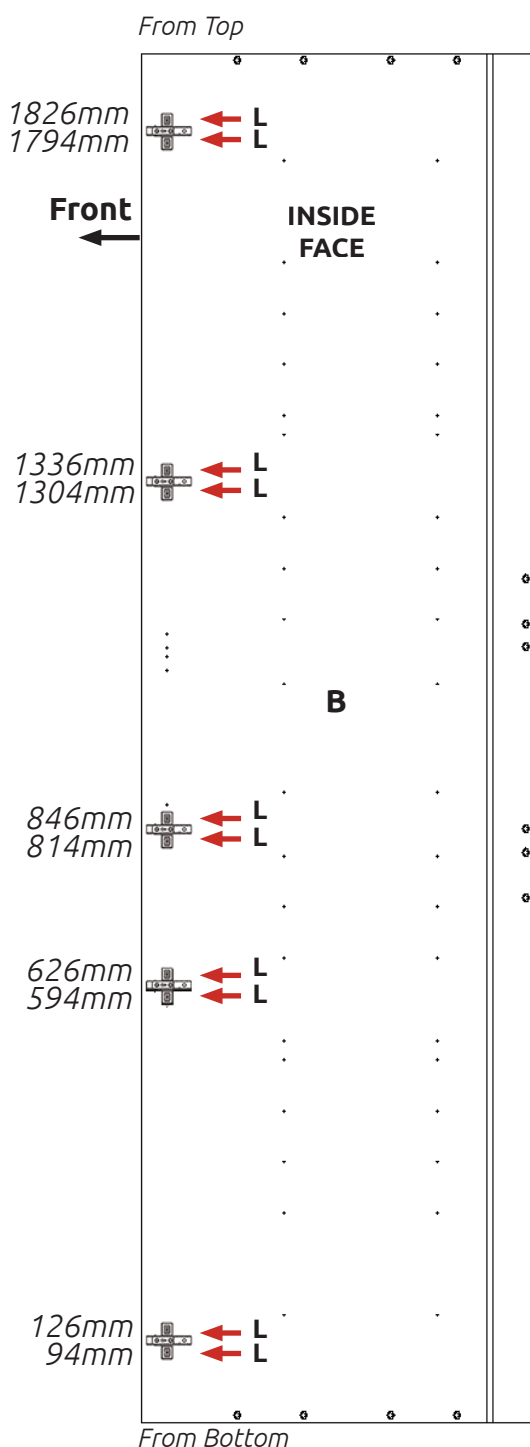

50/50 & 1 Door HINGE POSITION

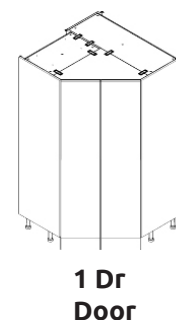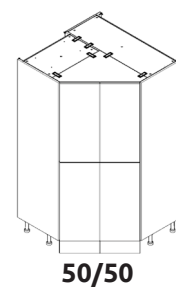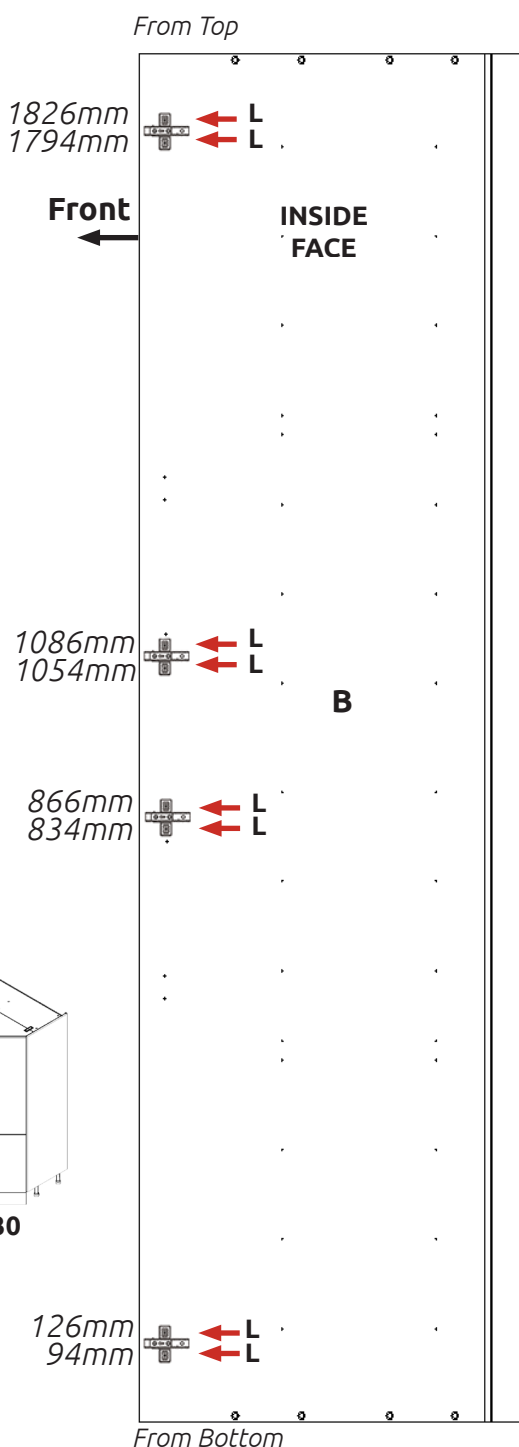

TOWER UNIT

2250


Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide


Step 14.

Attach hinge plates onto end panels (**B**) to suit as shown using 2 x 15mm screws (**L**) included per plate.


Hinge side to be mounted in accordance to customer kitchen plan.

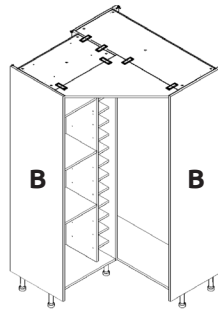

70/30 HINGE POSITION

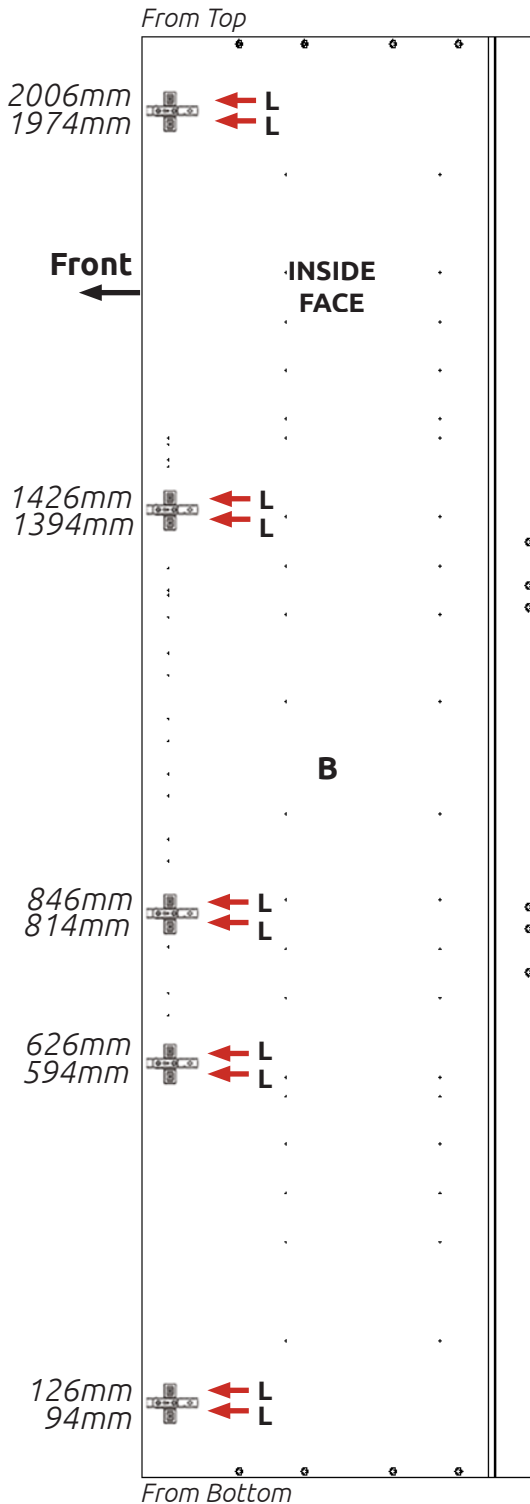

50/50 HINGE POSITION

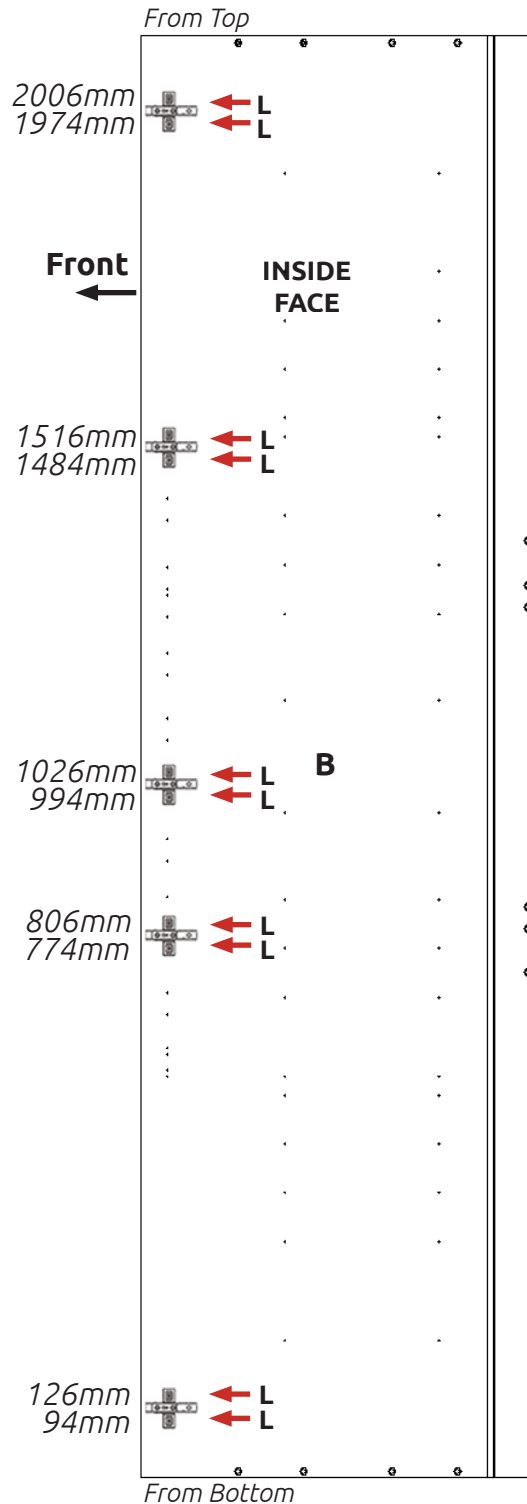

TOWER UNIT




2250
Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide

Step 14.

Attach hinge plates onto end panels **(B)** to suit as shown using 2 x 15mm screws **(L)** included per plate.

Hinge side to be mounted in accordance to customer kitchen plan.

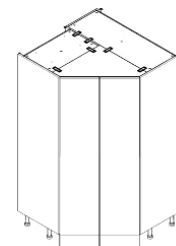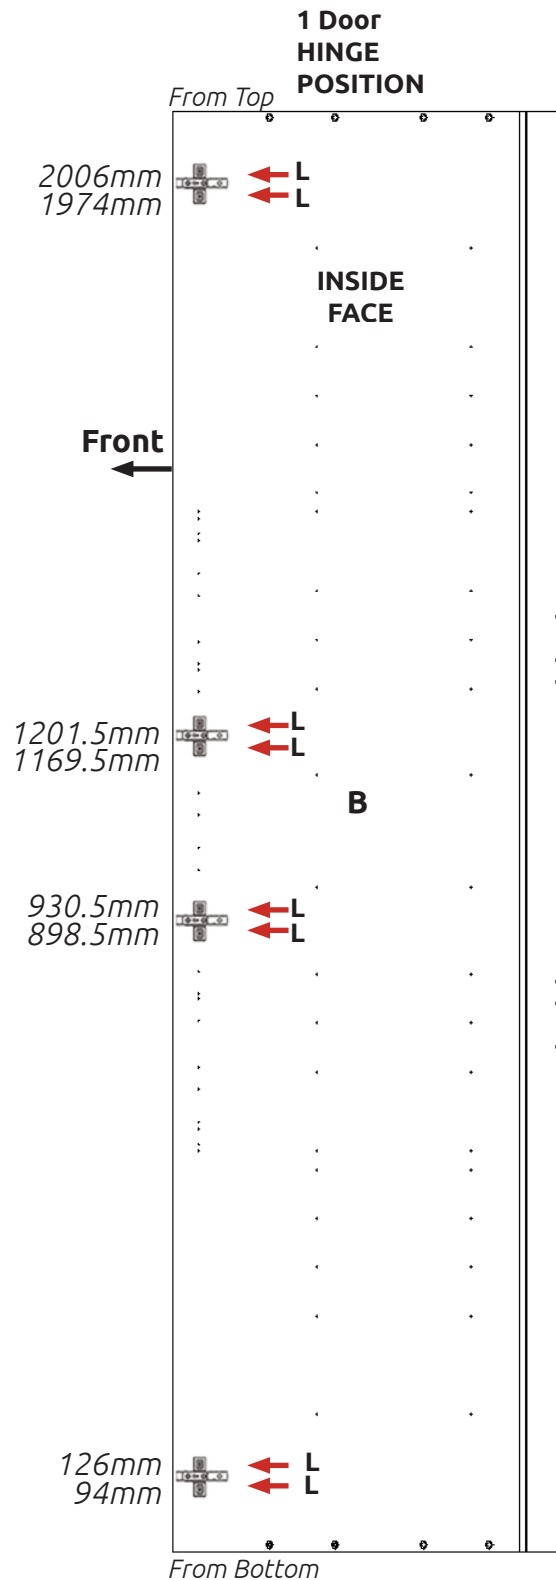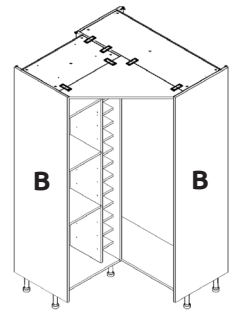

1 Door

See Customer Specific Kitchen Plan For Tower Frontals

2070 & 2250

Diag Corner Larder
with Wine Rack Cabinet

Assembly Guide


Step 15.

Insert hinge where required in holes as shown.


Step 16.

Align doors & frontal plinth to join together using 4 x fixing plates (U) to the back of both frontals. Ensure a 4mm gap is maintained between each frontal once fixed together.

Screw in place using 4 x 15mm screws (L) per fixing plate (U).


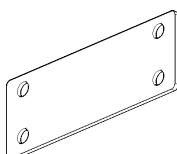


Fixing plates

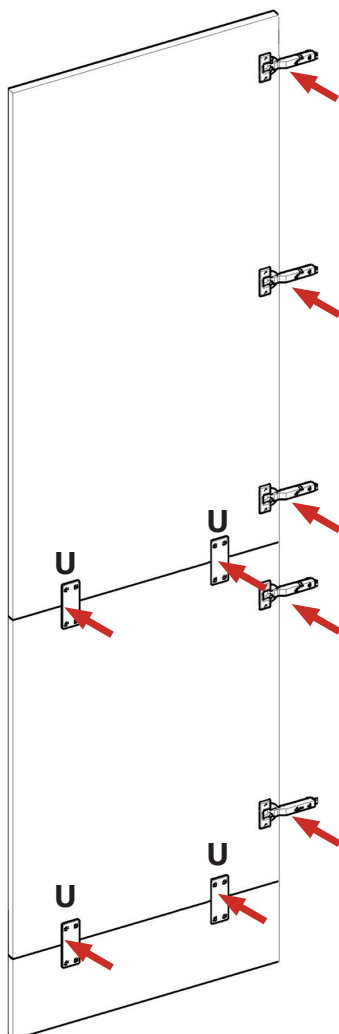

Step 17.


Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

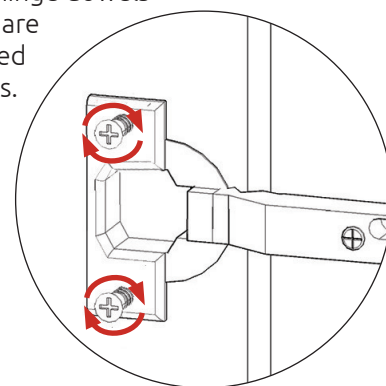

Hinge Plates


Step 18.

Adjust hinge to suit. As shown below.


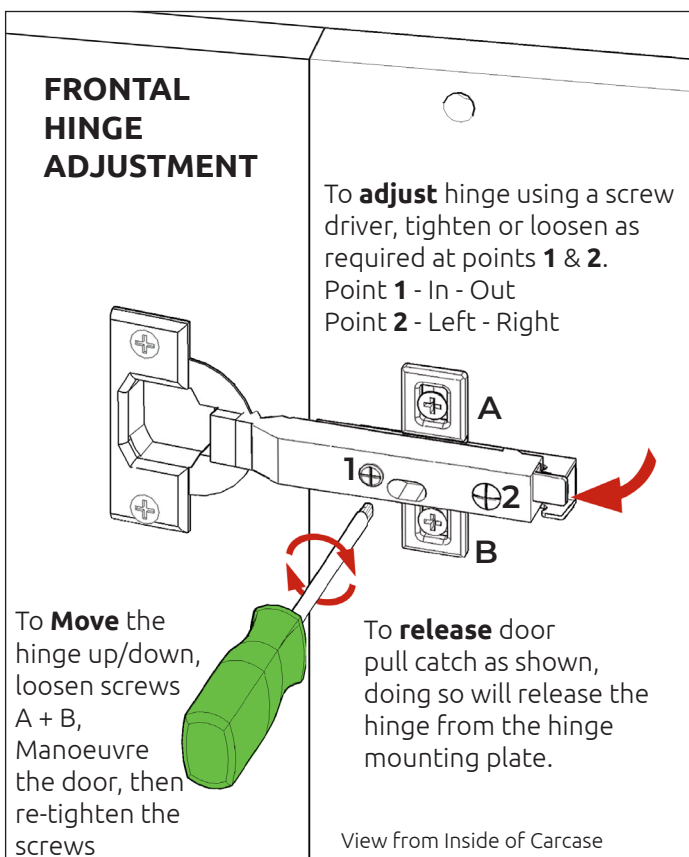


Step 19.

Fit cover caps to hinge. Adjust soft-close to suit.

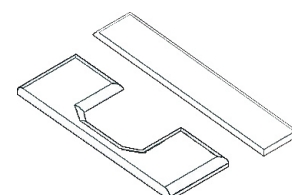

Hinge Cover Caps

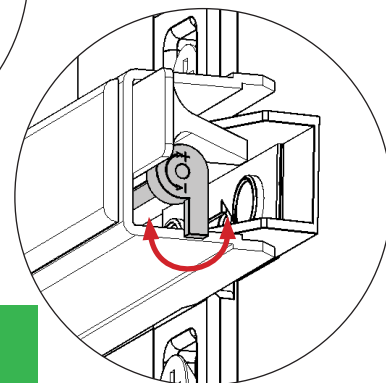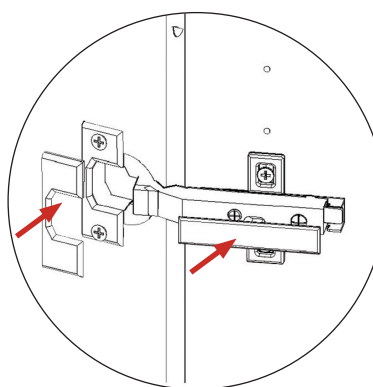

The Top and Bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.


TOWER UNIT

2070 & 2250
Diag Corner Larder
with Wine Rack Cabinet
Assembly Guide

INFINITY


Step 15.

Insert hinge into hinge holes provided.

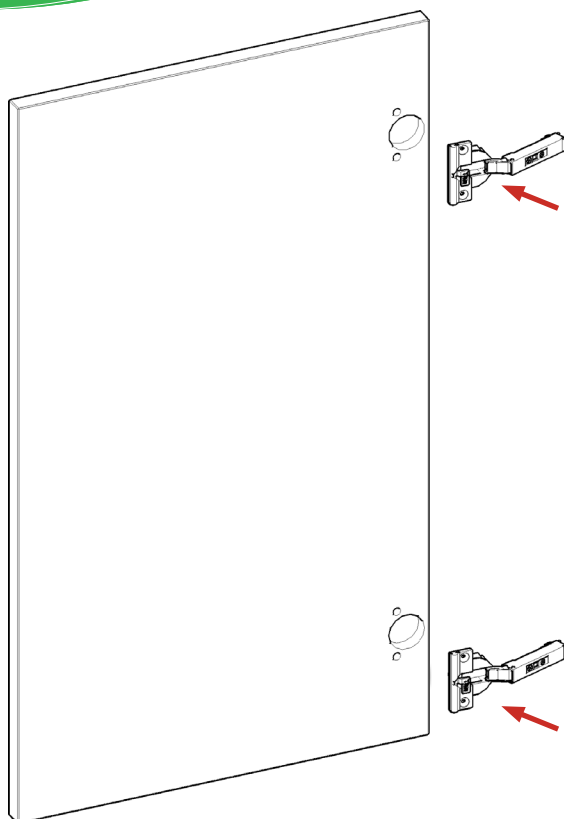


Step 16.

Secure hinges with the 2 x screws.

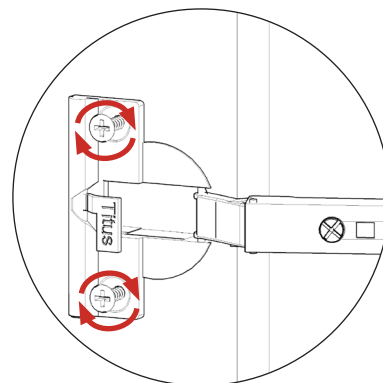

Step 17.



Attach the door to unit, clip hinge onto hinge plate and click to secure.

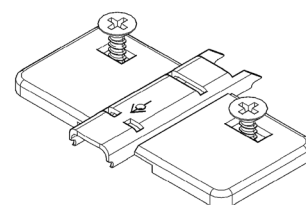

Hinge Plates

Step 18.


Adjust hinge to suit. As shown below.

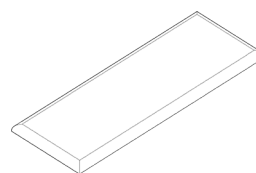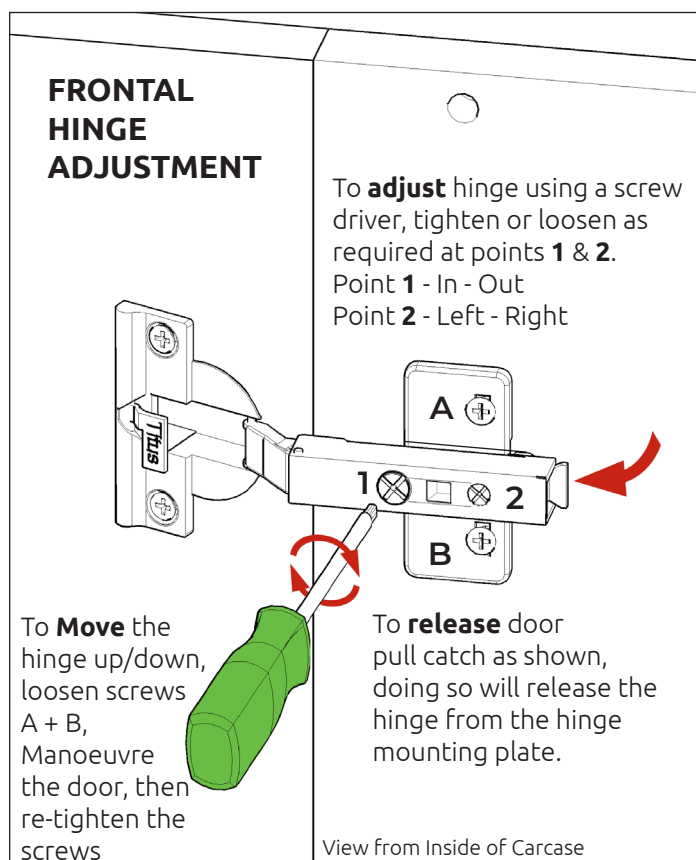

Hinge Cover Caps

Step 19.

Fit cover caps to hinge. Adjust Softclose to suit.

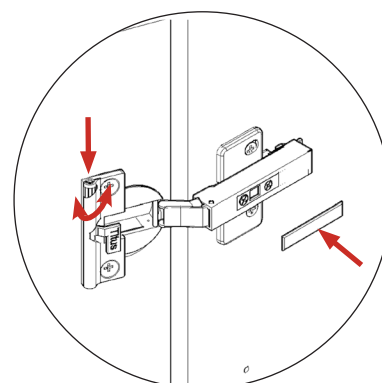

The Top and Bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.