



# TOWER UNIT


## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

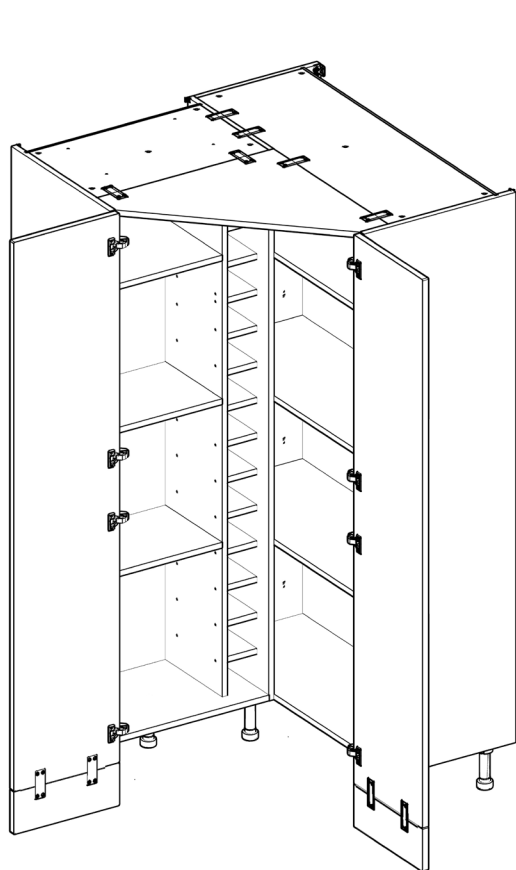


**2070 x 600**

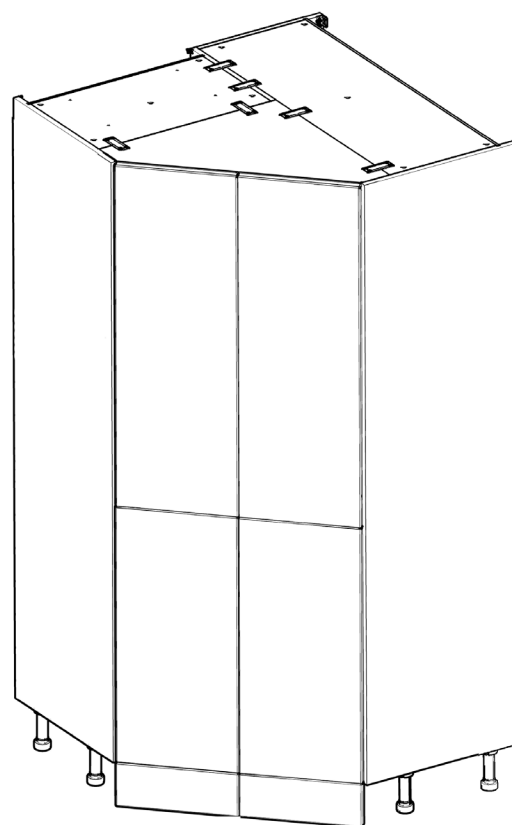


**2250 x 600 Tall**

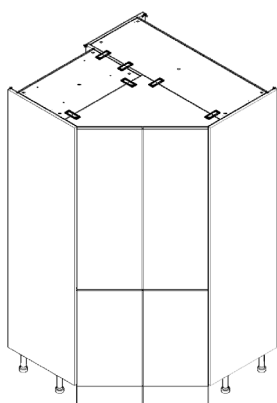

*70/30 Door*

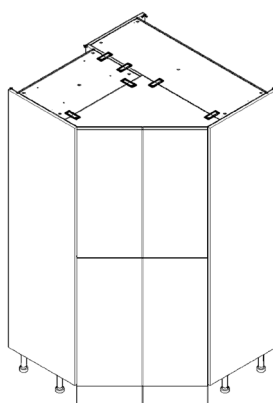


*50/50 Door*

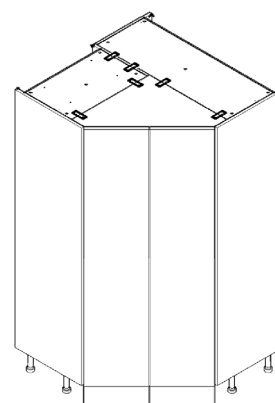

*1 Door*

# TOWER UNIT


## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

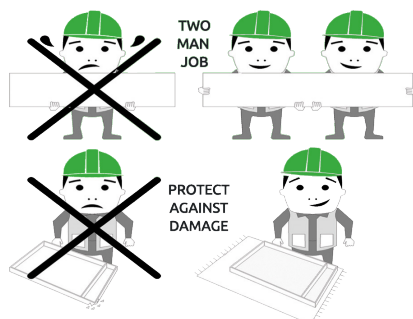


**BEFORE YOU START**

**INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.**

**THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED**

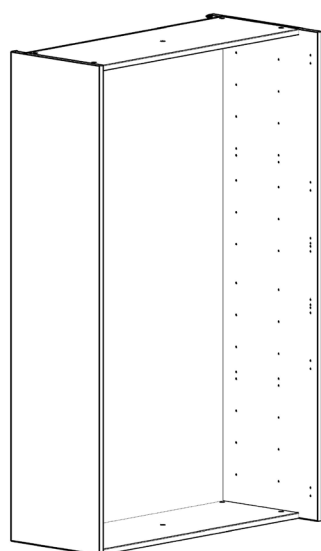


**Unit (RH)**  
Right Hand

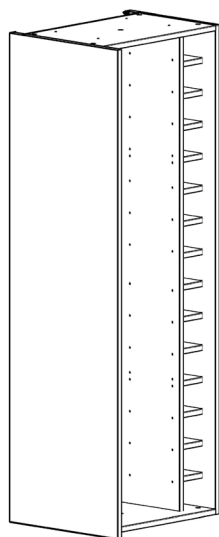

**Unit (LH)**  
Left Hand



**Panel C**  
x1 Top Panel

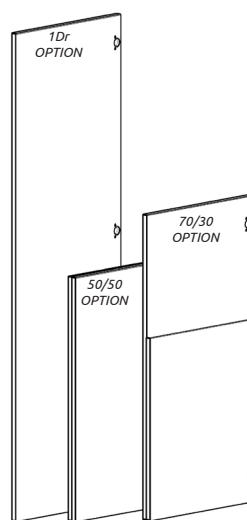

**Frontals**  
50/50 or 1Dr or 70/30  
(Packed Separately)




**Frontal Plinth**  
(To order)




**Unit Plinth**  
(To order)




**Legs**  
x10

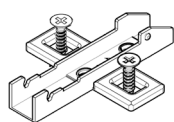


**Hinge Mounting Plate**  
(To order) Inc Screws

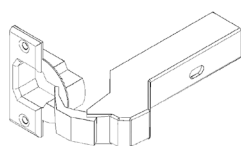

**Hinge**  
(To order) Inc Screws

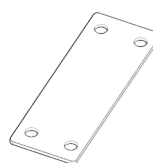

**Fixing Plate (U)**  
x19

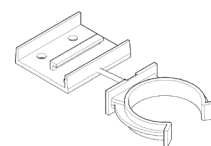


**Plinth Attachment**  
(To order)




**L Bracket LGE**  
x4



**(FF) L Bracket SML**  
x6



**Door Buffer**  
x4



**(K) x6**  
30mm  
Screw



**(L) x142**  
15mm  
Screw



**Metal Shelf Peg**  
x56




**(M) x8**  
Cover Cap  
(Per Colour)

### REQUIRED TOOLS




**NOT to be used with CAM DOWEL & CAM LOCK**



## Step 1.



Lay both units **(LH)** & **(RH)** flat as shown.

Secure 5 x fixing plate **(U)** positioned onto outside face of panel **(B)** of unit **(RH)** equally spaced using 2 x 15mm screws **(L)** as shown.

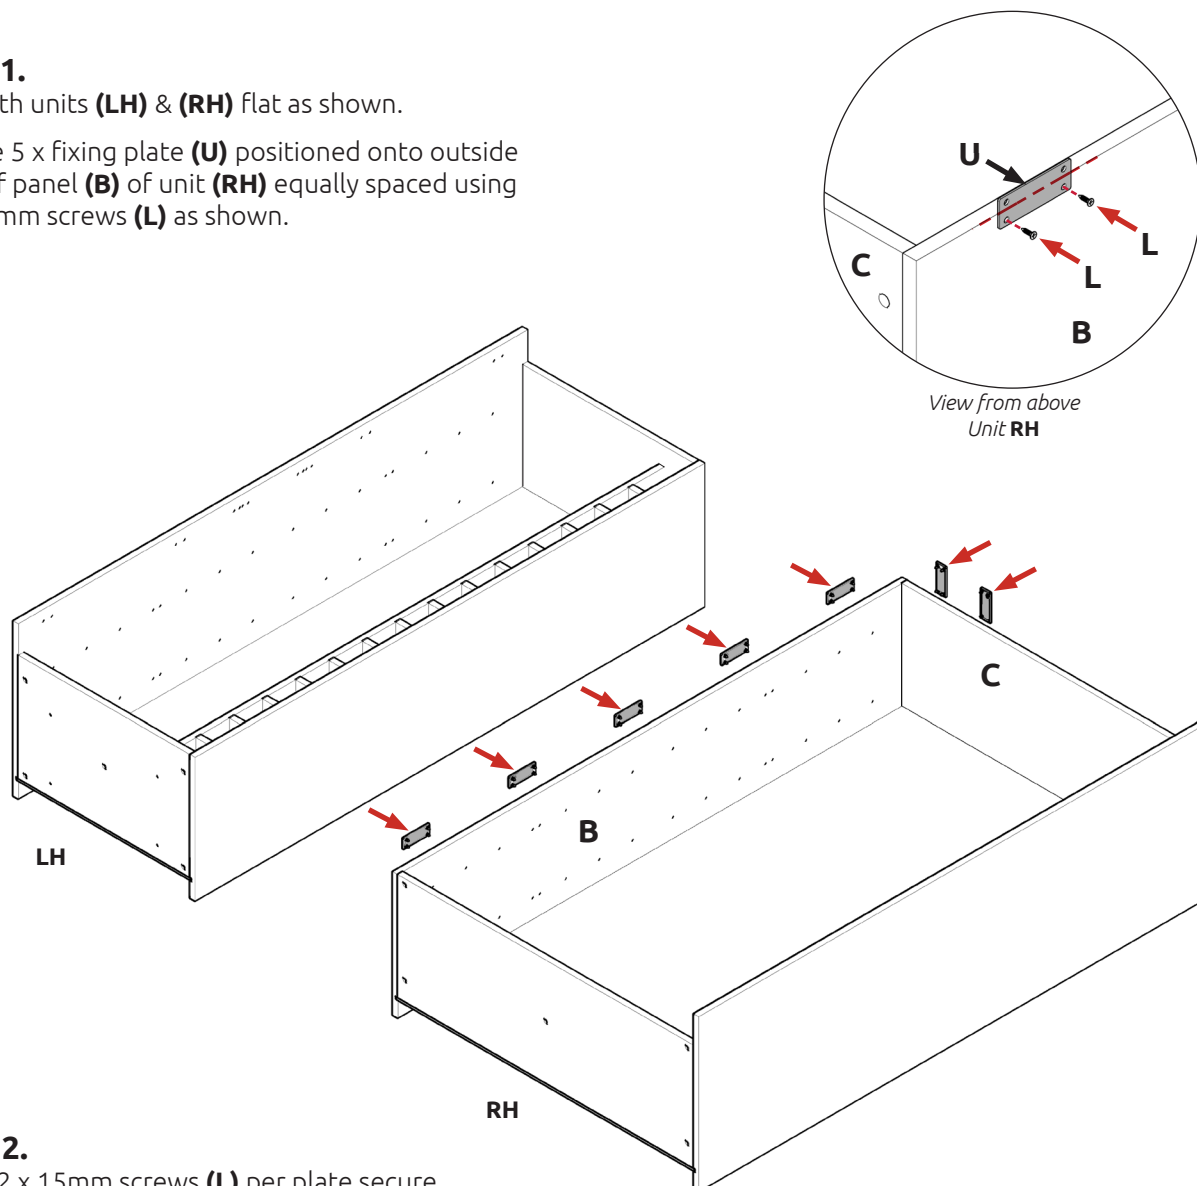

## Step 2.

Using 2 x 15mm screws **(L)** per plate secure 2 x fixing plate **(U)** positioned onto outside face of panel **(C)** of unit **(RH)** using measurements shown.

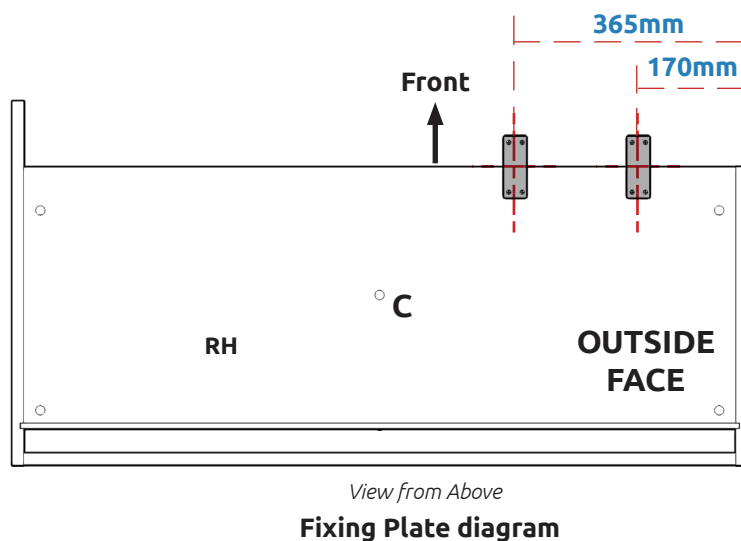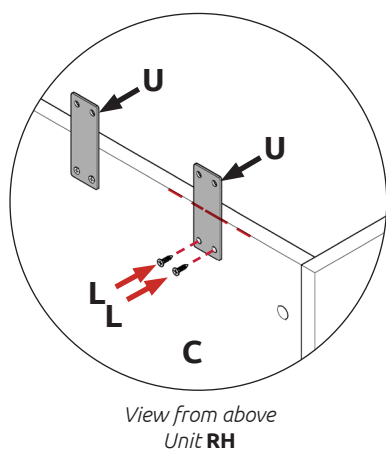

# TOWER UNIT



## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

### Step 3.

Secure leg base into place with 4 x 15mm screws (**L**) per leg as shown.

Ensure legs are rotated to also provide support to the end panels (**B**).

Front legs should have flat edge to the front.

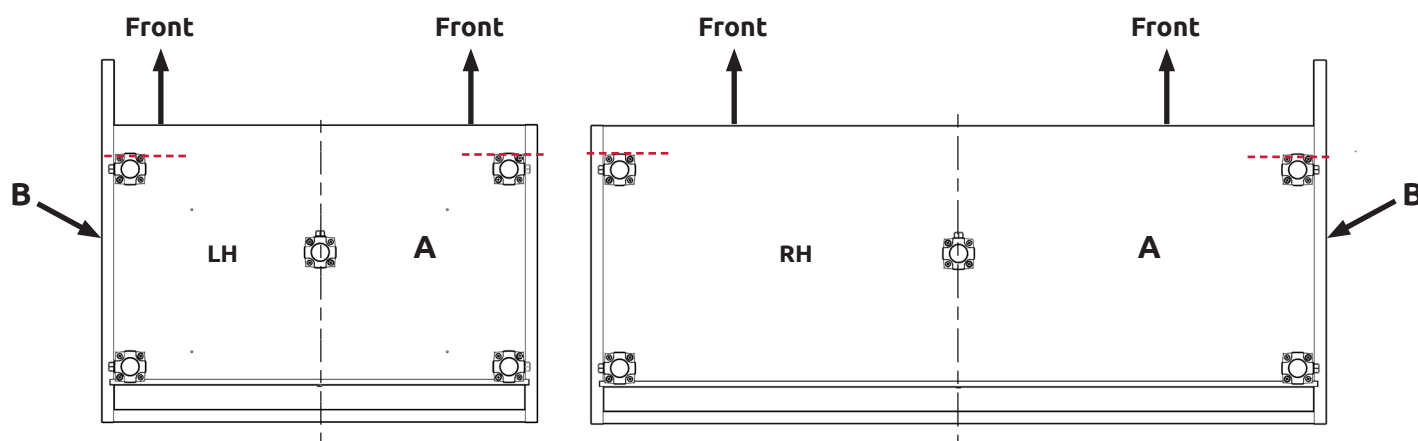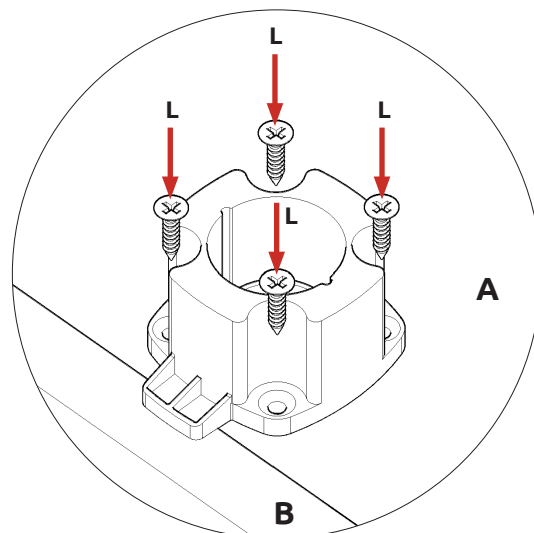


*View From Underside*

### Leg position diagram

### Step 5.

Push leg firmly down into leg base. Adjust legs to 155mm before turning both units upright. Once in situ level accordingly.

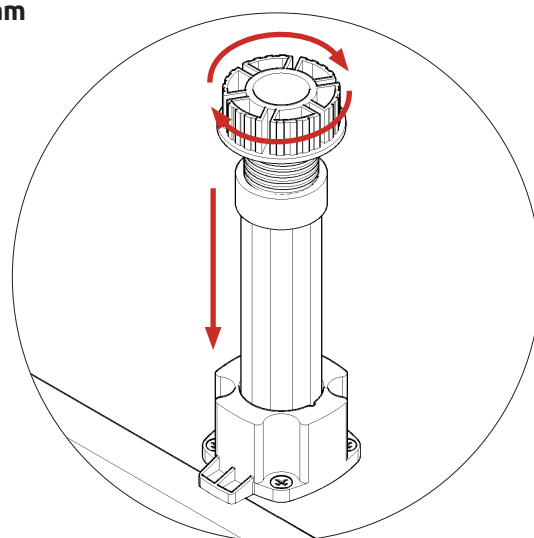


It is **important** to lift unit onto its legs. Do not tilt as depicted in image.

### Step 6.


Position unit **LH** and unit **RH** together as shown.

Ensure units are flush & square.

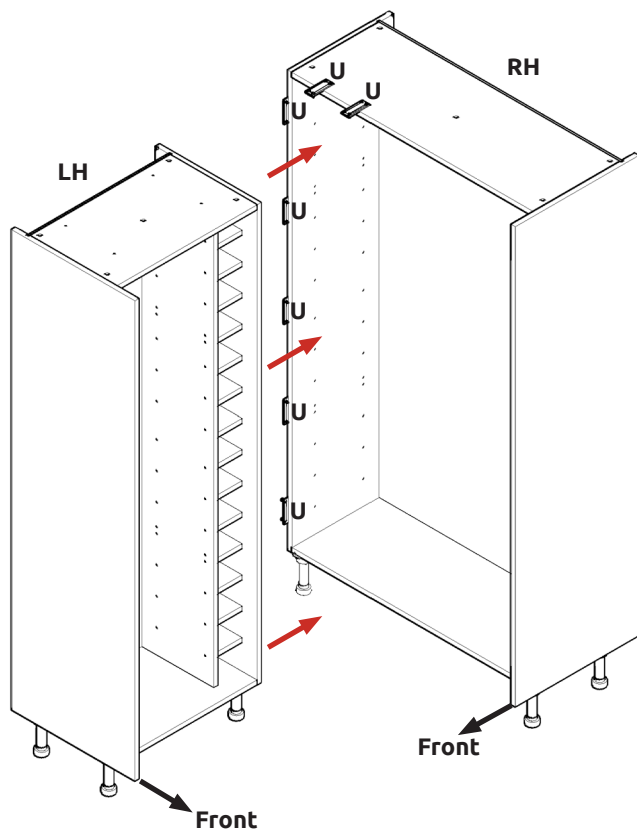



### Step 7.

Screw through fixing plate (**U**) into adjoining unit **LH** using 2 x 15mm screws (**L**) to secure both units together. Repeat per fixing plate (**U**).

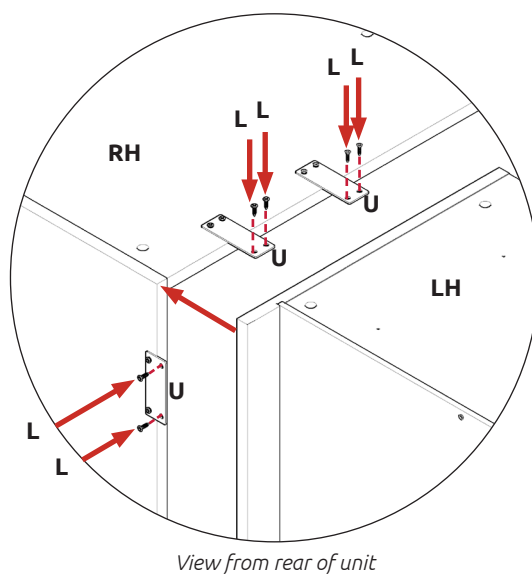

### Step 8.

Align 2 x L bracket SML (**FF**) combined with 2 x 15mm screws (**L**) per bracket as shown. Secure from inside the unit as shown.

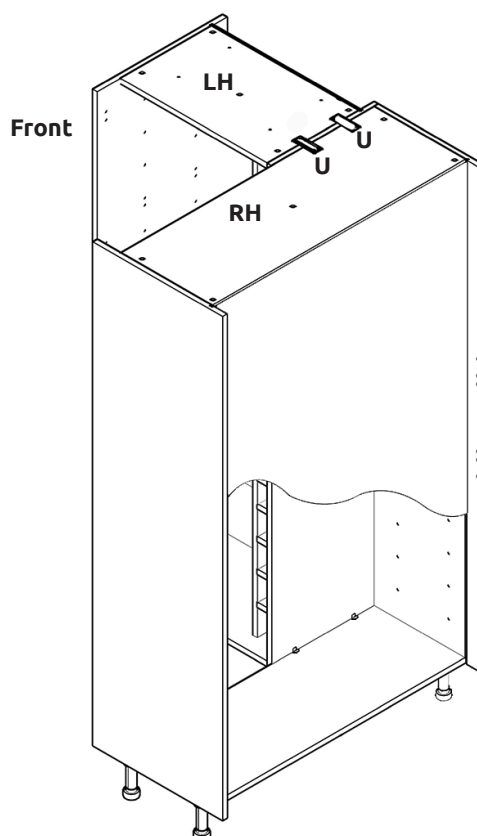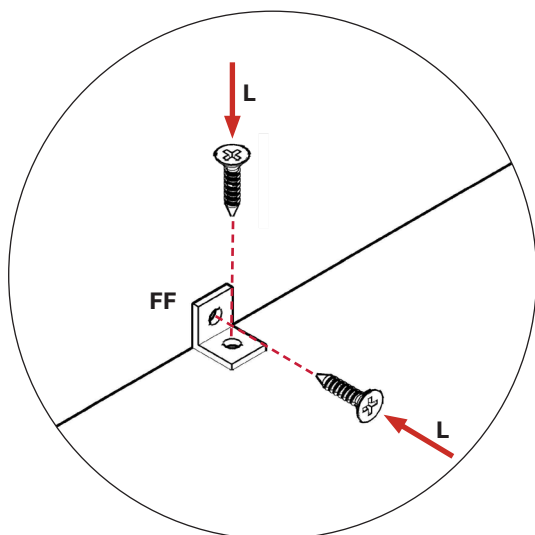


# TOWER UNIT

## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide


### Step 9.

Use 2 x 15mm screws (**L**) to secure each of the 4 x L brackets (**LGE**) to both units positioned as shown.

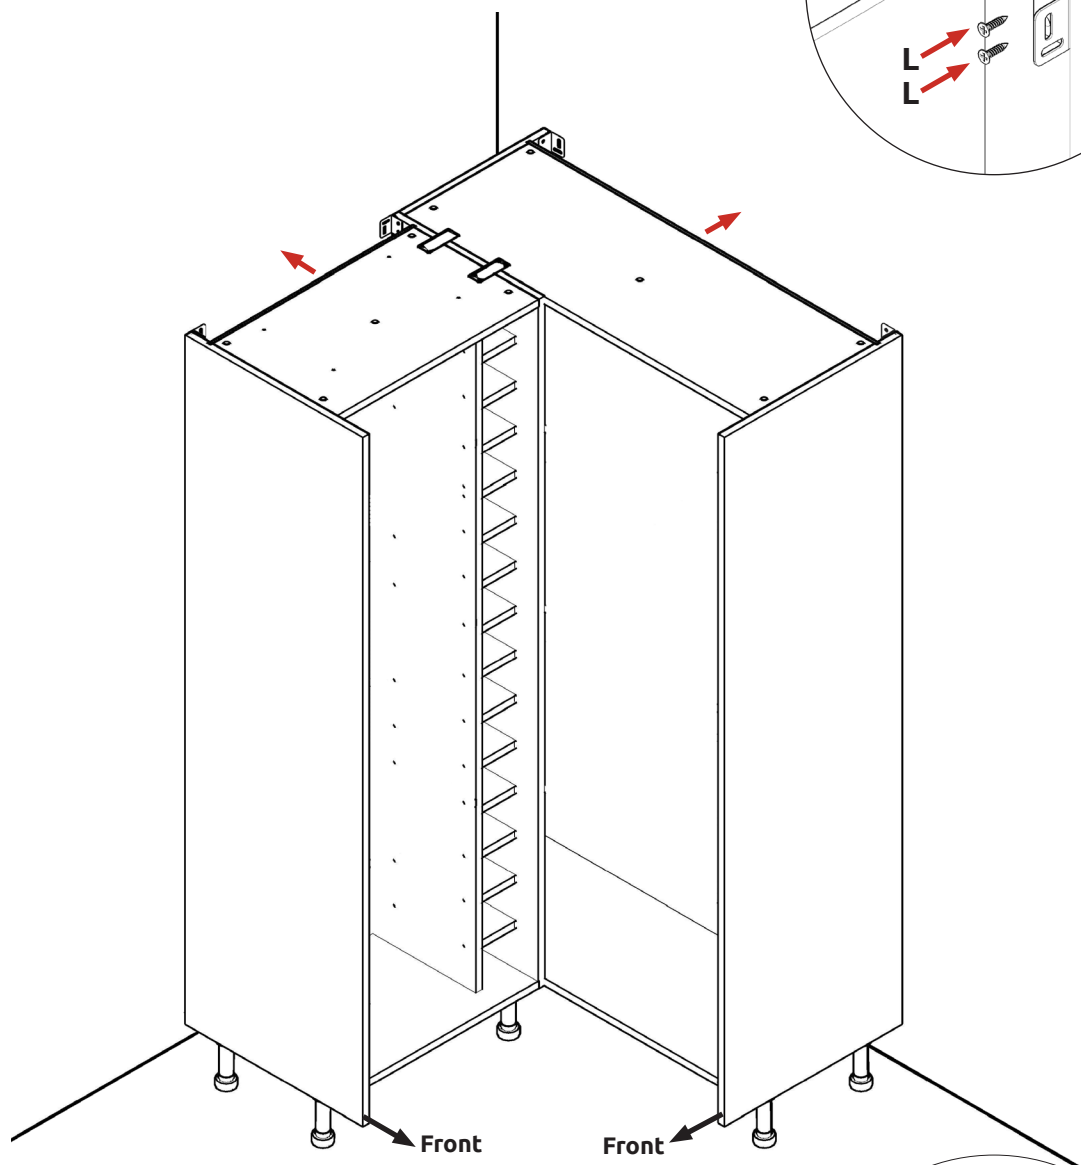


### Step 10.

Screw through large L bracket (**LGE**) into the wall as shown. **Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.**

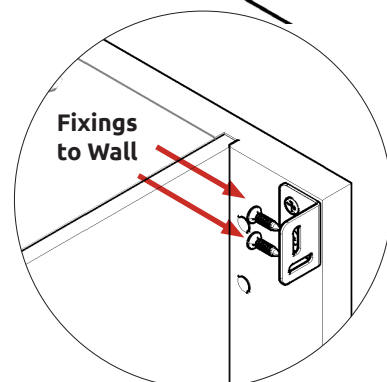




### Step 11.

When combined unit is secured in position, attach top Panel (C), using 4 x fixing plates (U) combined with 4 x 15mm screws (L) per plate, positioned as shown.

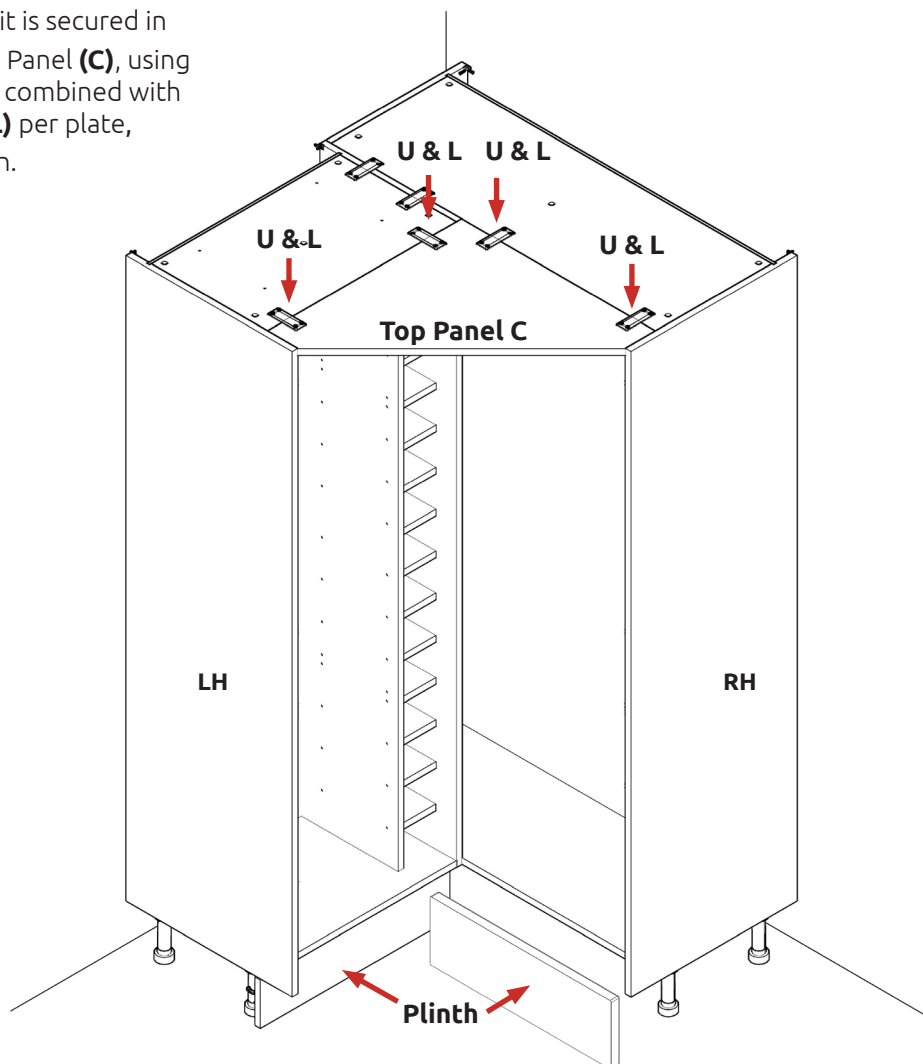

### Step 12.

Measure plinth and cut to suit the width of unit (LH) and again for (RH). Mark clip positions by aligning plinth sections to legs. Use 2 x 15mm screws (L) as shown to fix clip to plinth. Detach the leg clip from the plinth clip. Slide leg clip into plinth clip as shown.

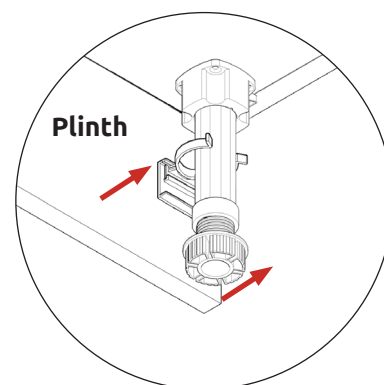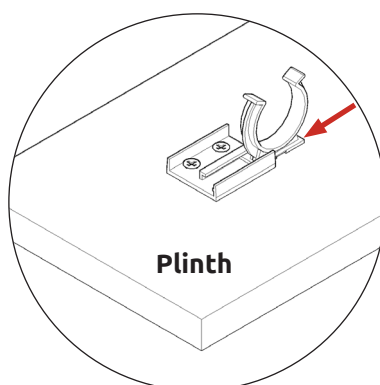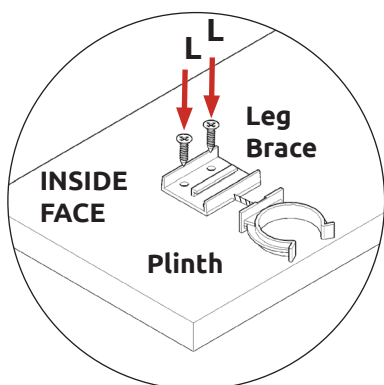

### Step 13.

Secure plinth by pushing clip firmly onto legs, as shown.


# TOWER UNIT

## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

### Step 14.





Attach hinge plates onto end panels (**B**) to suit as shown using 2 screws already positioned within the hinge plate.

**Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.**

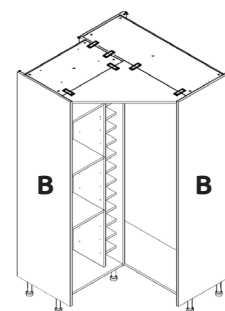

#### 70/30 HINGE POSITION

#### 50/50 & 1 Door HINGE POSITION

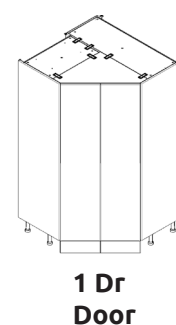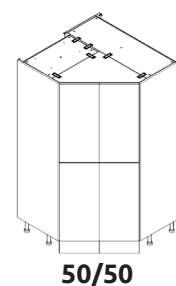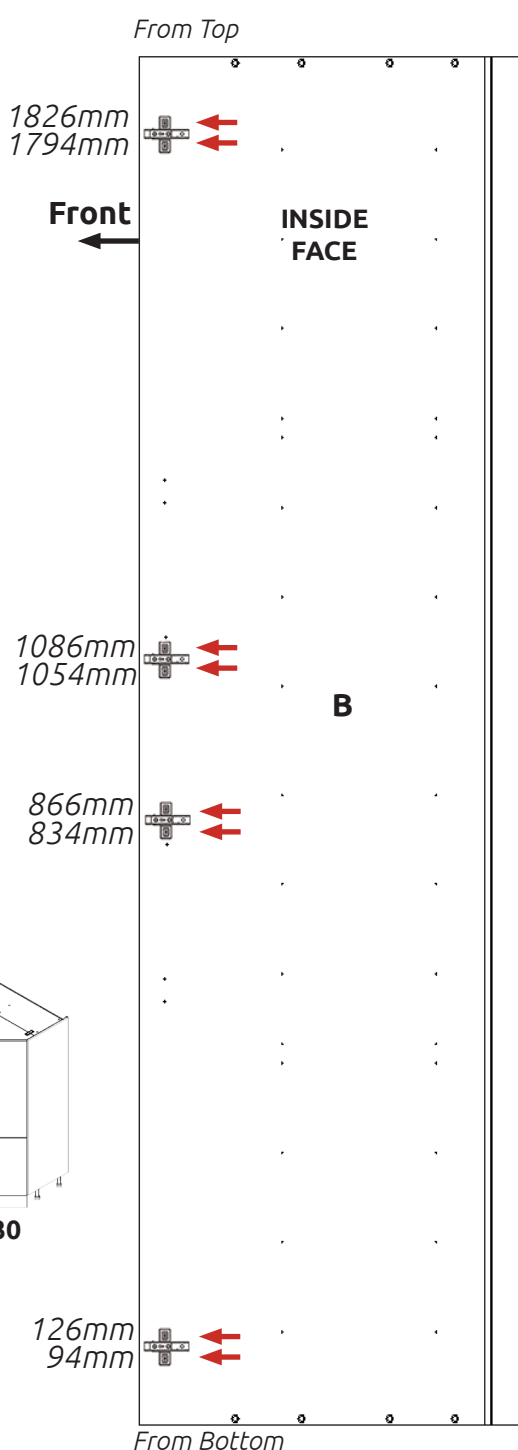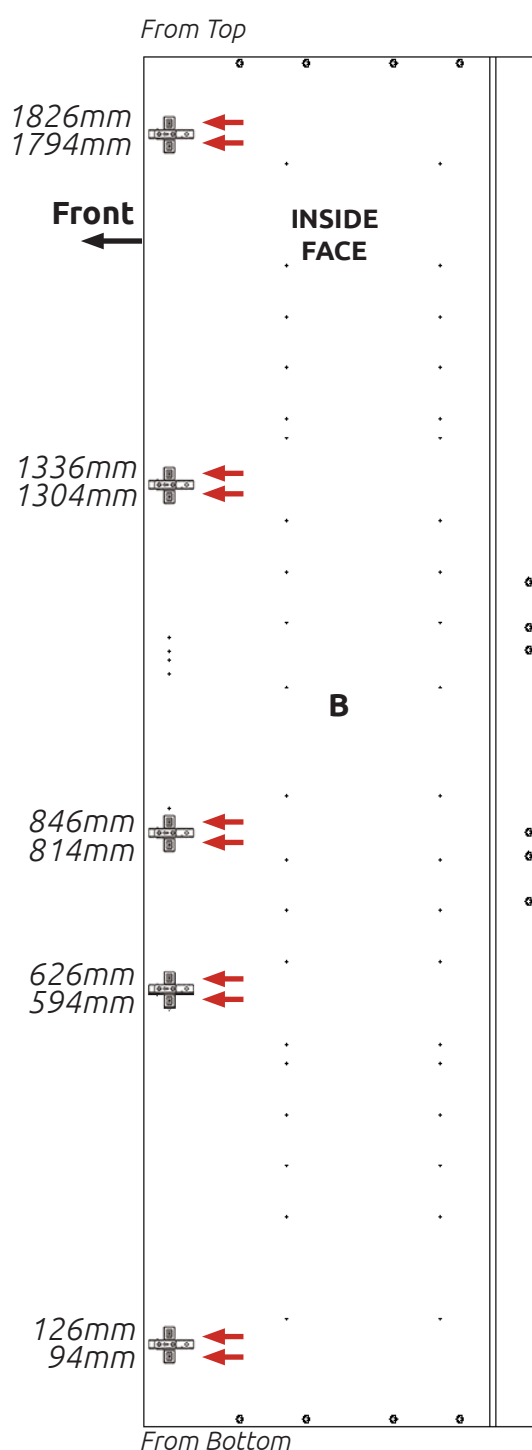




## Step 14.

Attach hinge plates onto end panels (**B**) to suit as shown using 2 screws already positioned within the hinge plate.

**Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.**

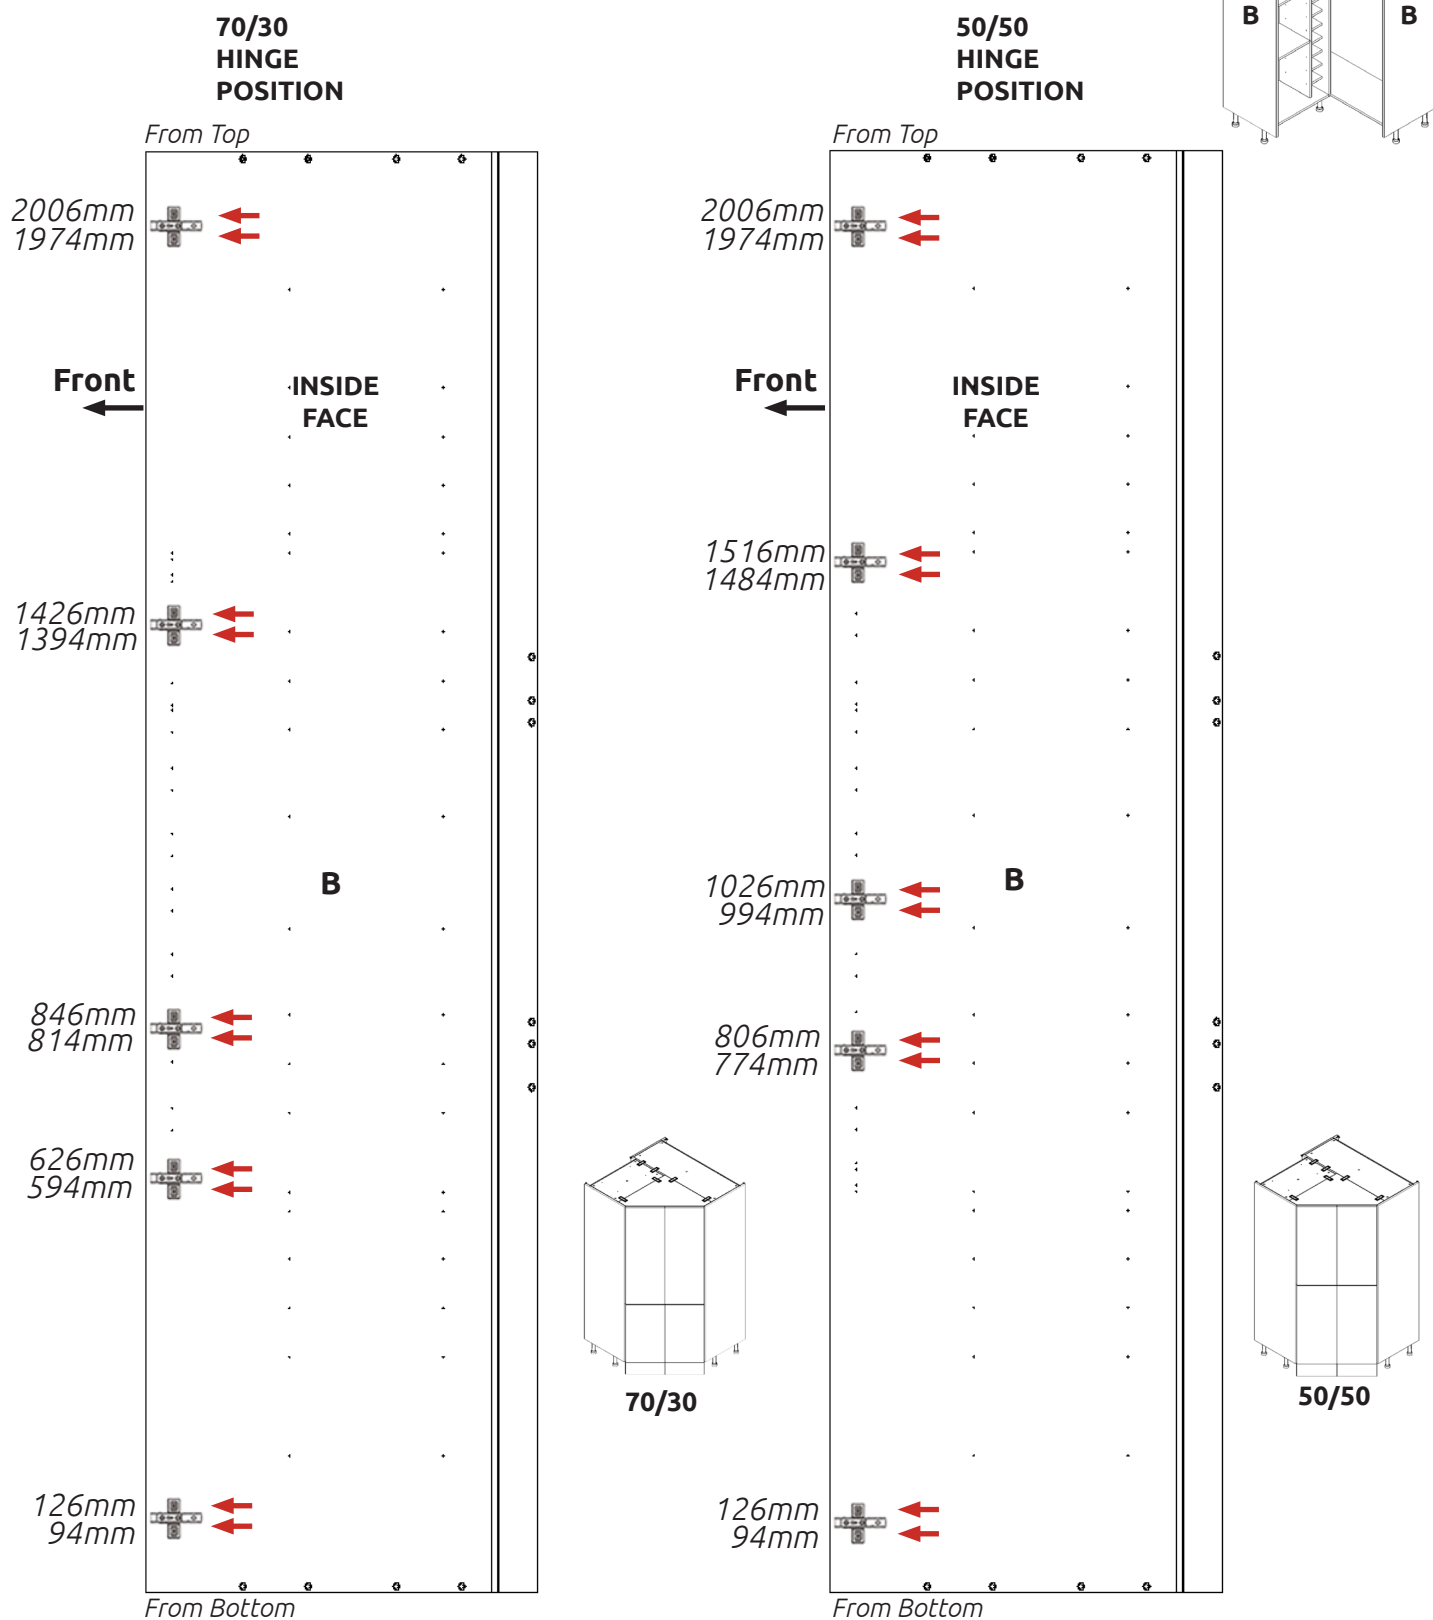




# TOWER UNIT

## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

### Step 14.

Attach hinge plates onto end panels (**B**) to suit as shown using 2 screws already positioned within the hinge plate.

**Hinge side or sides to be mounted in accordance to Customer Specific Kitchen Plan.**

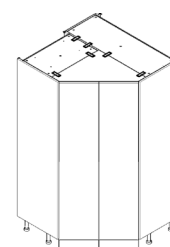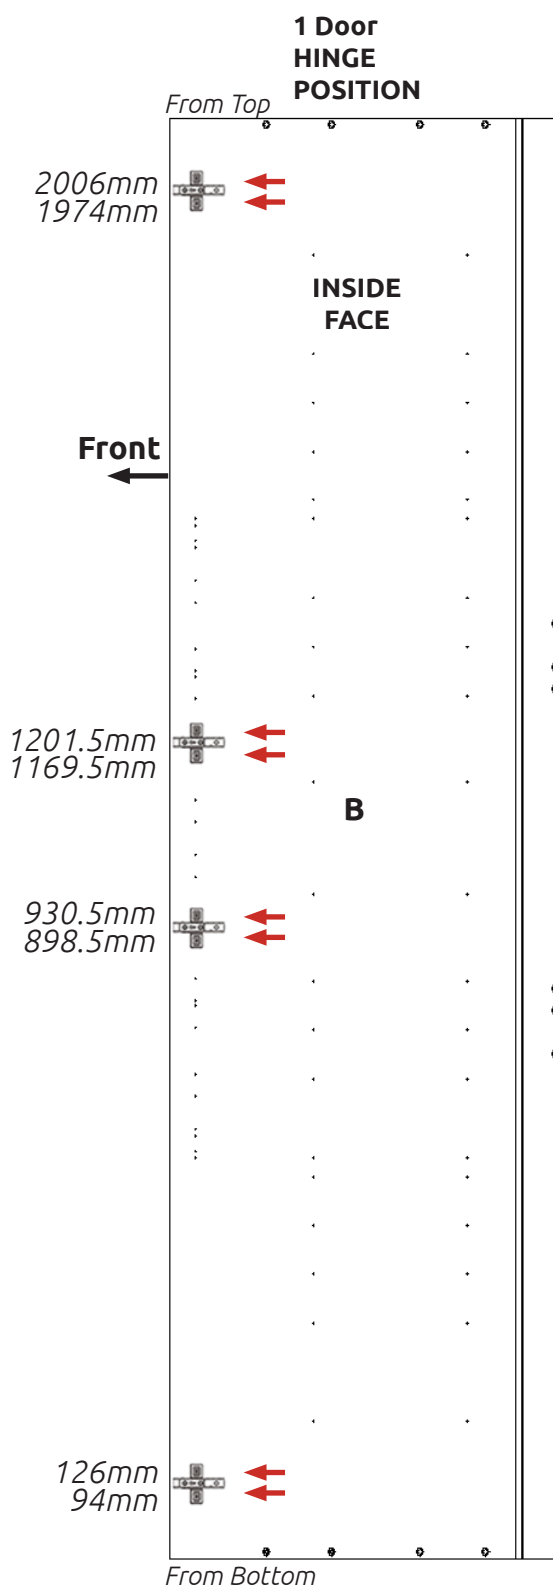
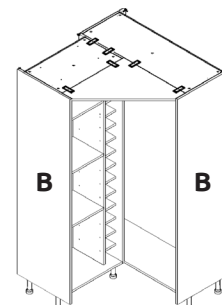


**1 Door**

## Door Frontal Fixing (Where Applicable)

### Infinity +

Doors Supplied in accordance to customer specific kitchen plan

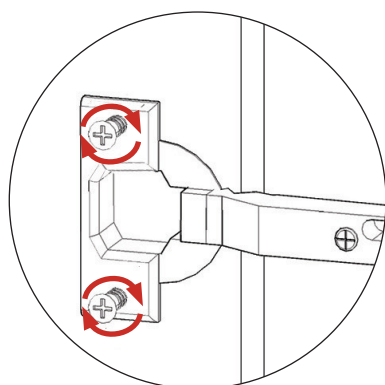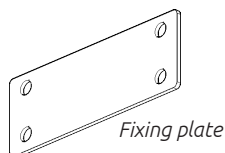

#### Step 1.

Insert hinge into hinge holes provided, in accordance with customers plan.

#### Step 2.



Align doors & frontal plinth to join together using fixing plates (U) to the back of both frontals. Ensure a 4mm gap is maintained between each frontal once fixed together. Screw in place using 4 x 15mm screws (L) per fixing plate (U).

#### Step 3.

Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.





#### Step 4.

Attach the door to unit, clip hinge onto hinge plate and click to secure.

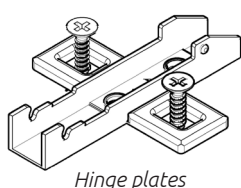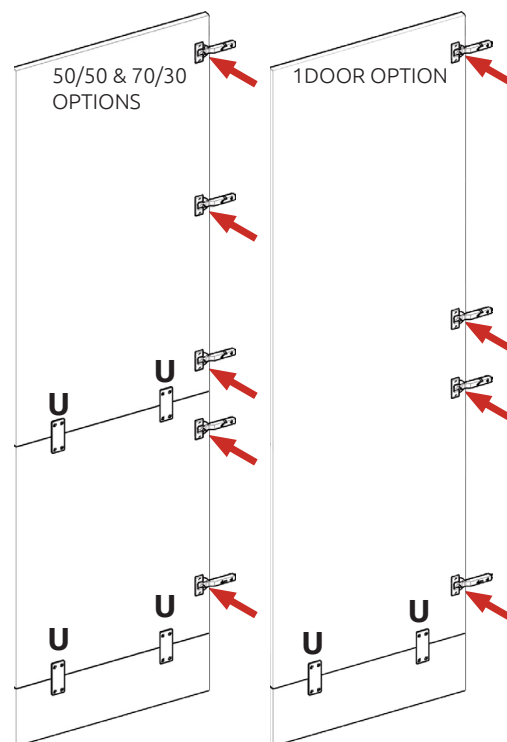


#### Step 5.

Adjust hinge to suit. As shown below.

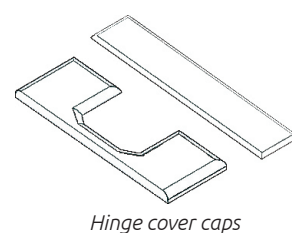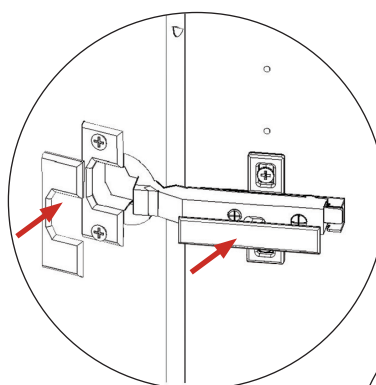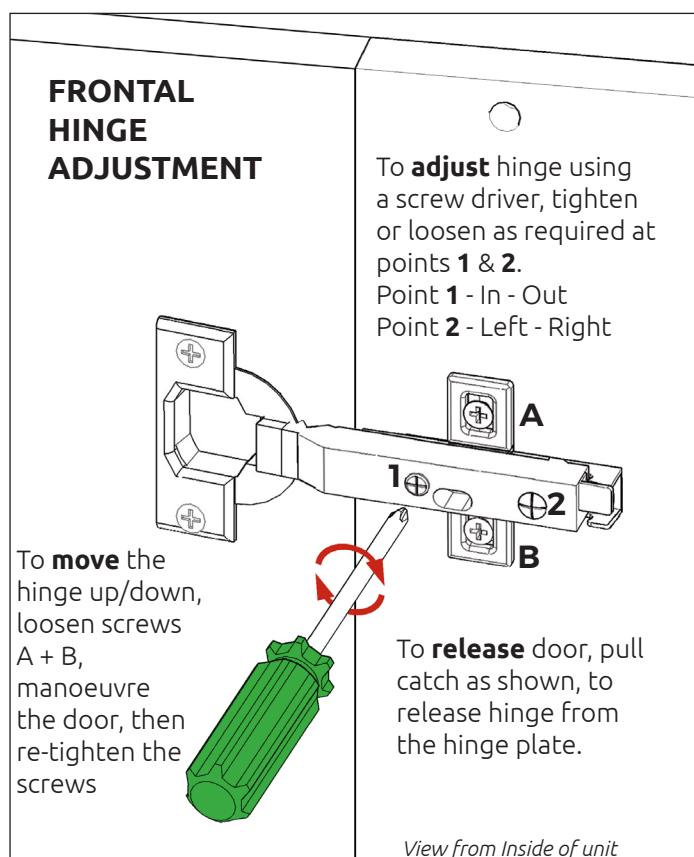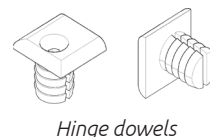

#### Step 6.

Fit cover caps to hinge. Adjust soft close to suit.

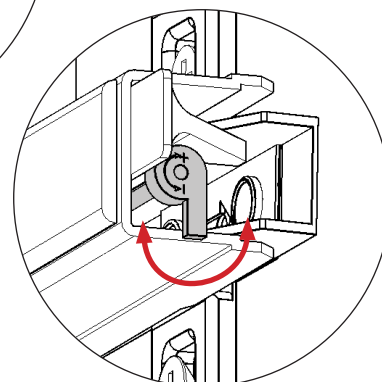

The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.



# TOWER UNIT

## 2070 & 2250 Diag Corner Larder with Wine Rack Assembly Guide

### Door Frontal Fixing (Where Applicable)

#### Infinity

Doors supplied in accordance to customer specific kitchen plan

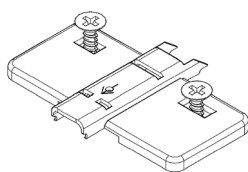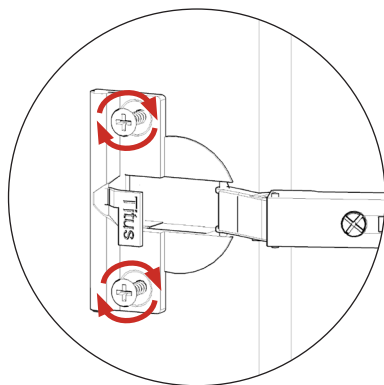

Hinge Plates

#### Step 1.

Insert hinge into hinge holes provided, in accordance with customers plan.

#### Step 2.


Align doors & frontal plinth to join together using fixing plates (U) to the back of both frontals. Ensure a 4mm gap is maintained between each frontal once fixed together. Screw in place using 4 x 15mm screws (L) per fixing plate (U).

#### Step 3.



Secure hinges by tightening 2 x screws with hinge dowels attached. These are already positioned within the hinges.

#### Step 4.

Attach the door to unit, clip hinge onto hinge plate and click to secure.

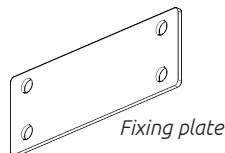



Fixing plate

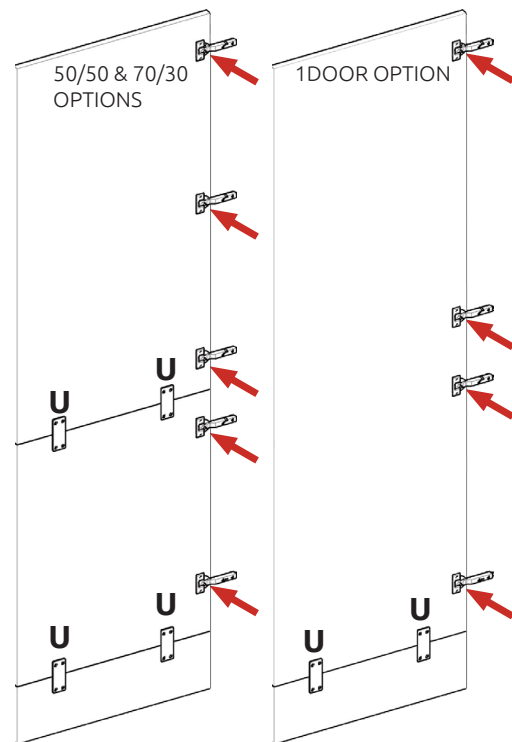

Hinge dowels


#### Step 4.

Adjust hinge to suit. As shown below.

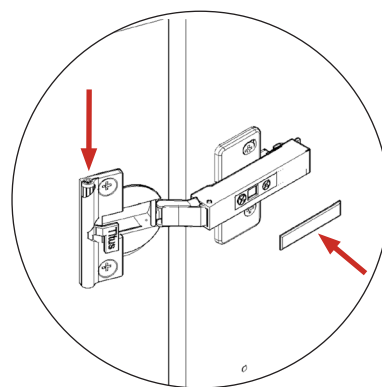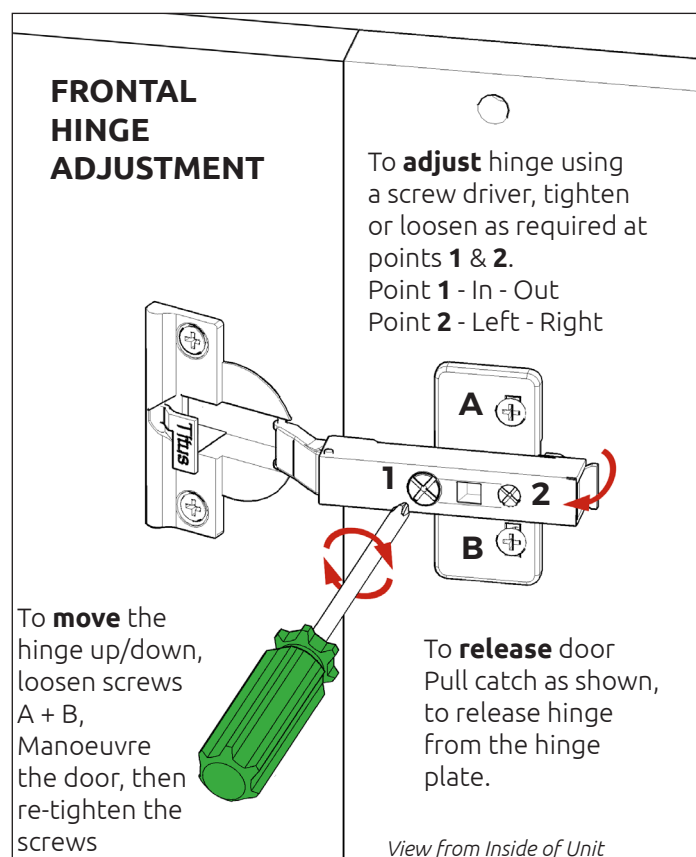

#### Step 5.

Fit cover caps to hinge. Adjust soft close to suit.

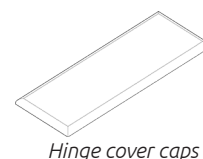

Hinge cover caps

The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.