



## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

FI.PK.BED.111.010 - INFINITY PLUS

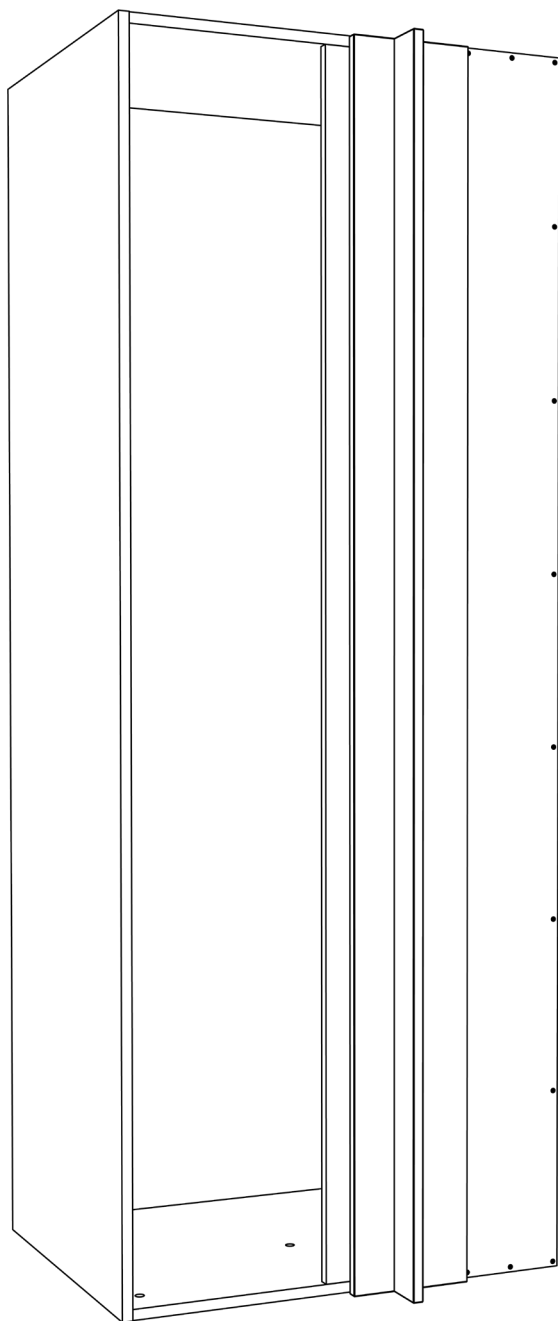

**Adjustable Corner Robe**

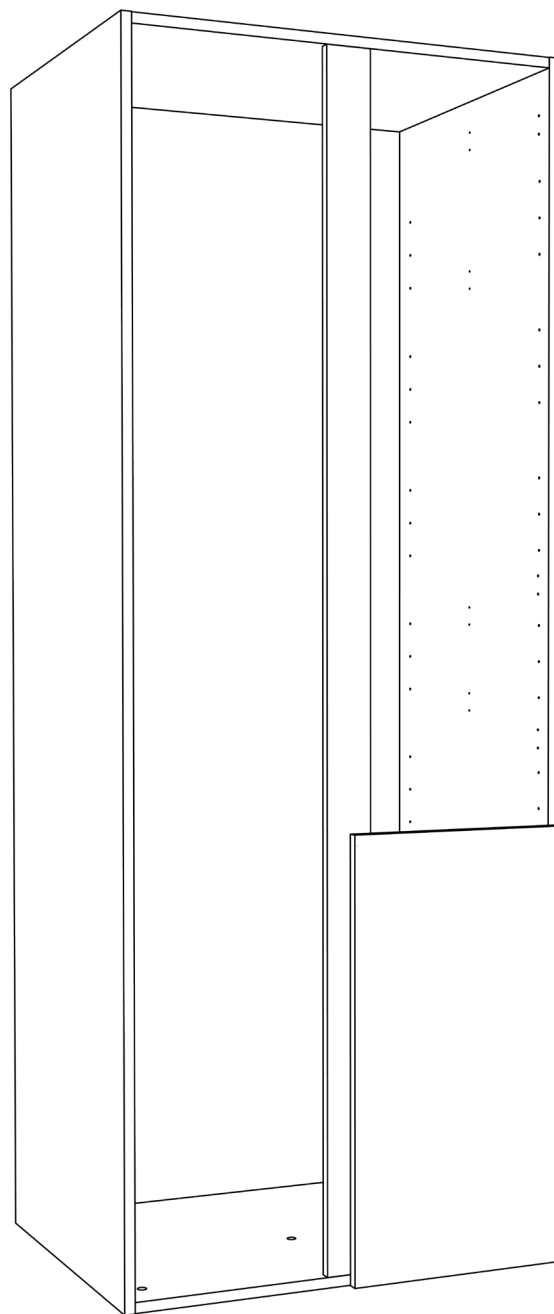

**Stable Corner Robe**

**This guide is for use with 394 and 590 depth adjustable and stable corner robes.  
For illustrative purposes the 590 robe is shown throughout.**


## 800-1000, Adjustable / Stable Corner Robe Assembly Guide



### BEFORE YOU START

INSTALLATION SHOULD BE PERFORMED BY A COMPETENT PERSON ONLY.


THIS PRODUCT COULD BE DANGEROUS IF INCORRECTLY INSTALLED

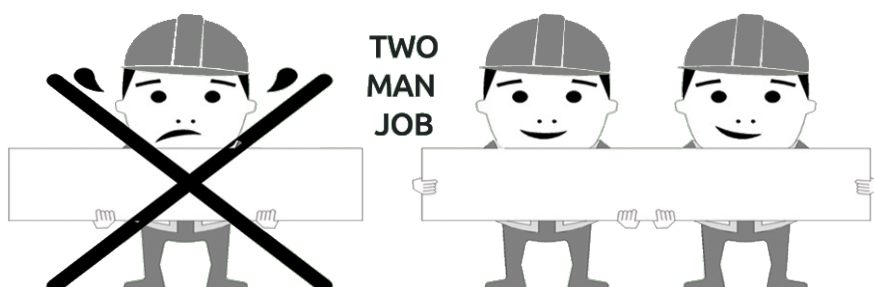

NOT to be used with  
CAM DOWEL &  
CAM LOCK




8mm  
Hex Key

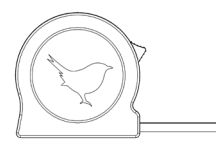



## CONTENTS

4	Robe panels
5	Components
6	Muntin Post & Packer Fitting
7	Leg Attachment
8	Hinge Plate Locations
9	Secure Robe To Wall & Adjacent Units
10-13	Internal Layout Options
14	Hanging Rail Locations
15	Adjustable Corner Post Construction
16	Adjustable Corner Post Installation
17	Stable Corner Blanking Panel Installation
18-19	Hinge Adjustment
20	Loose Shelf Fitting

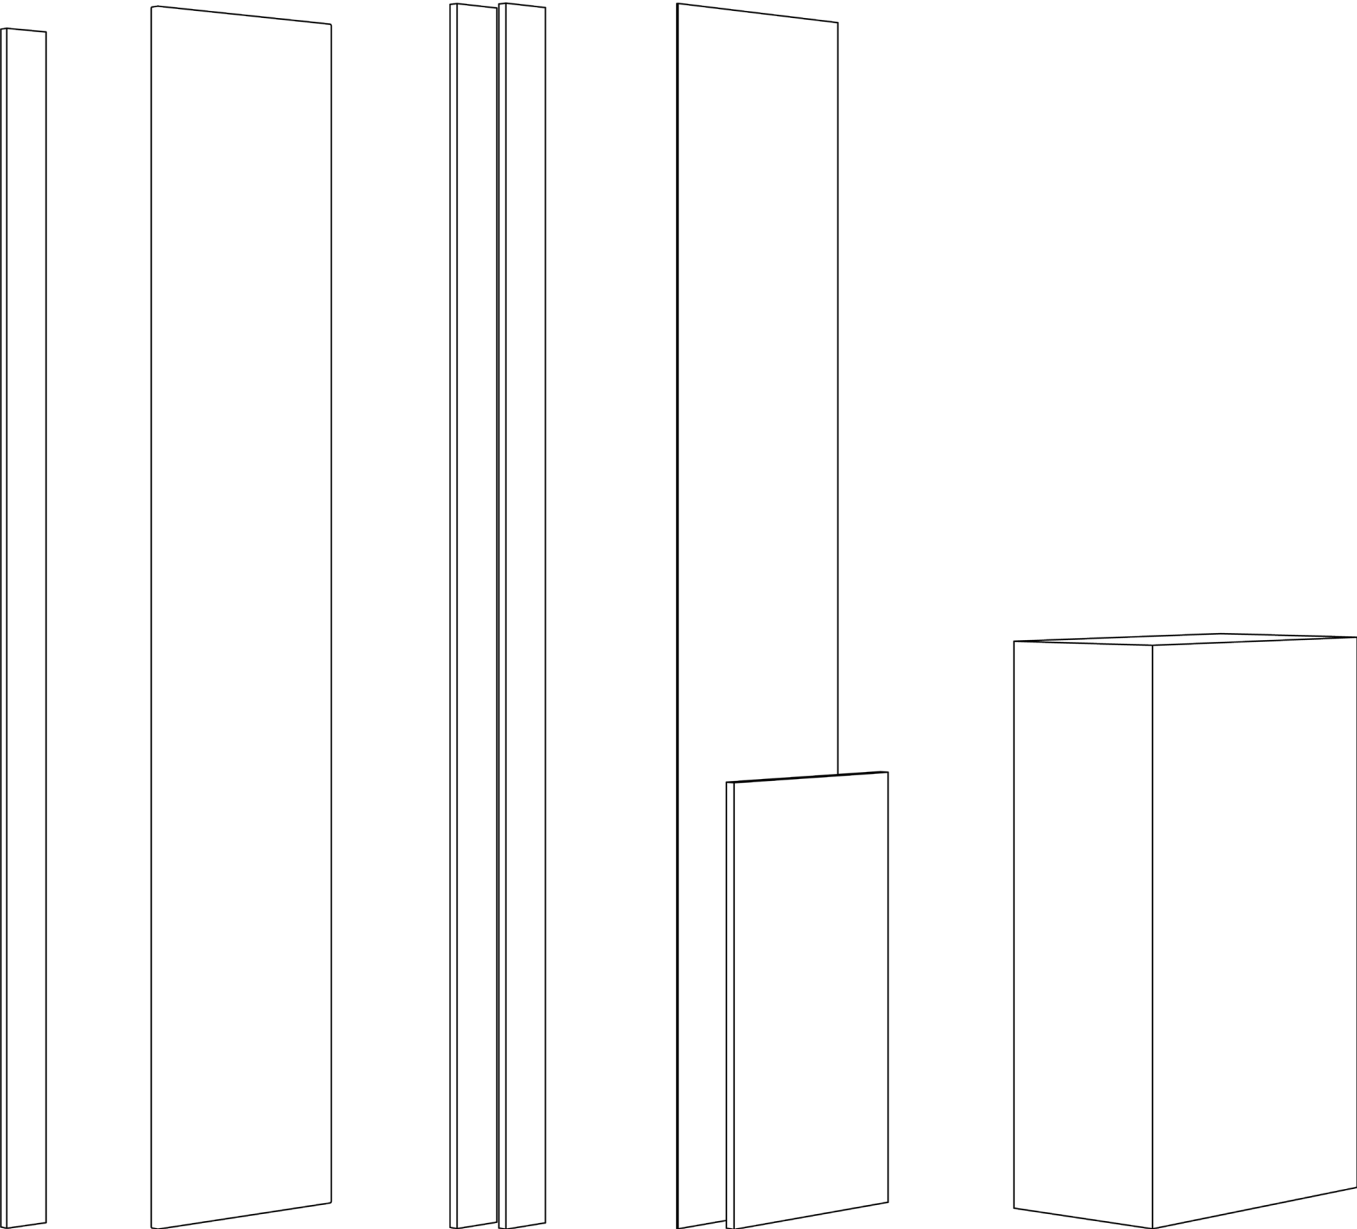

Muntin Post  
**(E)**


Adjustable  
Corner Post Panel  
**(Y)**

Fixing Rails  
**Z1 & Z2**


Adj & Stable  
Blanking Panel

Hanging Rail / Loose Shelf Pack


## 800-1000, Adjustable / Stable Corner Robe Assembly Guide




**(J) x4**  
45mm  
Screw




**(K) x34**  
30mm  
Screw




**(L) x43**  
15mm  
Screw

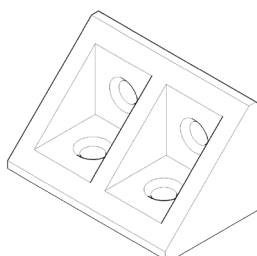


**x7**  
Fixing Block

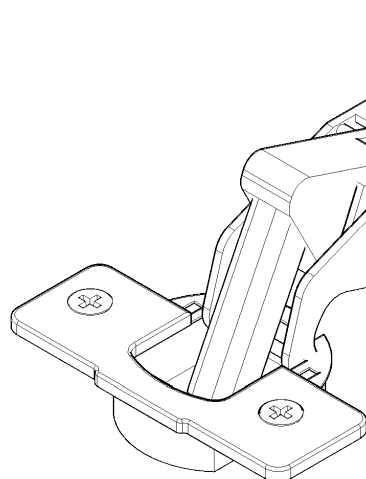


**170° Hinges**  
Inc Screws  
FOR FULL HEIGHT DOOR

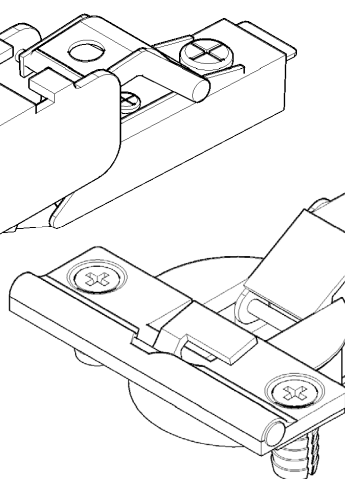


**110° Hinges**  
Inc Screws  
FOR STABLE DOOR

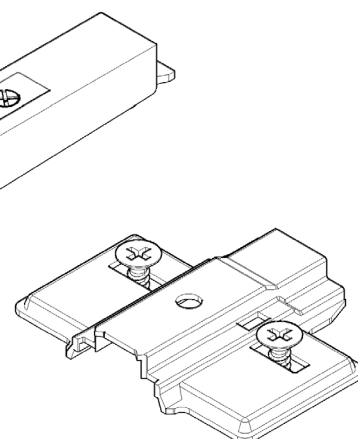


**Hinge Mounting Plates**  
Inc Screws

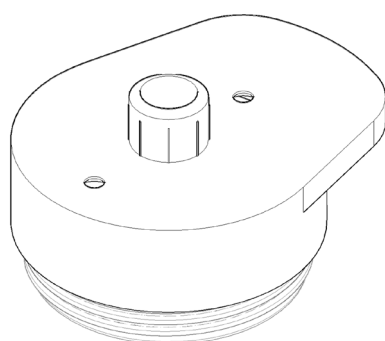

**Legs**

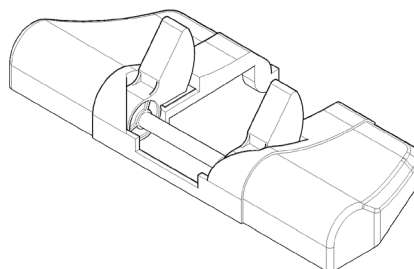



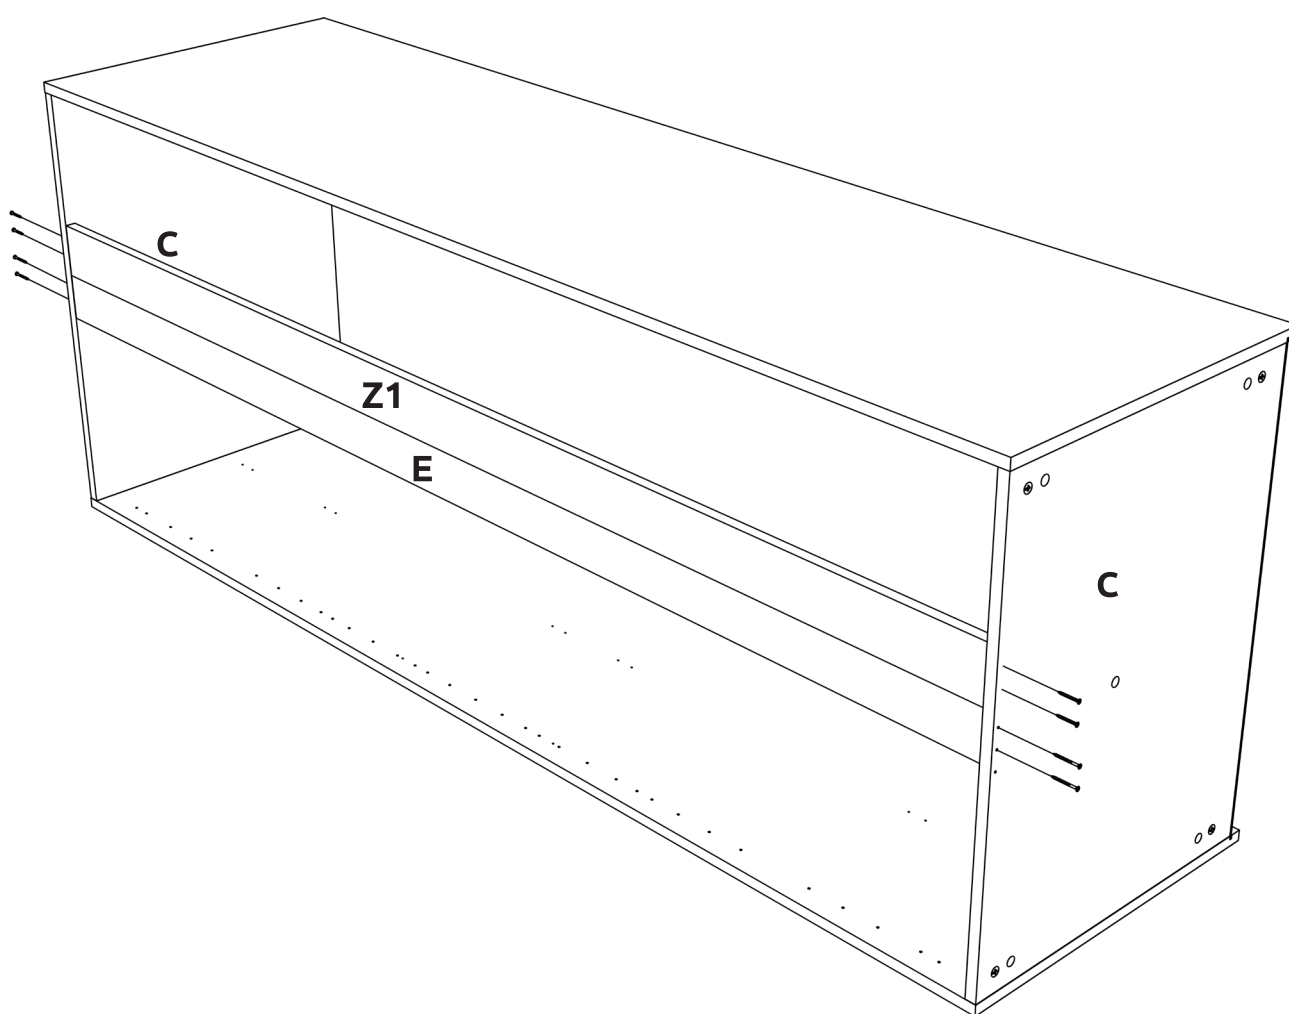
**Soft Close**  
For 170° Hinges

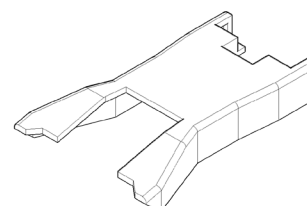



**Strike Plate**  
For 170° Hinges


## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

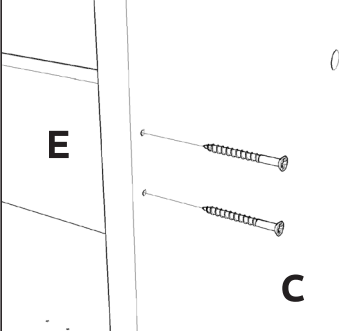	<p><b>Step 1.</b> Join muntin panel <b>(E)</b> to unit. Use pilot holes to align muntin. Join muntin panel <b>(E)</b> and Fixed Shelves <b>(C)</b> using 4 x 45mm screws <b>(J)</b> as shown. Offset the muntin in the direction of the corner post / Stable corner blanking panel. <b>Please refer to customer specific bedroom plan for LH or RH position.</b></p> 
--	--

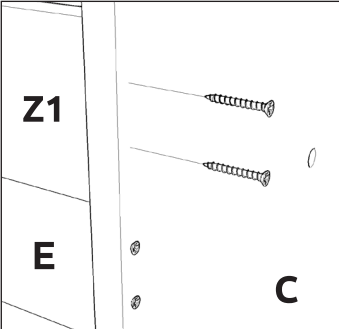


	<p><b>Step 2. Adj Corner Specific</b> Place fixing rail <b>(Z1)</b> flush with the front edge of the unit and up tight to the muntin post <b>(E)</b>. Cut fixing rail <b>Z1</b> to size as required. Screw through the unit using 2 x 30mm screws <b>(K)</b> in the top and 2 x 30mm screws <b>(K)</b> in the bottom fixed shelves <b>(C)</b>.</p> 
--	--

## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

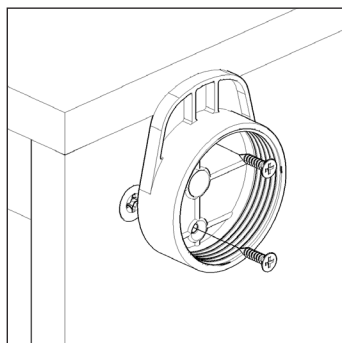


### Step 3.

Position top section of legs as shown. Ensure legs are rotated to provide support to the end panels **(B)**. Secure with 2 x 15mm screws per leg. Attach bottom section of legs and set all legs to the same height.

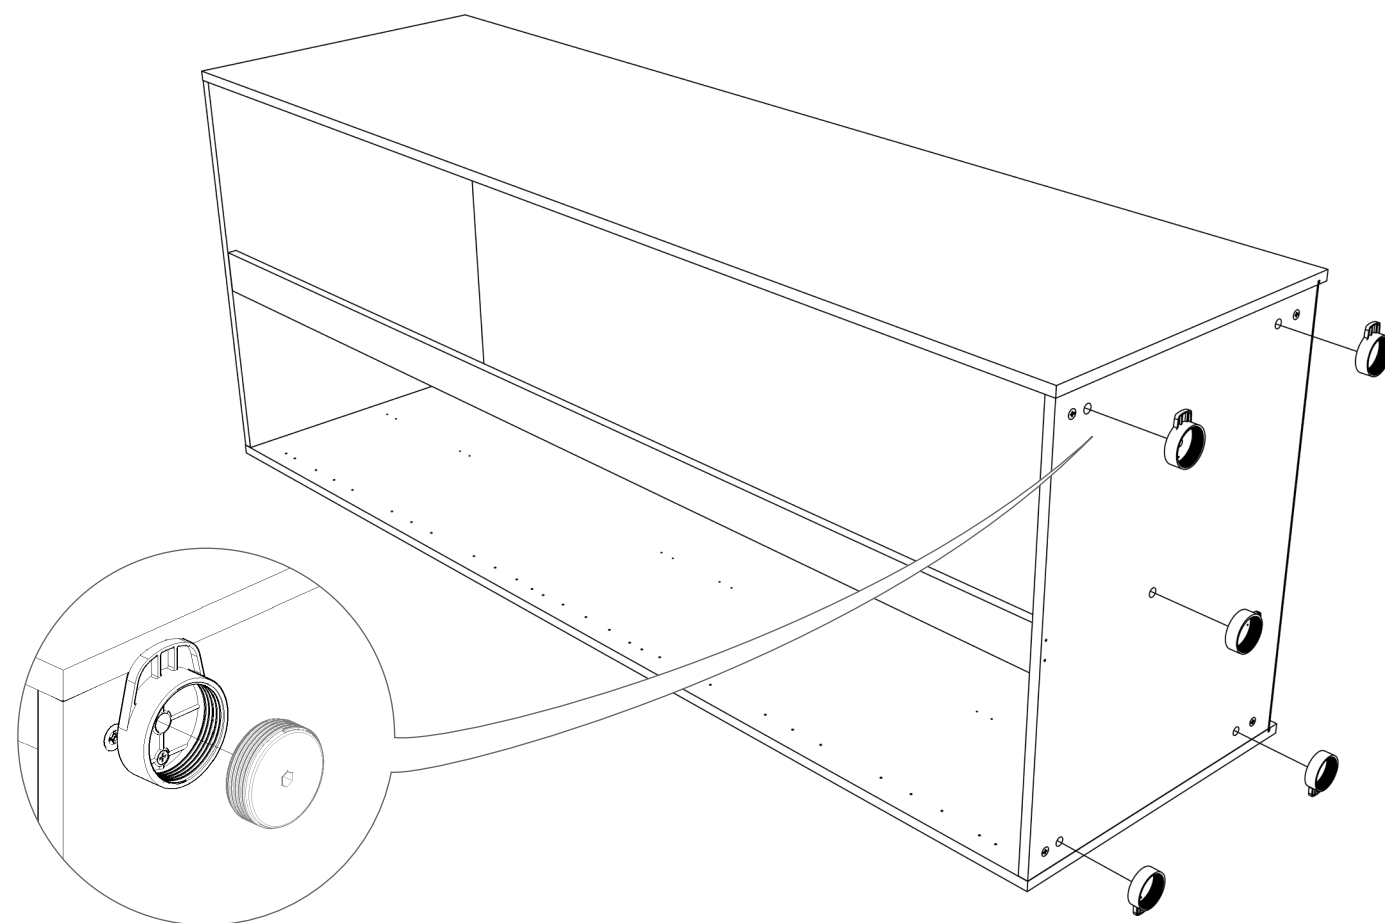


It is **important** to lift unit onto its legs. Do not tilt as depicted in image.

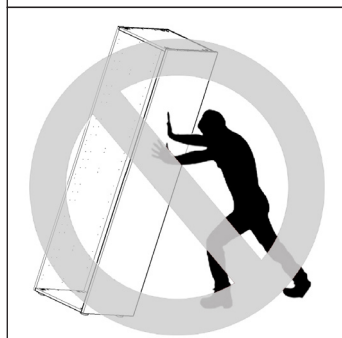

### Step 4.

Turn unit upright. Once in situ level accordingly, using an 8mm hex key from inside the unit. Cover leg holes with 15mm cover caps.

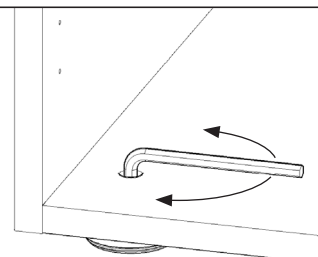

800-1000, Adjustable / Stable Corner Robe Assembly Guide




**Step 5.**  
**Stable Corner**  
Attach hinge plates onto muntin post **(E)** to suit as shown using 2 screws already in hinge plates.

**Hinge side to be mounted in accordance to customer specific bedroom plan.**


2100  
Adjustable / Stable Corner Robe

Full Door

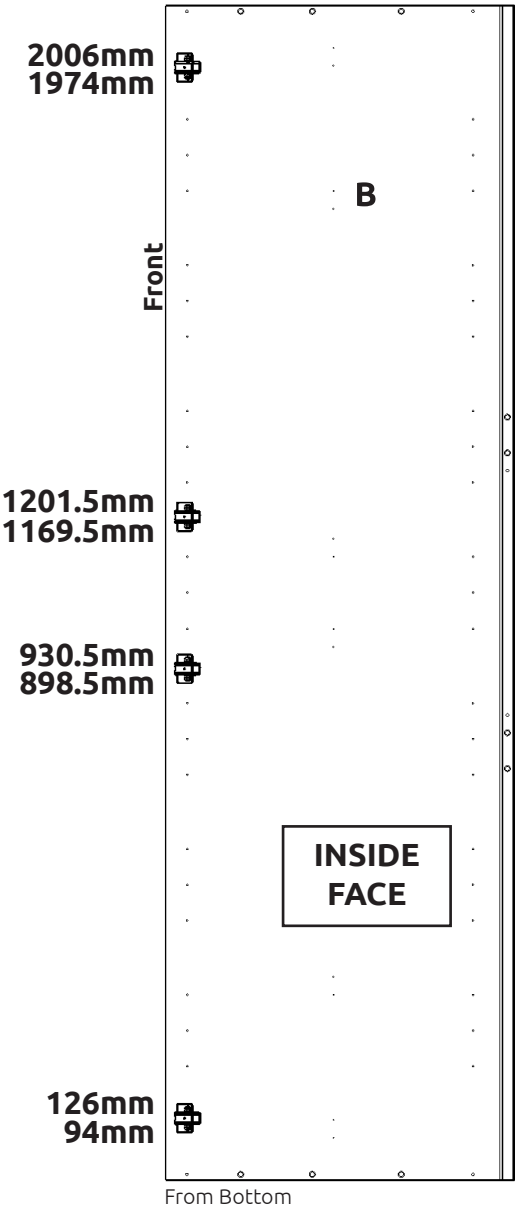

2100  
Stable Corner Robe

Stable Door

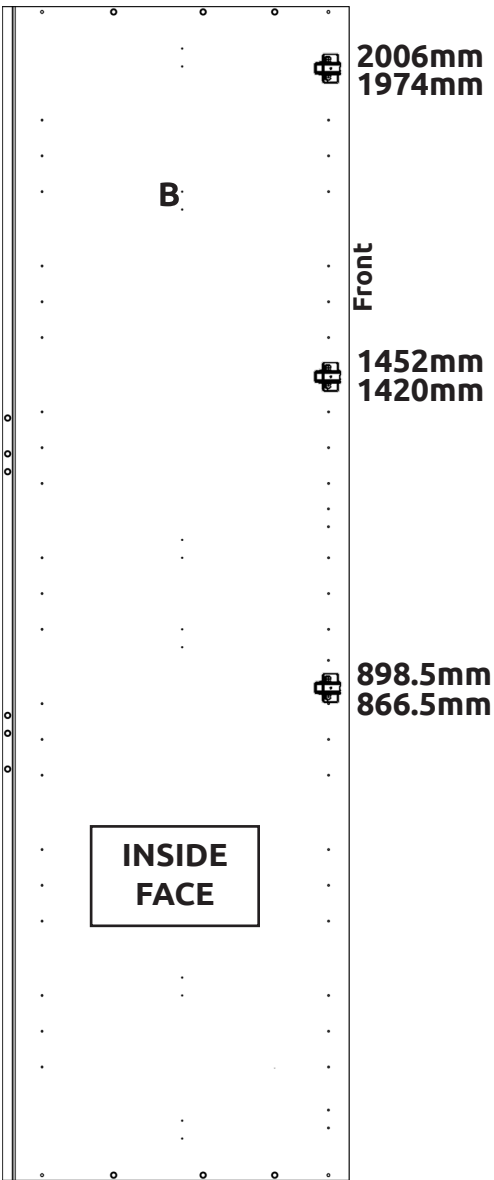



## 800-1000, Adjustable / Stable Corner Robe Assembly Guide




Screws for fixing to walls are not provided as these vary depending on your wall material and construction. Ensure appropriate fixings for wall constructions are used.

### Step 6.


Ensure the unit is level and positioned correctly. **Please refer to customer specific bedroom plan as robe position will very depending on unit depth and width.**

Drill pilot holes through back panel (A) and rails (D) into the wall. Secure robe to the wall by screwing through the pilot holes into the wall. Place stick on cover caps on the heads to conceal them.

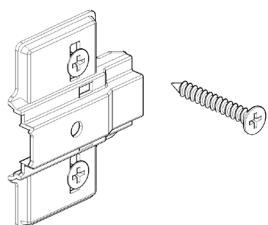


### Step 7.

Screw into any adjacent units using 30mm screws (K) provided to secure the unit. Screw just to the rear of the hinge plate at the top, middle and bottom on both sides. Place stick on cover caps on the heads to conceal them.

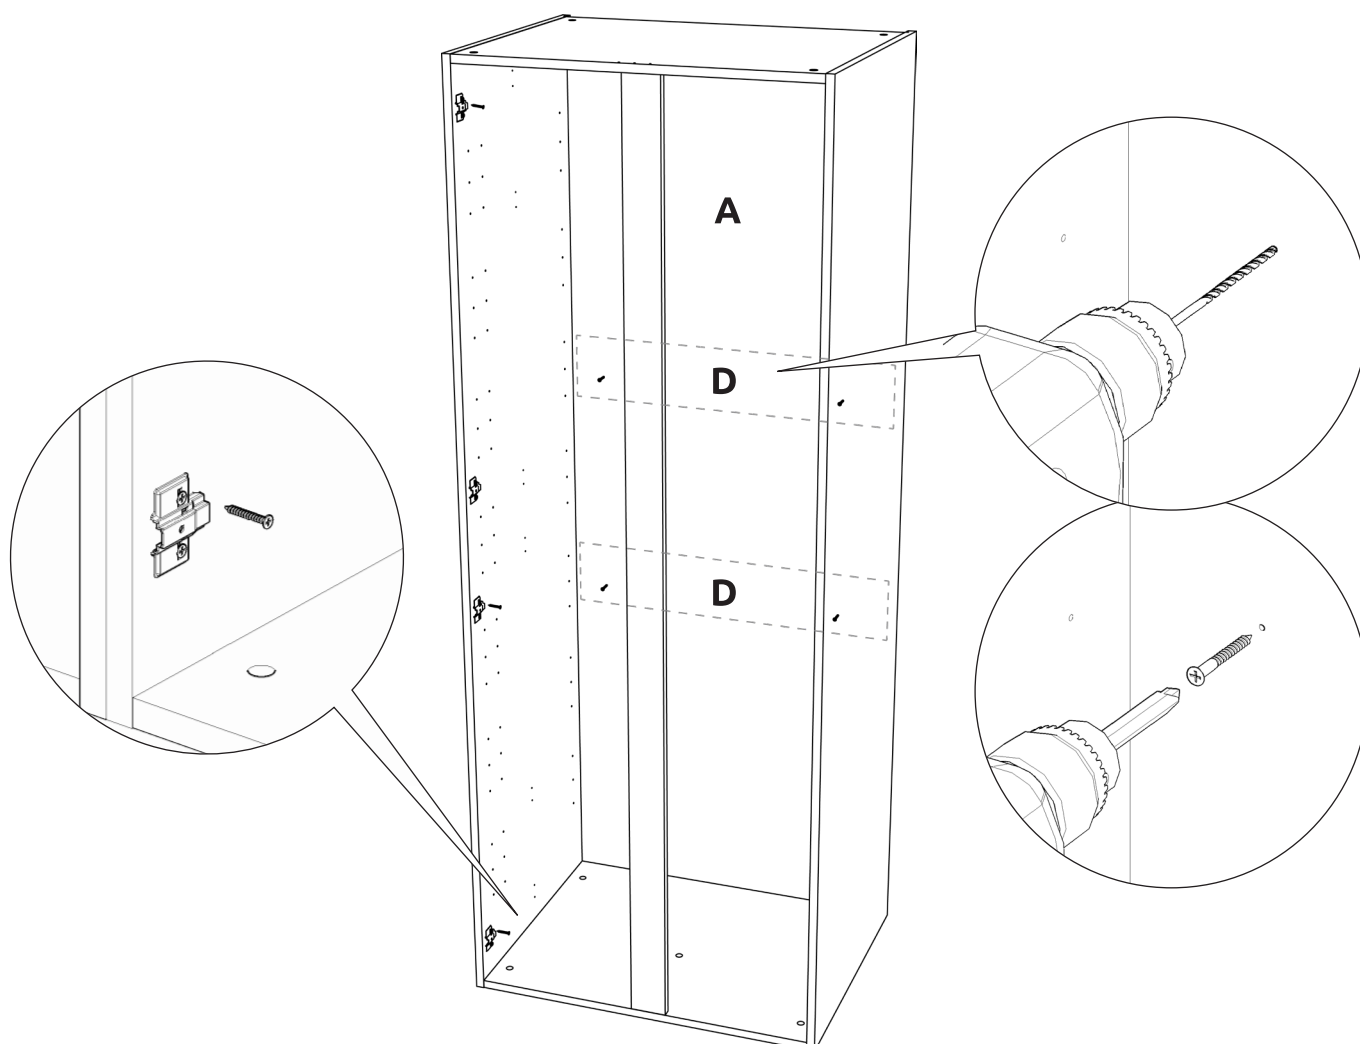


**590 DEPTH CORNER ROBE  
INTERNAL LAYOUT OPTIONS**

**Adj Corner Robe  
1 Shelf and 1 Rail**

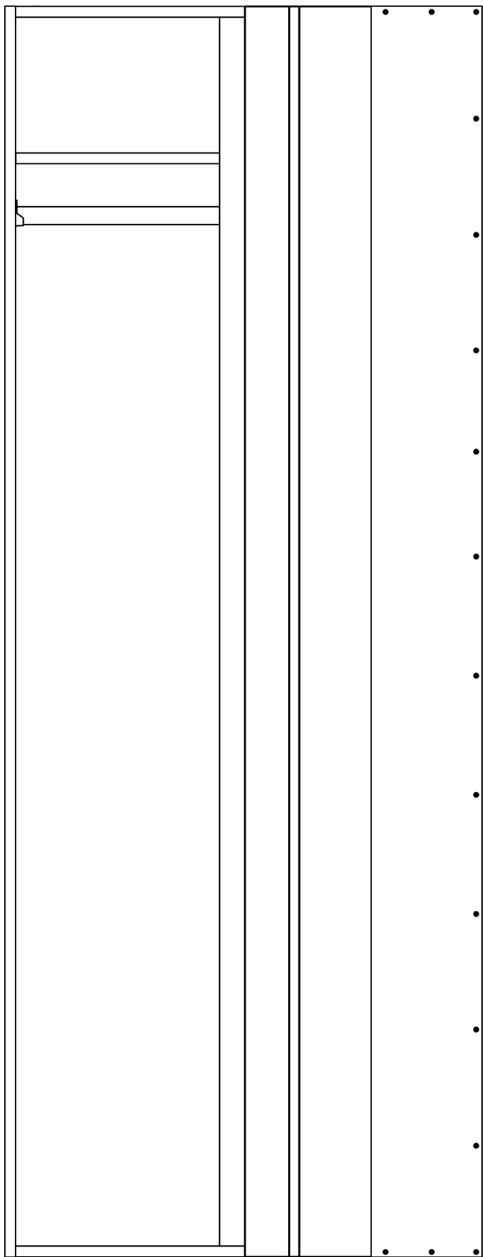


**Stable Corner Robe  
1 Shelf and 1 Rail**

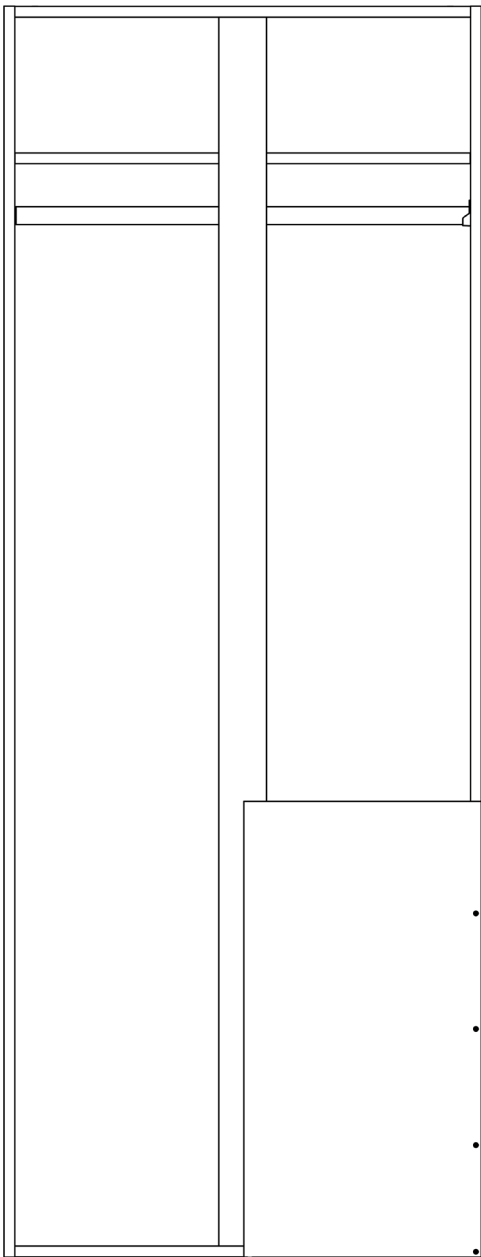


**590 DEPTH CORNER ROBE  
INTERNAL LAYOUT OPTIONS**

**Adj Corner Robe  
1 Shelf and 2 Rails**

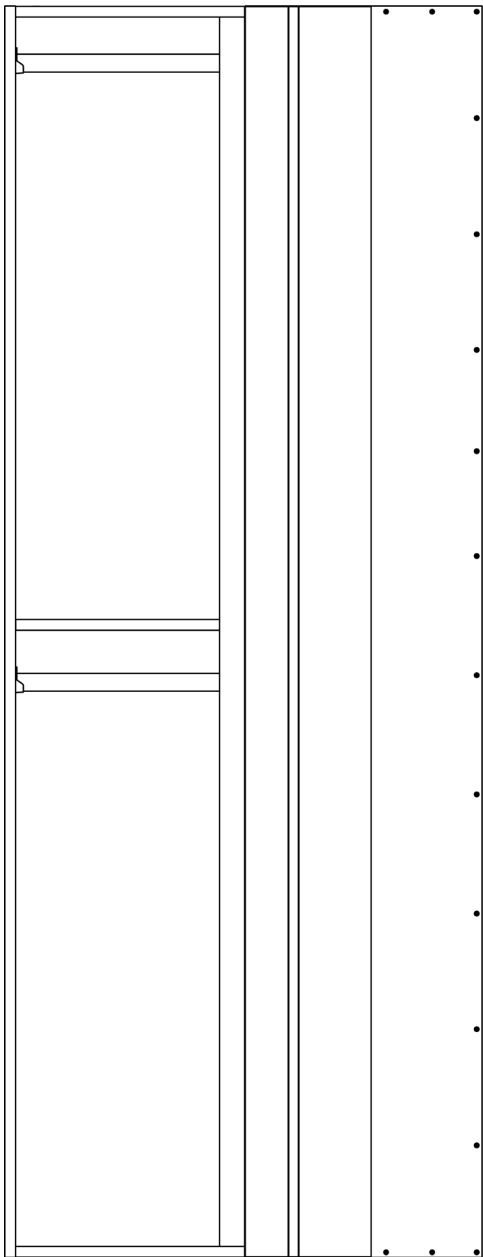


**Stable Corner Robe  
1 Shelf and 2 Rails**

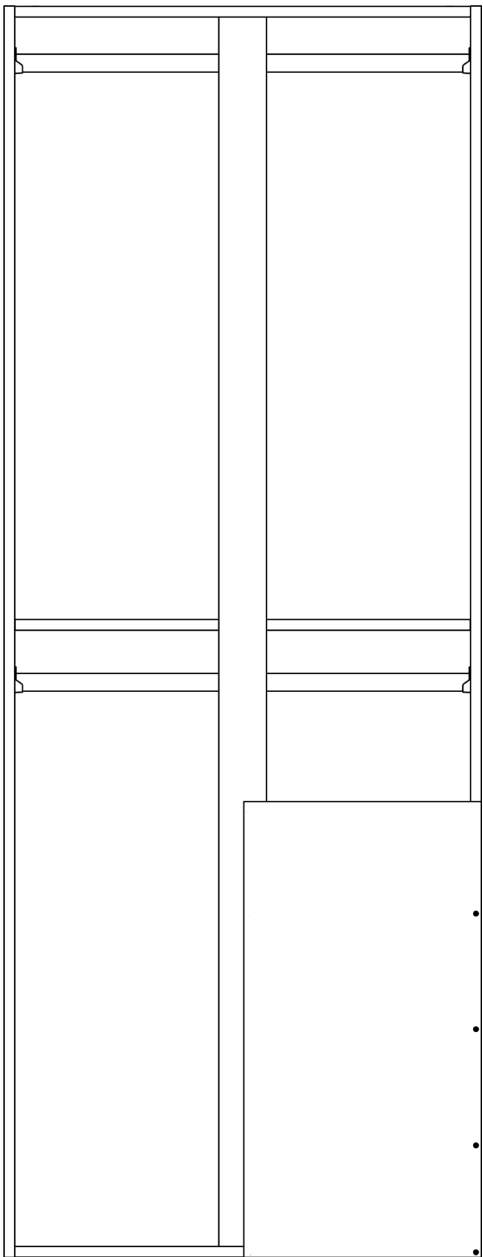


**590 DEPTH CORNER ROBE  
INTERNAL LAYOUT OPTIONS**

**Adj Corner Robe  
4 Shelves and 1 Rail**

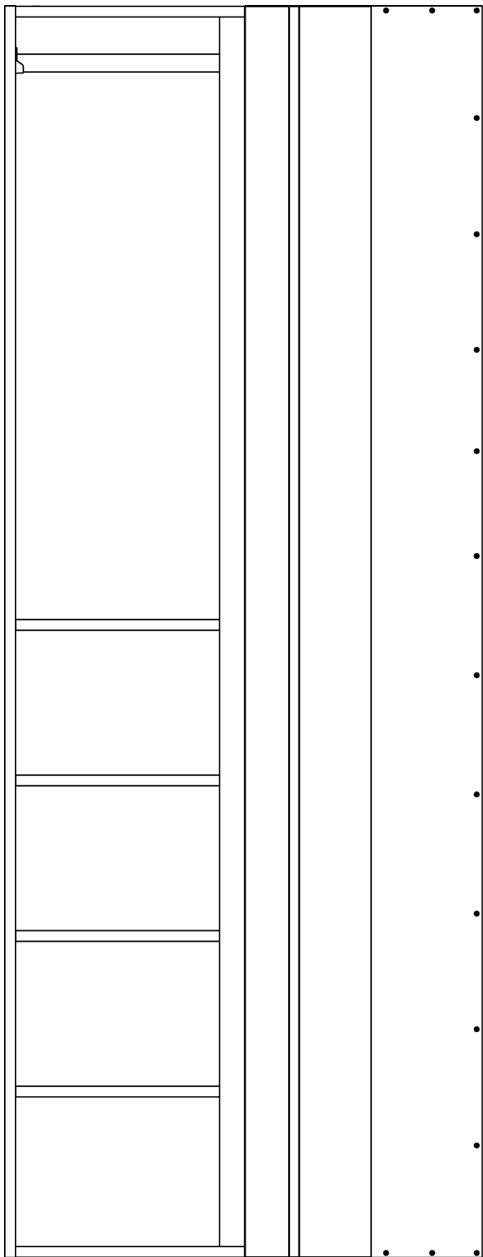


**Stable Corner Robe  
4 Shelves and 1 Rail**

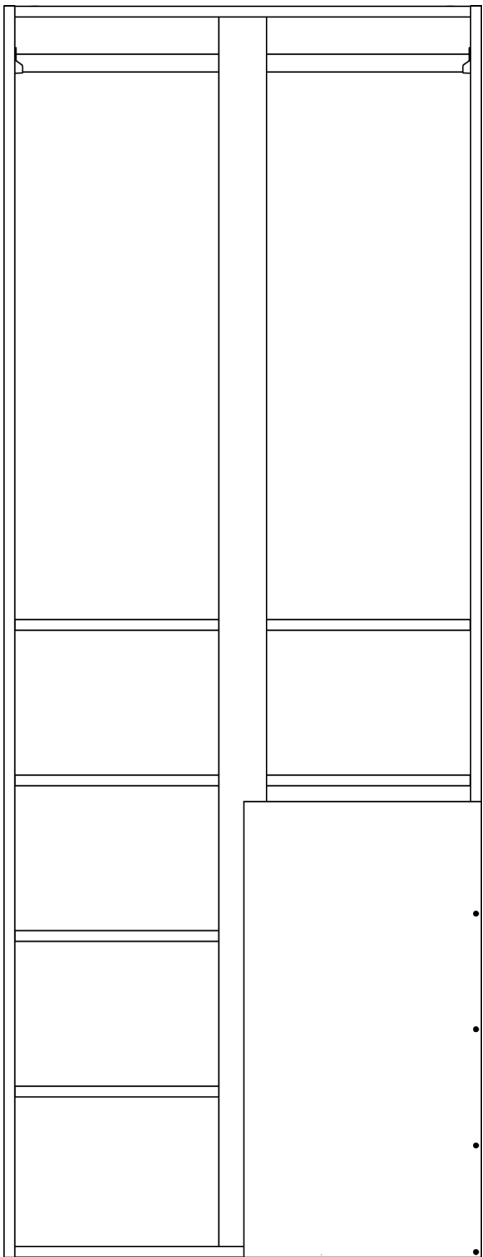


**394 & 590 DEPTH CORNER ROBE  
INTERNAL LAYOUT OPTIONS**


**Adj Corner Robe  
7 Shelves**

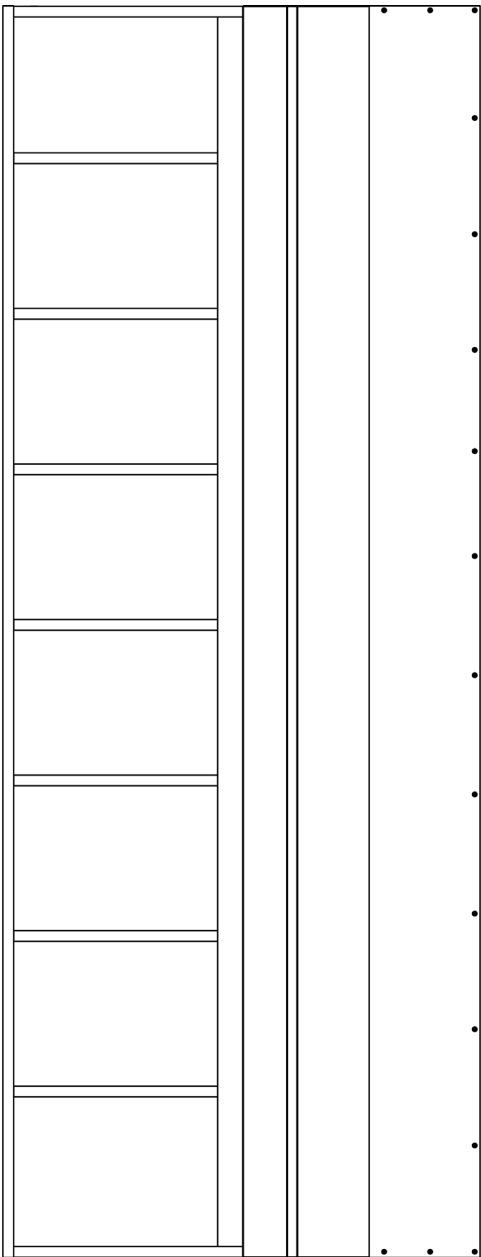

**Stable Corner Robe  
7 Shelves**

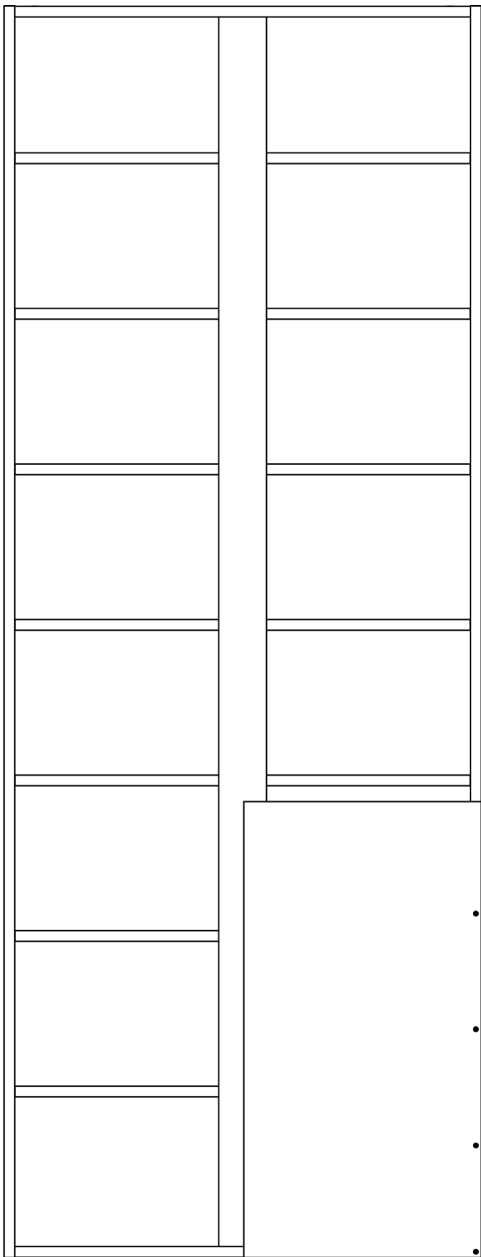


## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

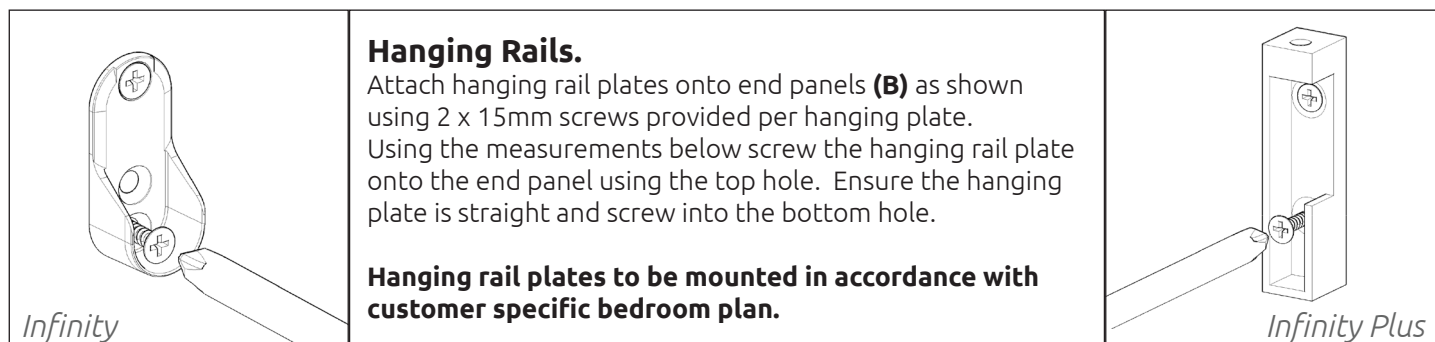

### Hanging Rail options





- 1 x Hanging Rail **(1)**
- 1 x Hanging Rail + 1 x Shelf **(2)**
- 2 x Hanging Rails + 1 x Shelf **(1+3)**

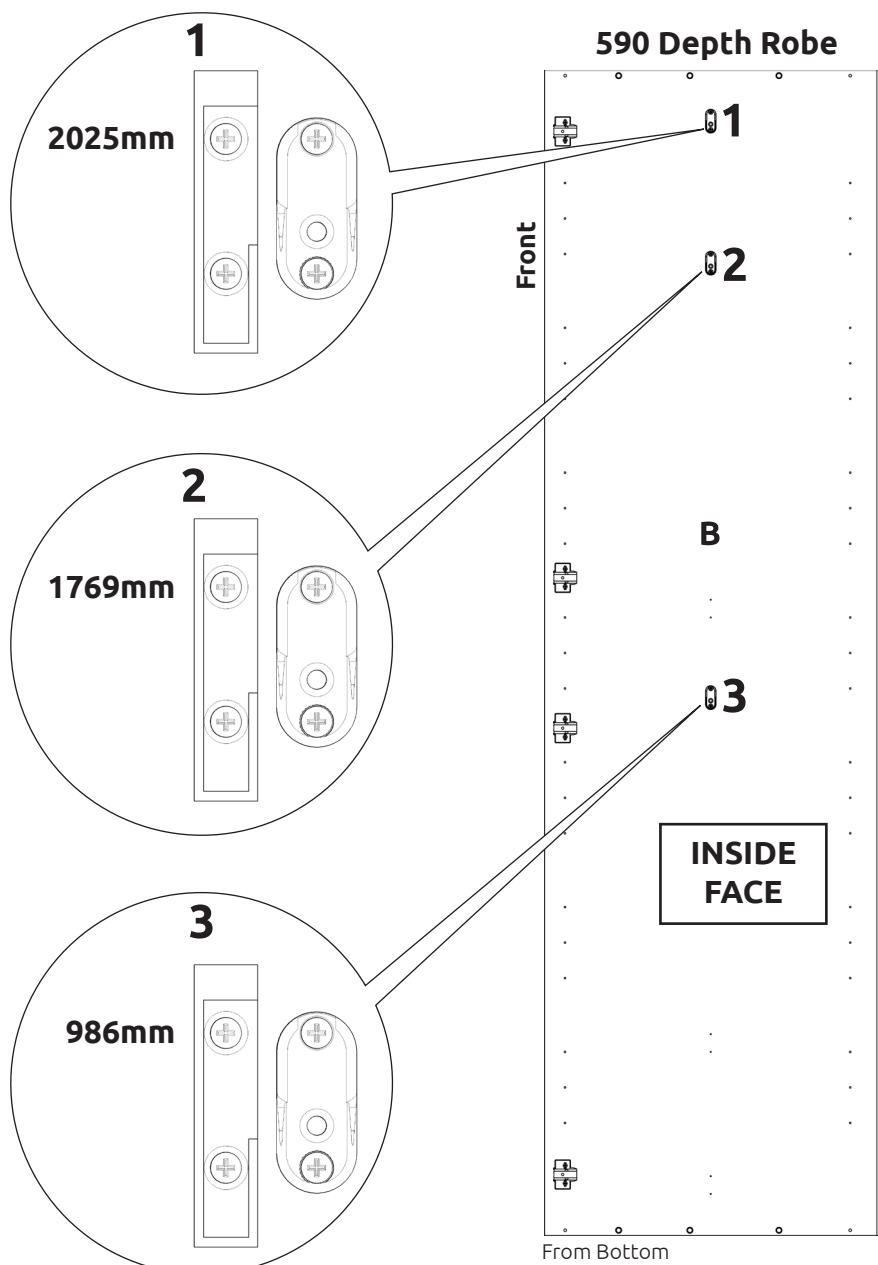

## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

### Adjustable Corner Post.

- A.** Cut panel (Y) to size according to **customer specific bedroom plan**.
- B.** Corner post size can be adjusted by positioning panel (Yi) along panel (Yii).
- C.** To create your corner post attach both panels (Yi) and (Yii) as shown. Screw through the back of the panel (Yii) into panel (Yi) using 10 x 30mm screws (K) equally spaced.
- D.** Place the adjustable corner post together with the remaining fixing rail (Z2) flush as shown and screw together using 10 x 30mm screws (K) equally spaced as shown. Cut fixing rail (Z2) to size as required.

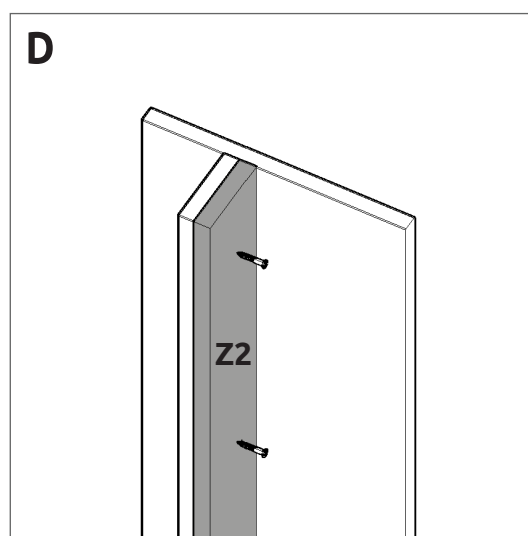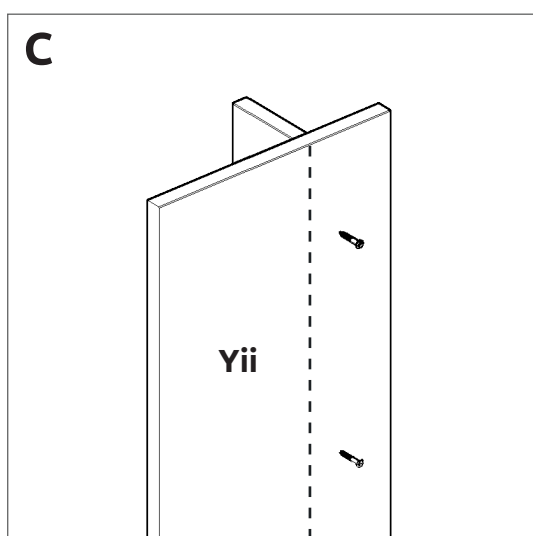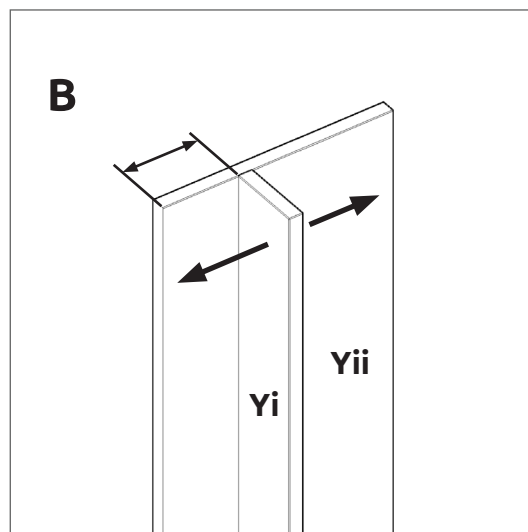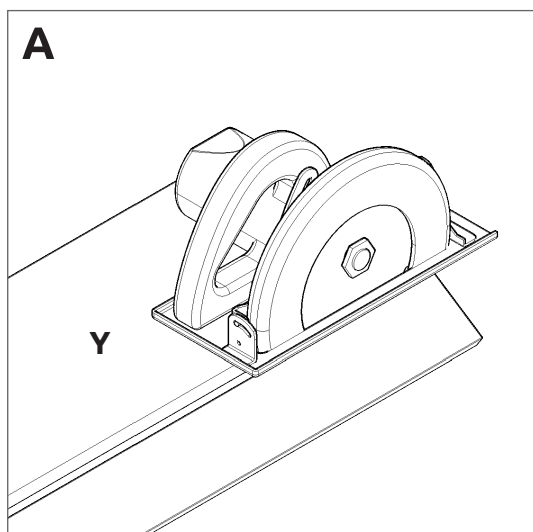


## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

**E.** Place adjustable corner post flush with muntin post **(E)** & fixing rail **(Z1)** as shown, the position of the corner post is the width of the door + 6mm. From the inside of the unit screw through muntin post **(E)** & fixing rail **(Z1)** into the adjustable corner post securing together using 10 x 30mm screws **(K)** equally spaced.

**F.** Measure and cut blanking panel to the required size.

**G.** Secure blanking panel with 15mm screws **(L)**, evenly spaced, as shown. Ensure you screw 9mm from edge of the blanking panel to ensure to screw into the centre of the end panel, top and bottom fixed shelves.

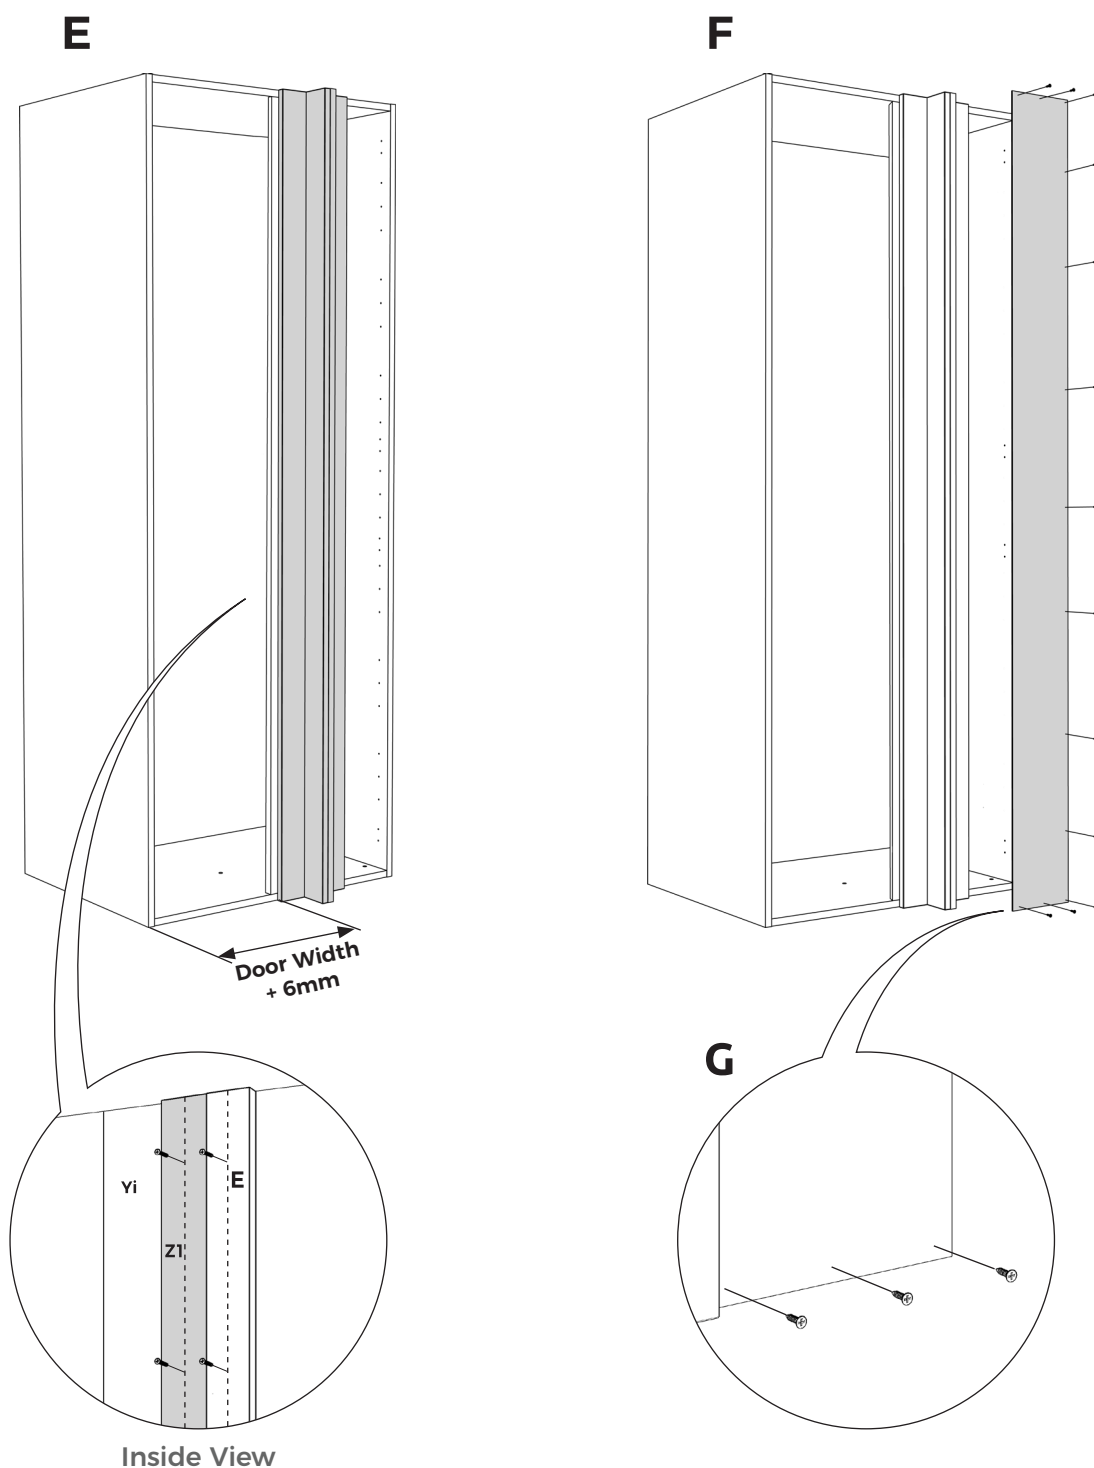



## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

### Stable Corner Blanking Panel.

**A.** Measure and cut blanking panel to size. Ensure to leave two sides of the panel with edgebanding on.

**B.** Position the blanking panel on the front of the robe unit on the bottom left or right hand side.

**Refer to customer specific bedroom plan for left or right hand positioning of the blanking panel.** Ensure the blanking panel is flush with the side and bottom of the unit. The edgebanding should be face up and in towards the muntin post. **EB = Edgebanding**

**C.** From **outside** the unit secure the blanking panel to the robe unit using 4x30mm screws (**K**) equally spaced. Pilot hole and screw through the blanking panel into end panel (**B**).


Do not screw into the top **100mm** as this would be visible when the chest unit is in place.

**D.** From **inside** the unit secure the blanking panel to muntin post (**E**) by screwing through the back of the muntin post into the blanking panel using 5x30mm screws (**K**) equally spaced. Secure from inside to prevent the screws being visible when the chest unit is in place.

### Blanking Panel Size

**Unit 800 Width** - H 769 x W 398





**Unit 1000 Width** - H 769 x W 498

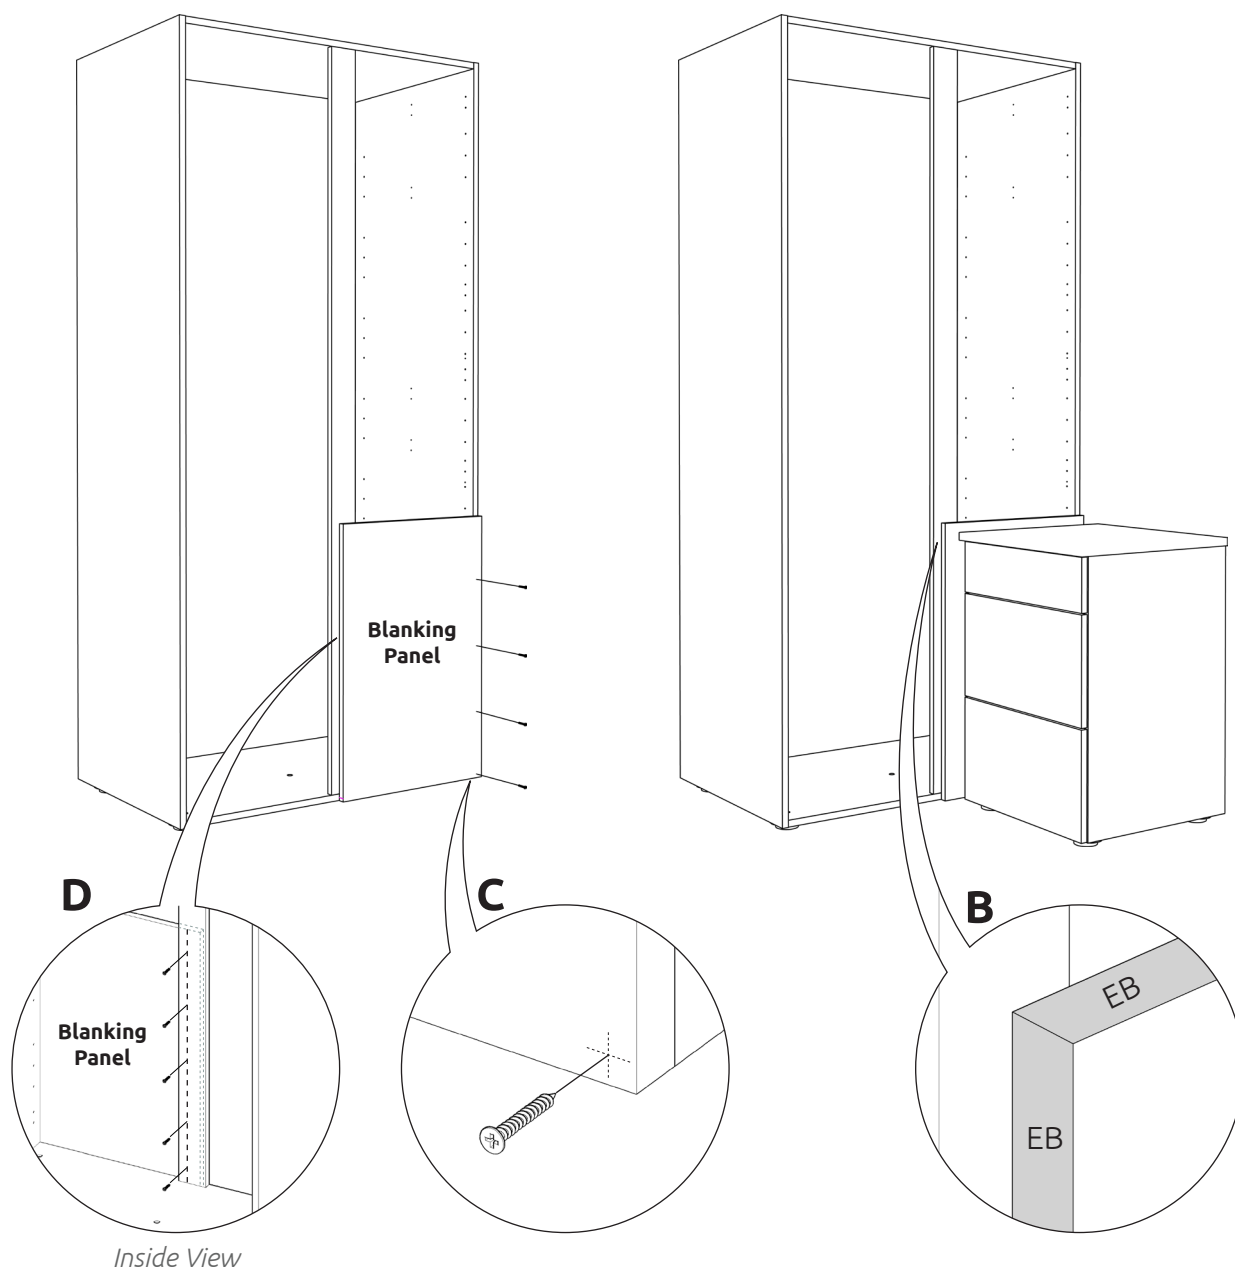


Inside View



## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

### 170° Hinge Attachment and Adjustment

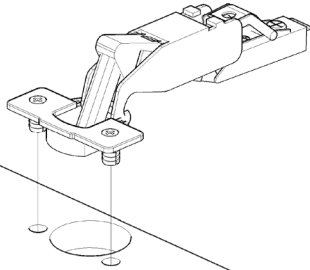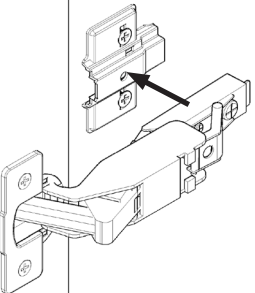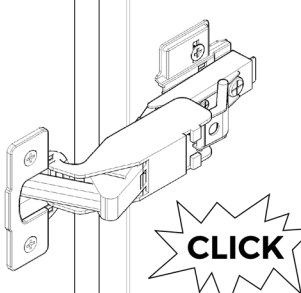	<p><b>Step 1.</b> Insert hinges into frontal hinge holes provided, secure hinges with the 2 x screws and hinge dowels already located in the hinges.</p>	 <p><i>Hinge dowels</i></p>
		<p><b>Step 2.</b> Attach the door to unit, clip hinges onto hinge plates and click to secure.</p>
<p><b>Step 3.</b> Adjust hinges to suit, using the highlighted screw(s) shown.</p>		

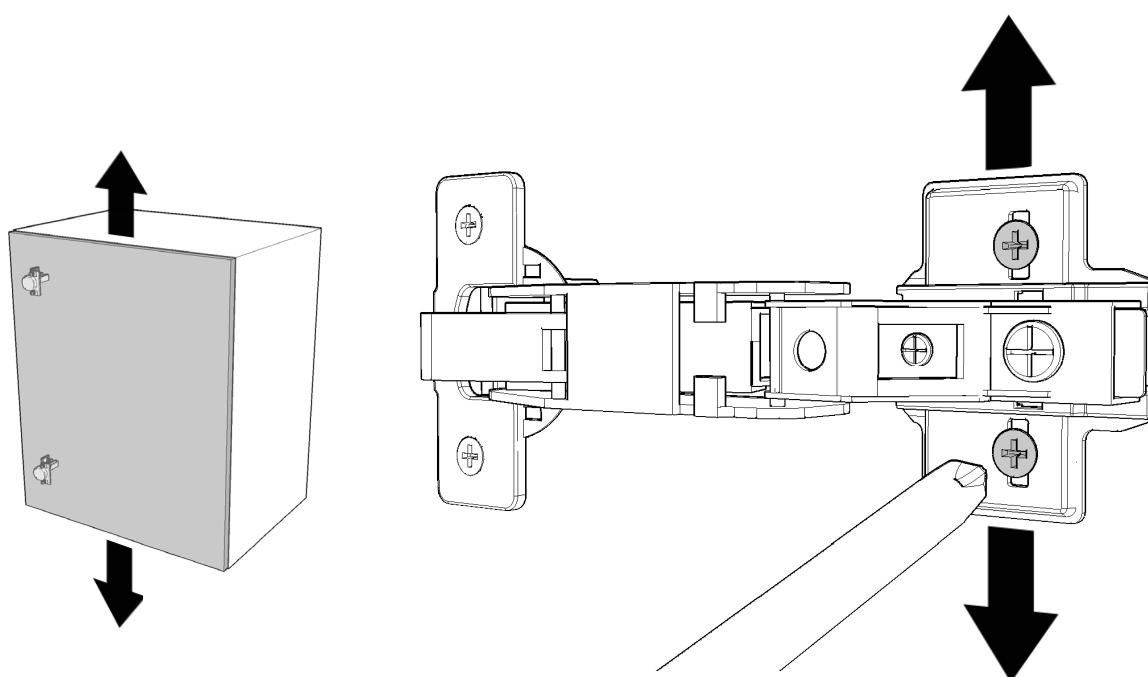

## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

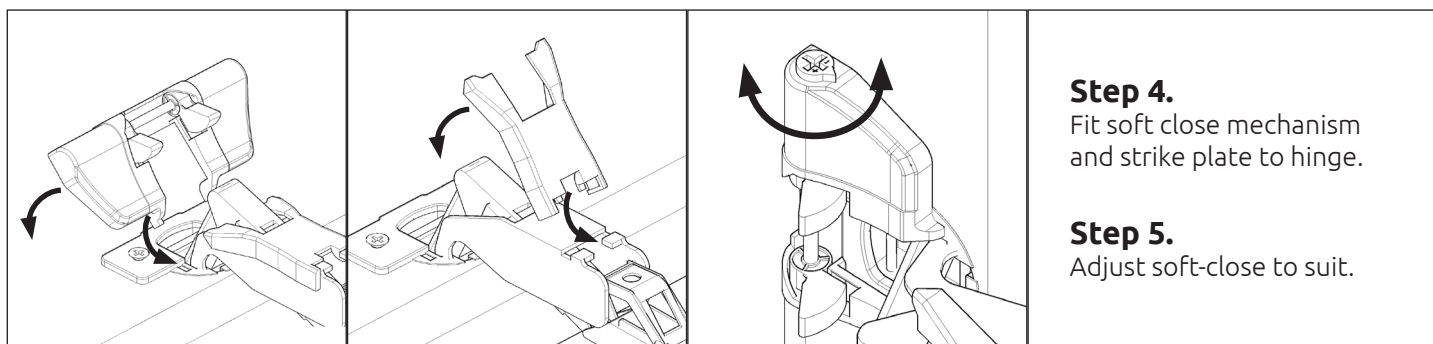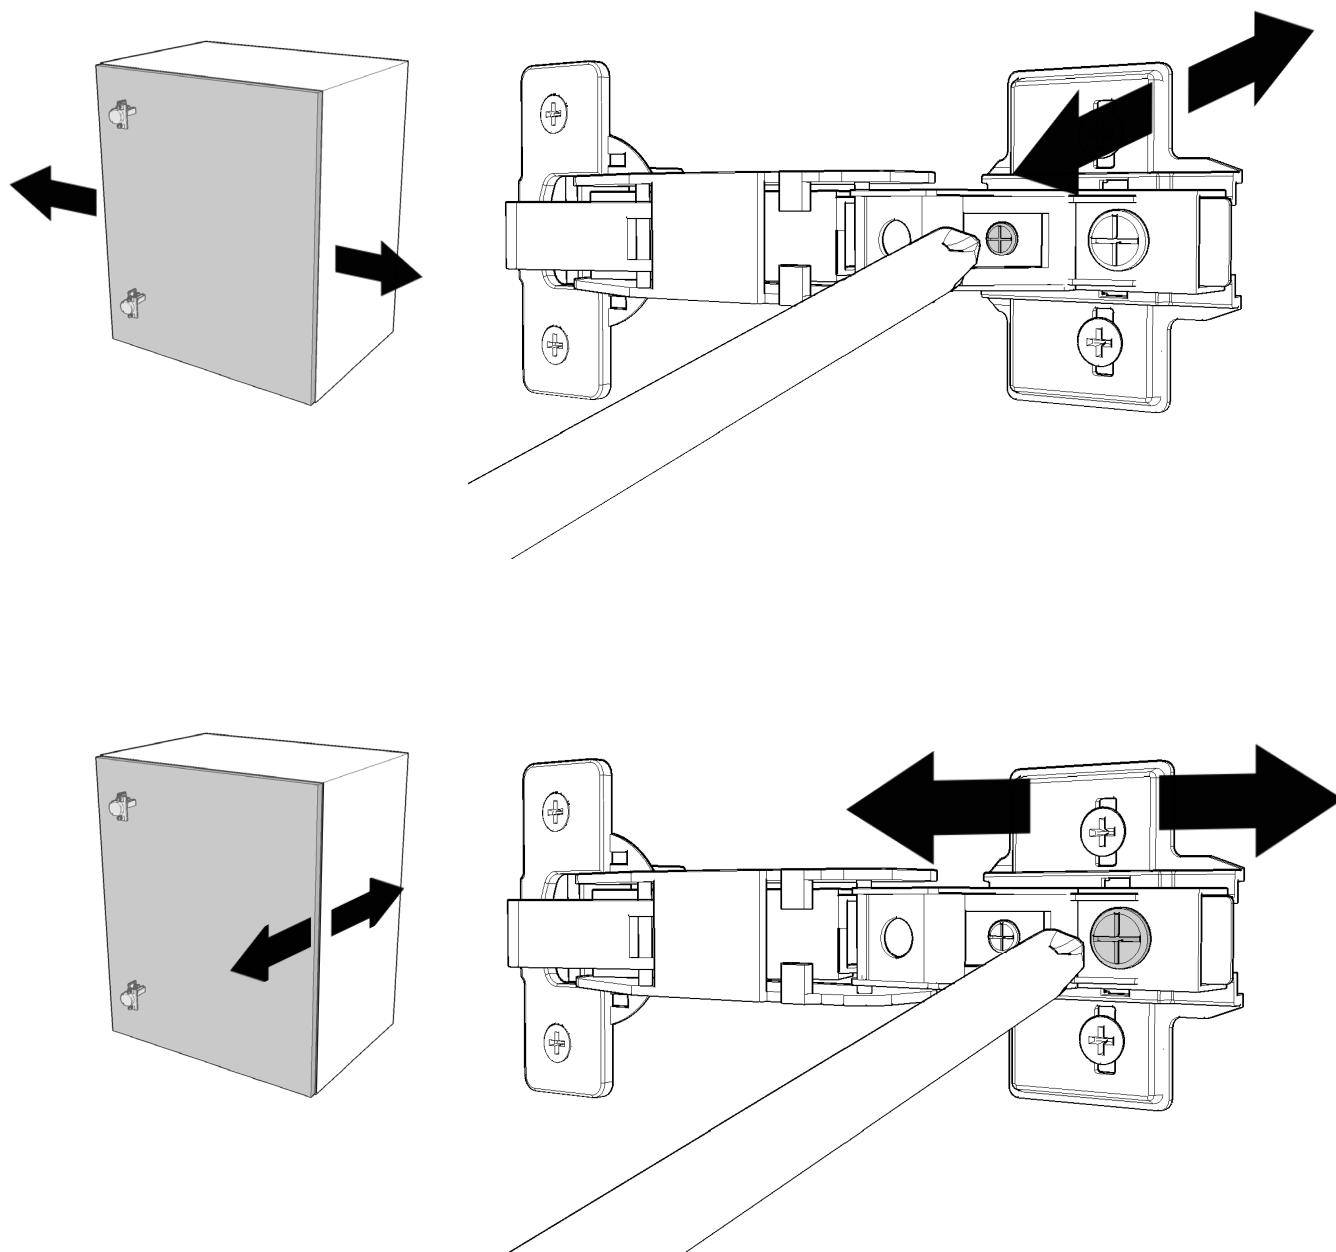

### Step 4.

Fit soft close mechanism and strike plate to hinge.

### Step 5.

Adjust soft-close to suit.



The top and bottom hinges **MUST** be adjusted to the **SAME STRENGTH**.

## 800-1000, Adjustable / Stable Corner Robe Assembly Guide

### Loose Shelves

Secure shelf peg (JJ) to end panels (B) using 1 x 12.5mm screw (KK) per shelf peg.

4 x shelf pegs (JJ) are required per loose shelf.

Position loose shelf onto shelf pegs (JJ) ensuring the spikes on the shelf pegs go into the holes on the bottom of the loose shelf.

**See customer specific bedroom plan for number of loose shelves.**

Secure a fixing block to the muntin post and the underside of each loose shelf using 4 x 15mm screws (L) per fixing block.



Shelf Peg



12.5mm Screw

