

WALL UNIT

wren

Bridging / Top Box Unit Fitting Guide

Height: 288 - 450

Width: 400 - 1000

FI.PK.BED.222.002 - PEBBLE

(L) x8 15mm Screws 


2x Wall Hanging Bracket 

(S) x4 20mm Screws 

2x Wall Hanging Plate 


(K) x8 30mm Screws 

2x Corner Gusset Plate 


(N) x2 Door Buffer 

2x Hanging Bracket Cover Cap 

8x Stick On Cover Cap 

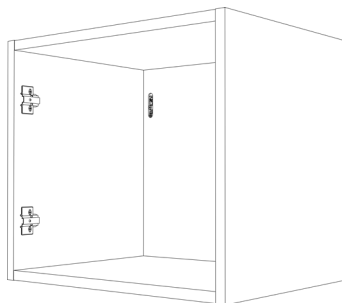


Screws and fixings for attaching to walls are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall construction are used.

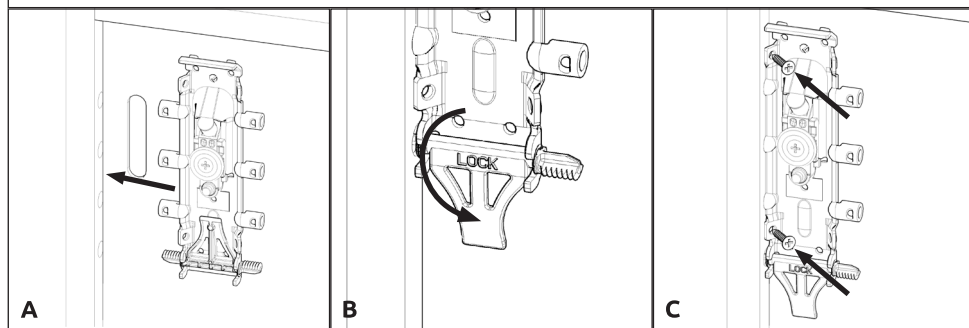

Step 1.

- A. Insert wall hanging bracket into pre-drilled holes on the rear of the unit.
- B. Rotate locking lever 180 degrees.
- C. Secure with 2 x 20mm screws (S) per hanging wall bracket.

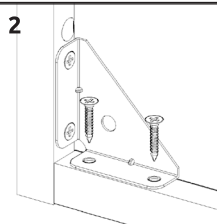


Step 2.

Secure corner gusset plates to the bottom left and right side on the back of the wall unit, using 4 x 15mm screws (L) per plate.

Step 3.

Drill a pilot hole through the centre of the wall gusset plate. Use this hole at the end of the process to screw through and into the wall.

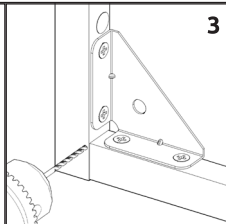

View from back of unit.

View from back of unit.

WALL UNIT






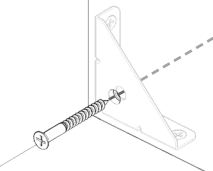

wren

Bridging / Top Box Unit Fitting Guide

Height: 288 - 450

Width: 400 - 1000

FI.PK.BED.222.002 - PEBBLE

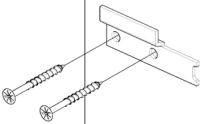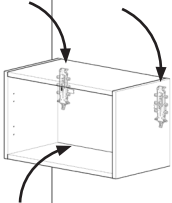	<p>Step 4. A. Measure appropriately and attach the 2 x wall hanging plates onto the wall screwing through the provided holes into your wall. B. Hang the unit using the wall hanging brackets to hook onto the wall hanging plates.</p>	
<p>a</p>  <p>b</p>  <p>c</p> 	<p>Step 5. Point a. Rotate the top screw clockwise to move the unit up. Anti-clockwise for down. Point b. Adjust the depth using centre screw. Point c. Turn the bottom screw (red screw) until it touches the plate to lock in position.</p>	
 <p><i>View from inside unit.</i></p>	<p>Step 6. Secure the unit to the wall by screwing through the pilot hole and gusset from step 3 into the wall. Place cover stickers on the heads to conceal them.</p>	
	<p>Step 7. Screw into any adjacent units using 30mm screws (K) provided to secure the unit. Screw just to the rear of the hinge plate at the top and bottom on both sides. Place stick on cover caps on the heads to conceal them. Step 8. Cover wall hanging bracket screws on the inside of the unit with 2 x hanging bracket cover caps provided .</p>	