
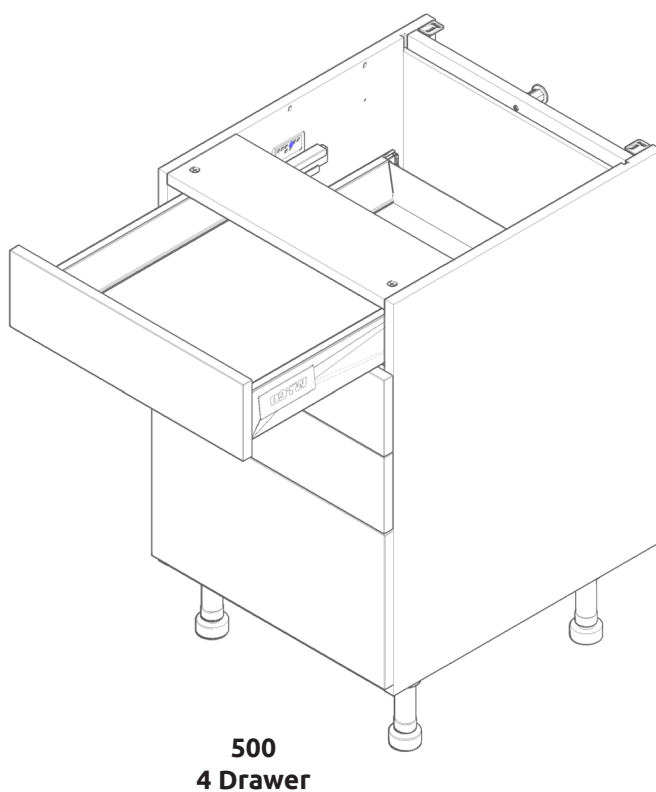


*Vogue*


# BASE UNIT

## 500 3/4 Drawer Assembly Guide

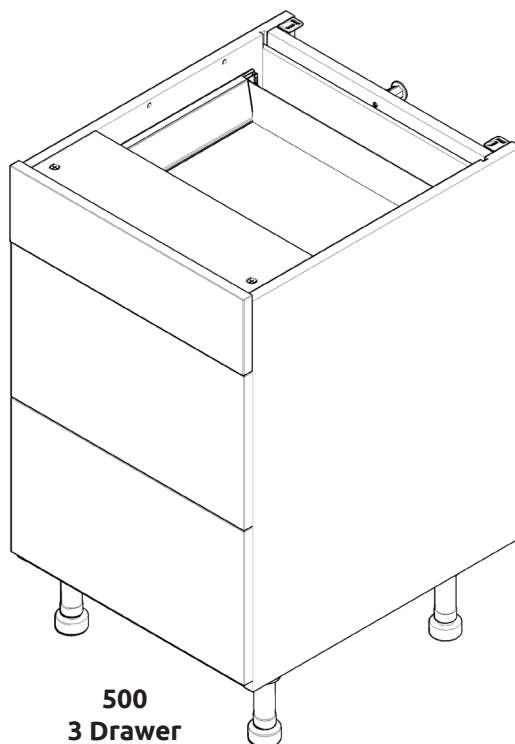

# BASE UNIT

## 500 3/4 Drawer Assembly Guide

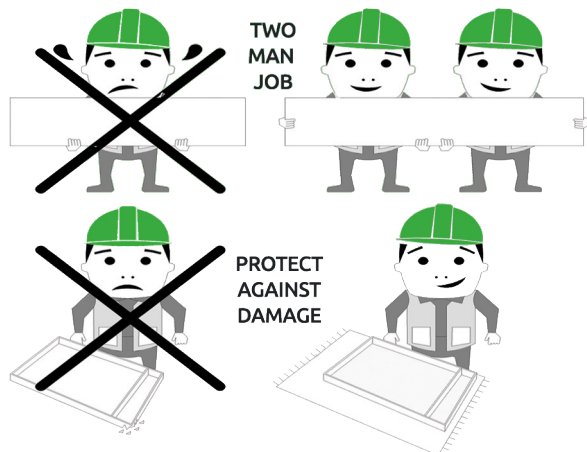

### BEFORE YOU START


INSTALLATION  
SHOULD BE  
PERFORMED BY A  
COMPETENT  
PERSON ONLY.

THIS PRODUCT COULD  
BE DANGEROUS  
IF INCORRECTLY  
INSTALLED

### Standard Drawer (Packed Separately)

Fitting Pack Contents

**METAL BACK  
PANEL**  
x 1

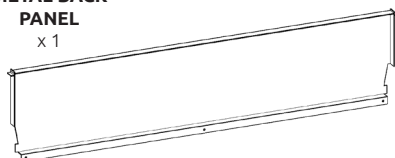


**(J) x16**  
Drawer Runner  
16mm Screws



**(Q) x4**  
21mm  
Screw




**(N) x1**  
Door Buffer




**DRAWER  
FRONT  
FIXING**  
x 2


**DRAWER  
COVER CAP**  
x2

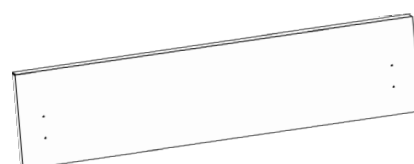

**FRONTAL**  
(Supplied separately)

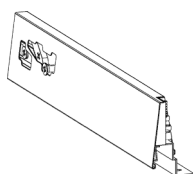


**DRAWER SIDE**  
x1 Right Hand

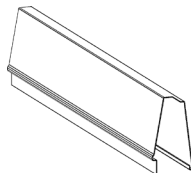


**DRAWER SIDE**  
x1 Left Hand

**DRAWER  
BASE**  
x 1

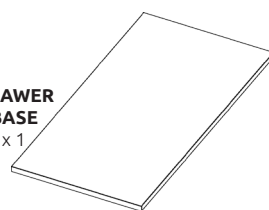

**DRAWER  
RUNNER**  
x 1 Left Hand

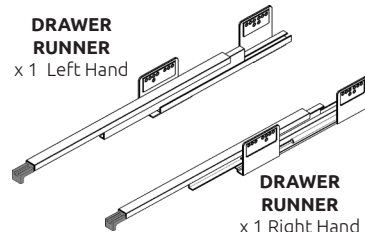


**DRAWER  
RUNNER**  
x 1 Right Hand

### Deep Drawer (Packed Separately)

Fitting Pack Contents

**METAL BACK  
PANEL**  
x 1

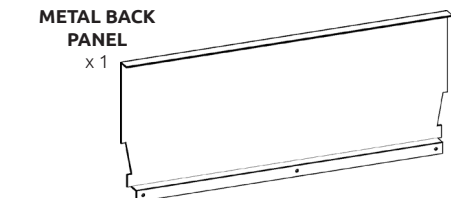

**(Y) x2**  
Gallery  
Head



**(J) x16**  
Drawer Runner  
16mm Screws




**(Q) x4**  
21mm  
Screw



**(L) x2**  
15mm  
Screw




**(N) x1**  
Door Buffer




**DRAWER  
FRONT  
FIXING**  
x 2


**DRAWER  
COVER CAP**  
x2

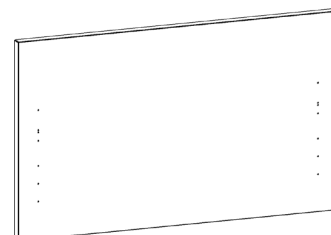

**FRONTAL**  
(Supplied separately)

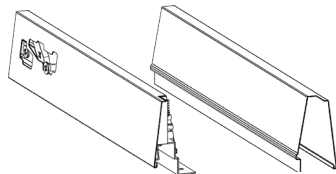

**DRAWER SIDE**  
x1 Right Hand

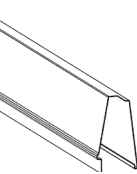


**DRAWER SIDE**  
x1 Left Hand




**GALLERY  
RAIL**  
x 2

**DRAWER  
BASE**  
x 1

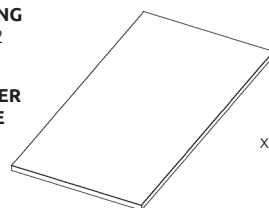

**DRAWER  
RUNNER**  
x 1 Left Hand

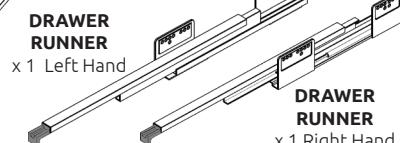


**DRAWER  
RUNNER**  
x 1 Right Hand

### REQUIRED TOOLS



NOT to be used  
with CAM DOWEL  
& CAM LOCK



## Step 1.

Secure drawer base to drawer side using 4 x 16mm drawer runner screws (**J**) in holes provided.


Seat the edge of drawer base tight into corner of casing, as shown.

The decorative face of drawer base to be positioned as shown.

**Repeat step 1** so both drawer sides are attached to drawer base.


## Step 2.

Clip on metal back panel to drawer base & drawer sides.

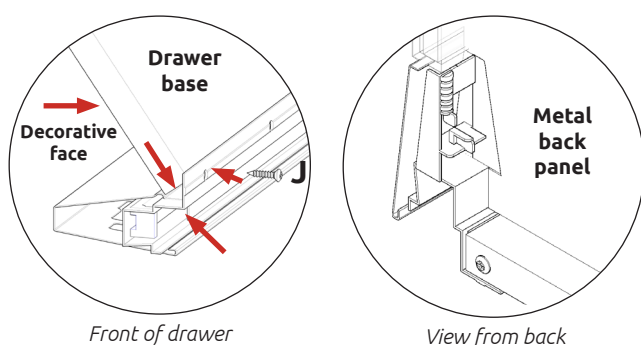


## Step 3.

Screw back panel in position using 2 x 16mm screws (**J**) to drawer base in holes provided.

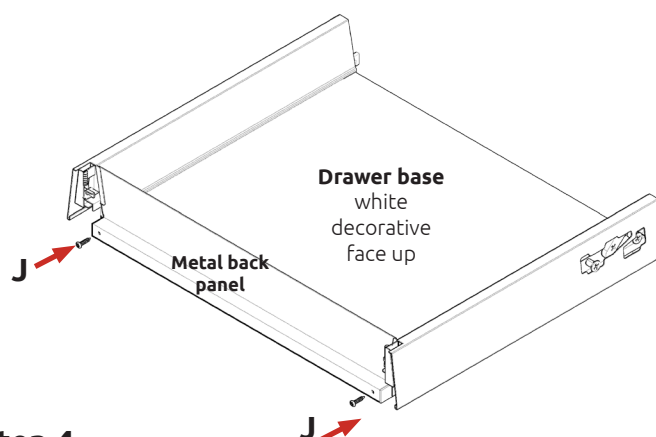




## Step 5.

Draw Adjustment  
Screw point **1** as shown to adjust drawer frontal right & left.

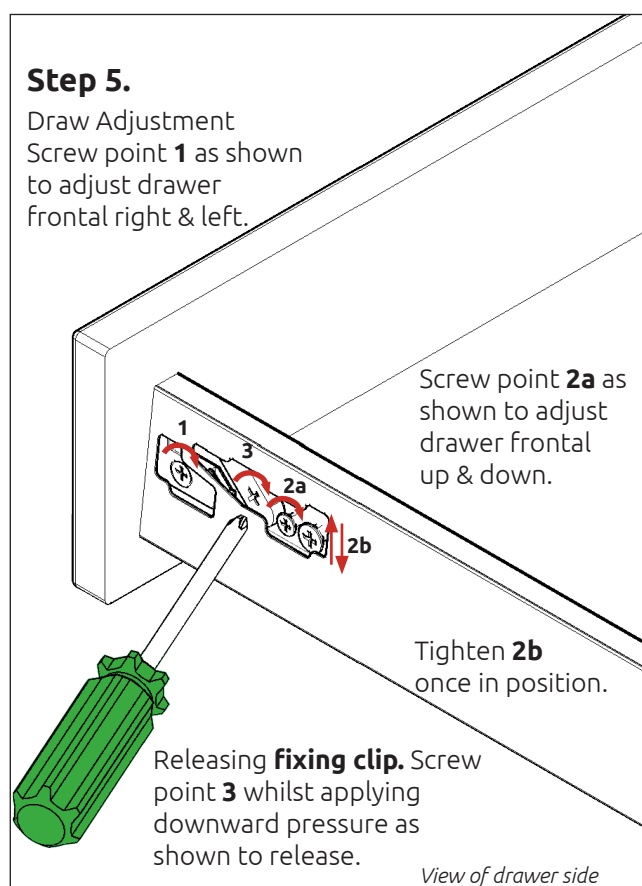

## Step 4.

Frontal Attachment  
Secure drawer side fixing clips using 2 x 21mm screws (**Q**) in pilot holes provided as shown.

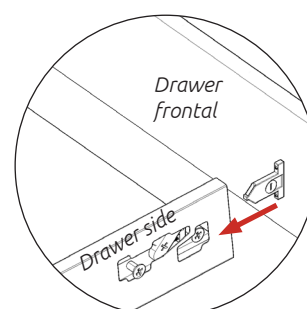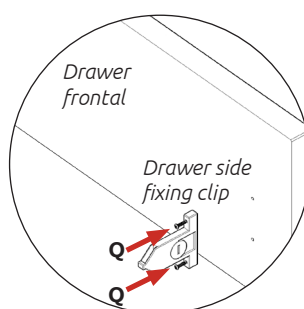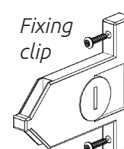

## Step 6.

Fit Drawer Cover Caps over drawer side adjustment.

# BASE UNIT

## 500 3/4 Drawer Assembly Guide


### Step 1.

Secure drawer base to drawer side using 4 x 16mm drawer runner screws (**J**) in holes provided. Seat the edge of drawer base tight into corner of casing, as shown. The decorative face of drawer base to be positioned as shown.


**Repeat step 1** so both drawer sides are attached to drawer base.

### Step 2.


Clip on metal back panel to drawer base & drawer sides.

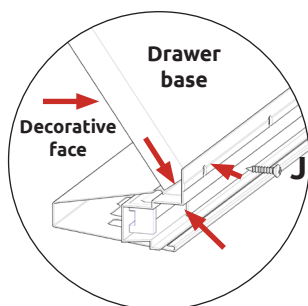

Front of drawer

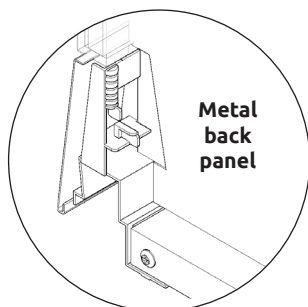


View from back

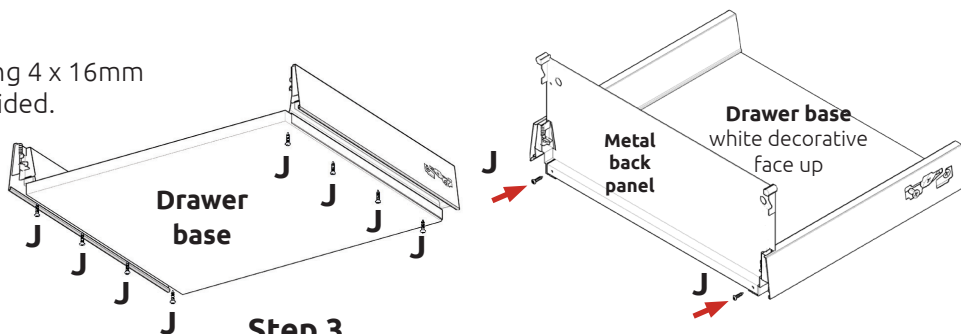

### Step 3.


Screw back panel in position using 2 x 16mm screws (**J**) to drawer base in holes provided.



Fixing clip





(Y) Gallery Head

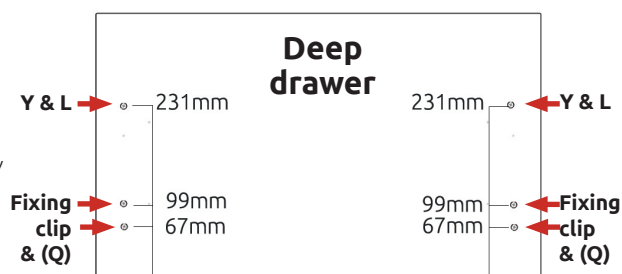

### Step 4.

Frontal Attachment

Secure **drawer side fixing clips** using 2 x 21mm screws (**Q**) & **Gallery Head (Y)** using 1 x 15mm screw (**L**) in pilot holes provided as shown.

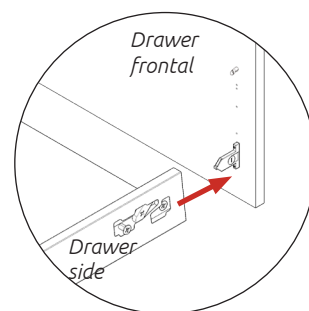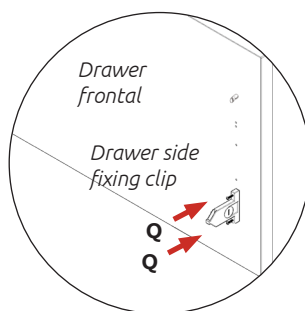

### Step 5.


Draw Adjustment  
Screw point **1** as shown to adjust drawer frontal right & left.

Screw point **2a** as shown to adjust drawer frontal up & down.

Releasing fixing clip.  
Screw point **3** whilst applying downward pressure as shown to release.

Tighten **2b** once in position.

View of drawer side

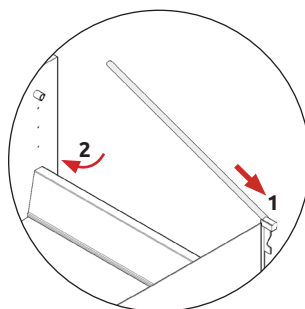

### Step 6.

Fit Gallery Rail into the top corners of Metal Back Panel. Locate front end of the Gallery Rail into the opening of the gallery Head, which is secured to the frontal as shown


### Step 7.

Fit Drawer Cover Caps over drawer side adjustment.



Drawer Cover Cap


## 500 Drawer Unit Contents

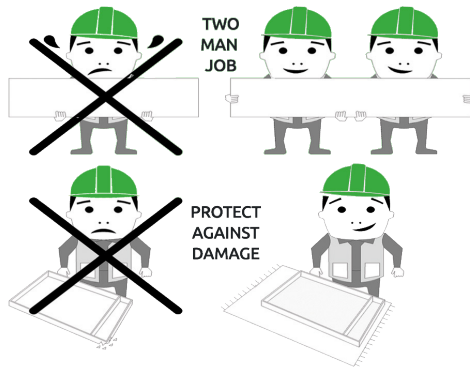

### BEFORE YOU START

INSTALLATION  
SHOULD BE  
PERFORMED BY A  
COMPETENT  
PERSON ONLY.

THIS PRODUCT COULD  
BE DANGEROUS  
IF INCORRECTLY  
INSTALLED

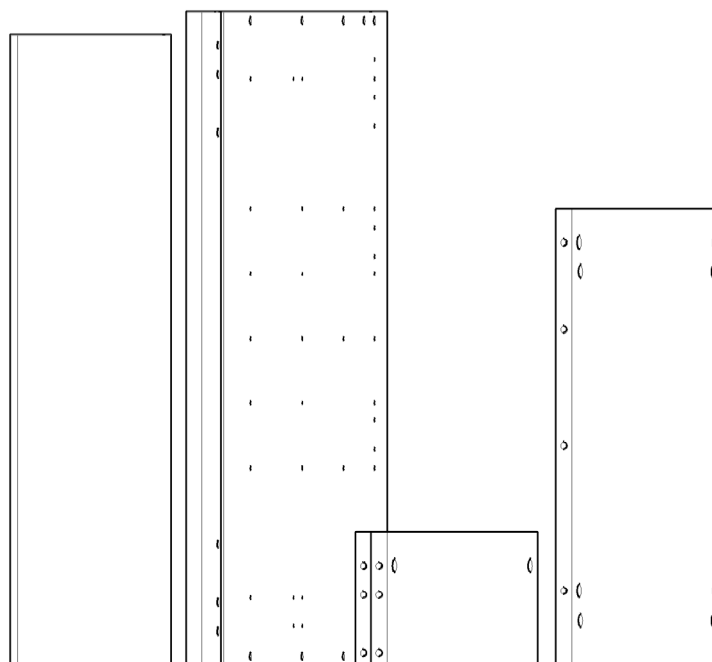

**Panel A**  
x1 Back Panel

**Panel B**  
x2 End Panel

**Panel E**  
x2 Rail Panel

**Panel C**  
x1 Base Panel




**(F) x12**  
Wooden Dowel



**(G) x8**  
Cam Dowel  
(Expanding)



**(H) x8**  
Cam Lock



**(K) x7**  
30mm  
Screw




**(L) x28**  
15mm  
Screw



**(M) x4**  
Cover Cap




**L Bracket LGE**  
x2

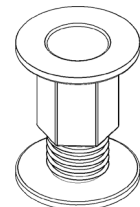


**Space Plug**  
x1

### REQUIRED TOOLS

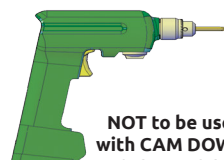

NOT to be used  
with CAM DOWEL  
& CAM LOCK










# BASE UNIT

## 500 3/4 Drawer Assembly Guide


### Step 1.

To attach drawer runner, screw into end panels (**B**) using 2 x 16mm screws (**J**) per drawer rail, into pilot holes provided, 3rd hole from front, as shown.

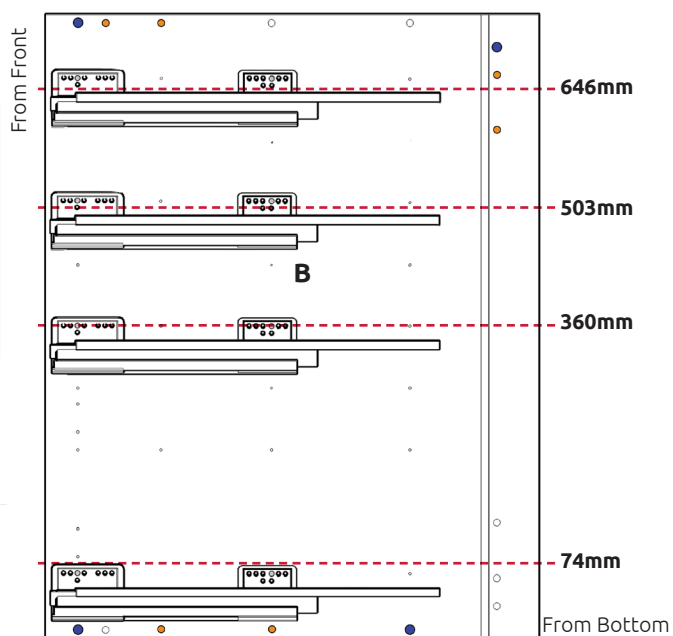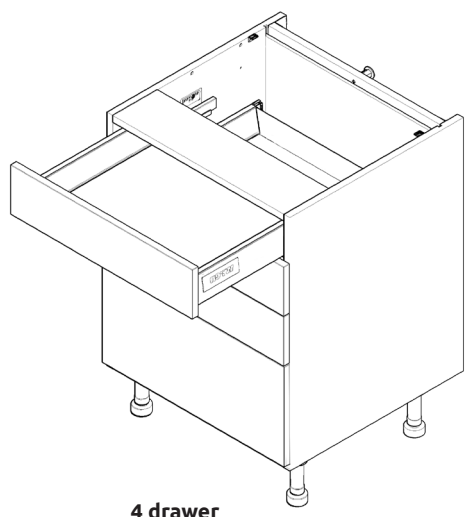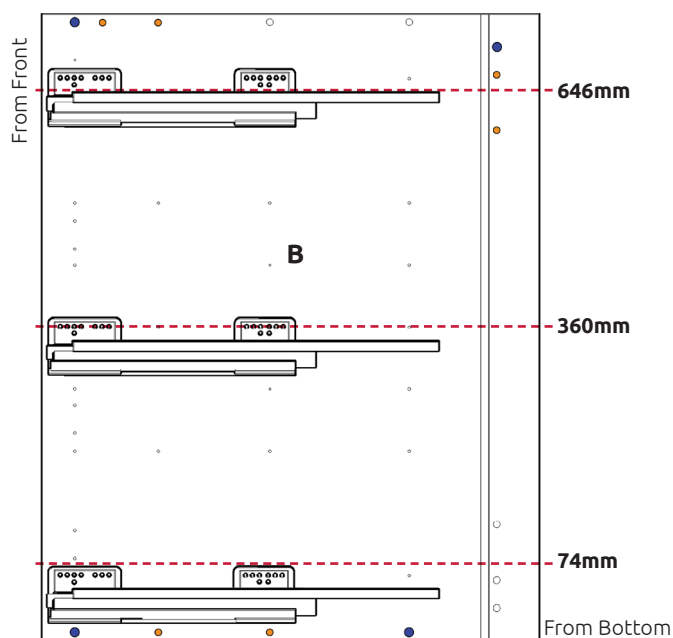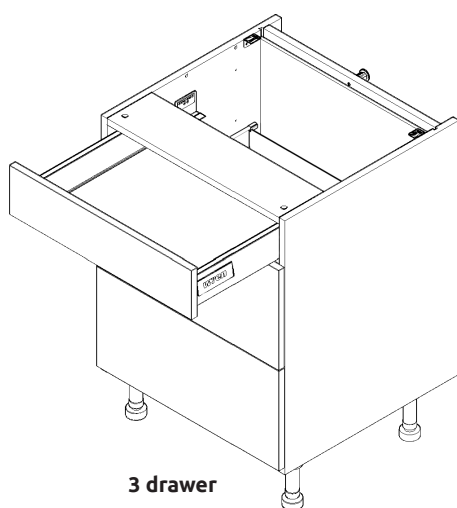
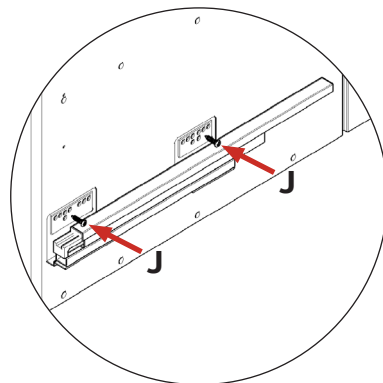
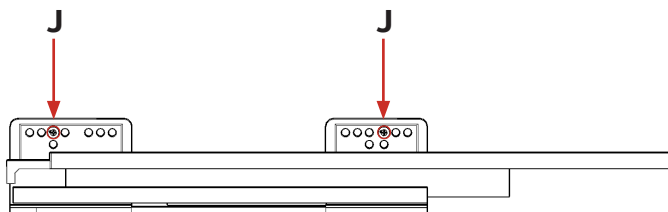


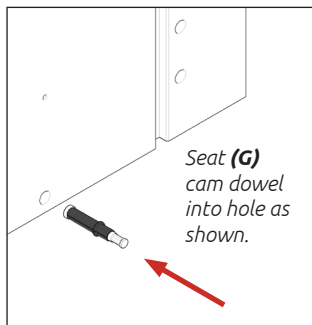

**Step 2.**  
Seat dowel (F)  
into holes in  
both end panels (B)  
as shown.



**Step 3.**  
Seat cam dowel (G)  
into holes in both end panels (B)  
as shown.

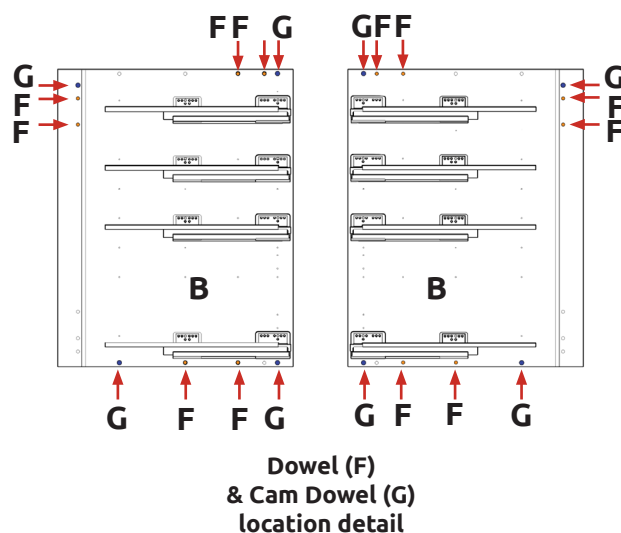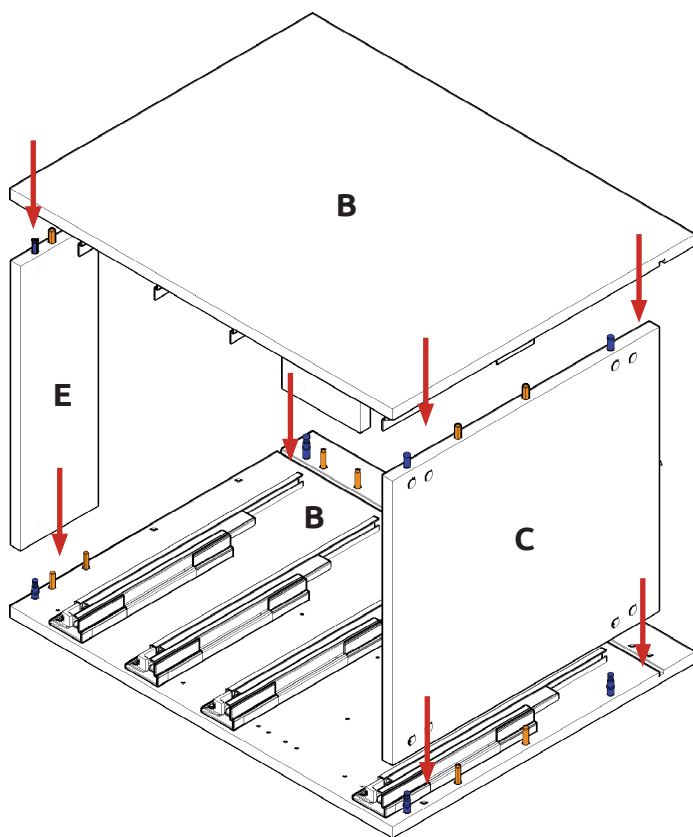
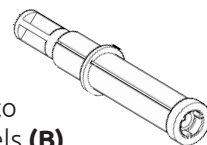


**Step 4.**  
Attach panels (C) & (E) to panels (B),  
using cam dowel (G) (in blue), and also  
using dowels (F) (in orange) in positions  
as shown.



NB. All cam locks (H) are to be positioned facing the outside of the unit, for ease of tightening.

Do **not** use power tools with  
cam dowel (G) or cam lock (H)

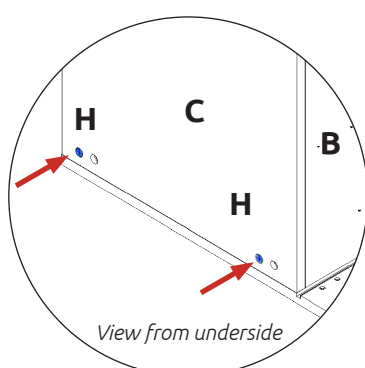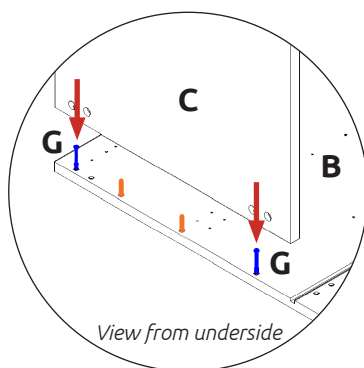

**Step 5.**  
Insert cam lock (H).  
Do **NOT** tighten until Step 7.




# BASE UNIT

## 500 3/4 Drawer Assembly Guide

### Step 6.

Slide back panel **(A)** into groove of end panels **(B)**.

Once back panel **(A)** is in position, ensure the panel is flush & square with bottom of end panels **(B)**.

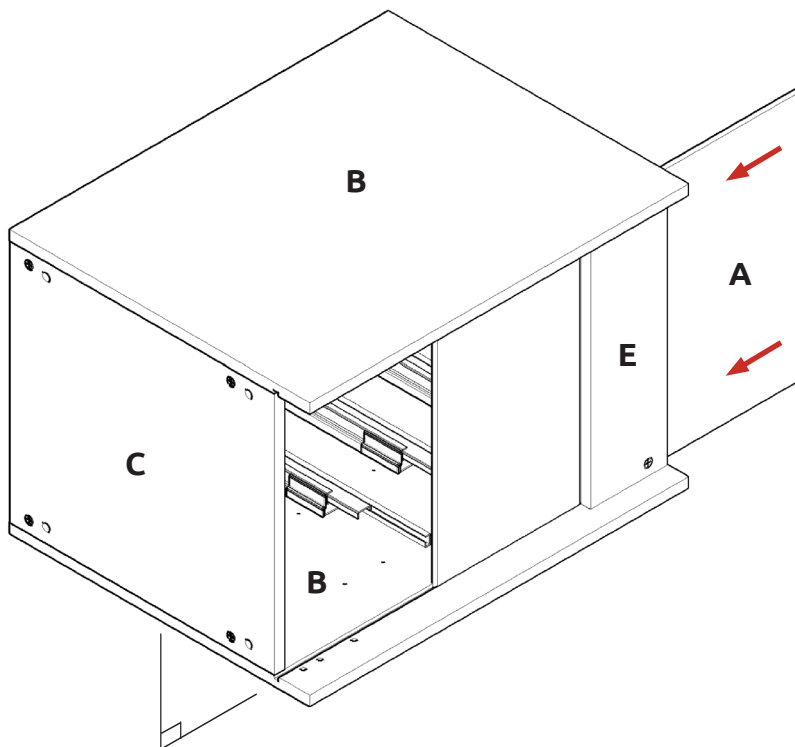


### Step 7.

Hand tighten all cam locks **(H)**, this will expand cam dowels **(G)** and tighten the unit together.


### Step 8.

Ensure unit is square. Secure back panel **(A)** with 3 x 30mm screws **(K)** equally spaced at the bottom of back panel **(A)** into base panel **(C)**, as shown.

Ensure you screw into the centre of base panel **(C)** (9mm from bottom edge).

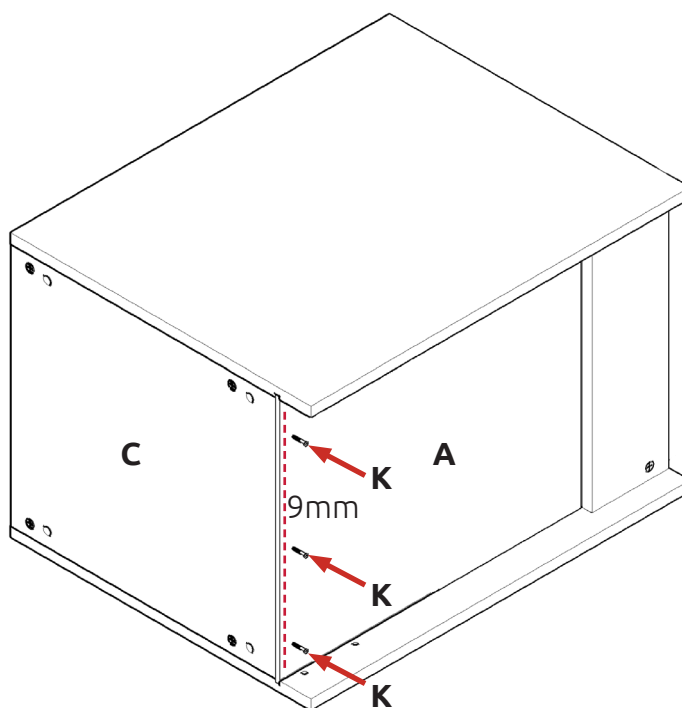



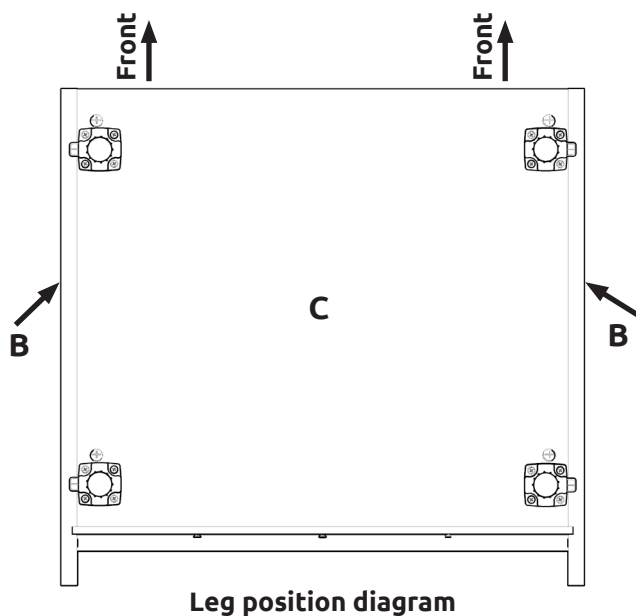


### Step 9.

Position legs as shown. Ensure legs are rotated to also provide support to the end panels (**B**).


### Step 10.

Secure each of the legs into place with 4 x 15mm screws (**L**) per leg.

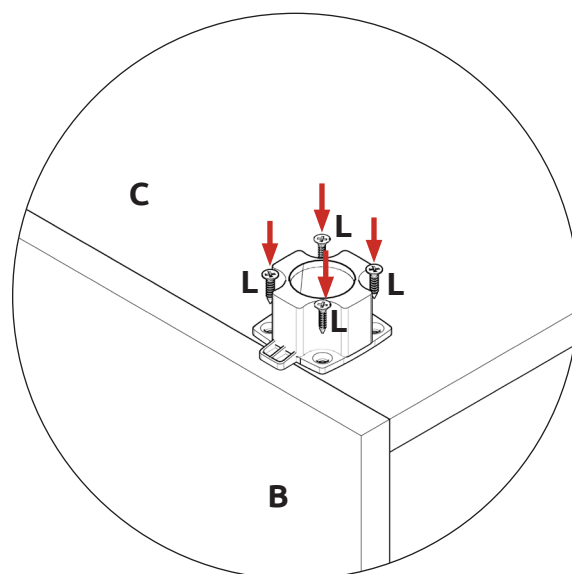

### Step 11.

Push leg firmly down into leg base.  
Adjust legs to 155mm before turning unit upright. Once in situ level accordingly.

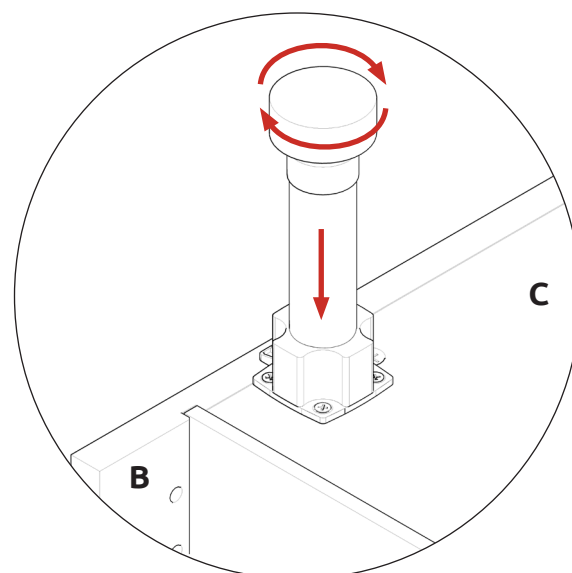


# BASE UNIT


## 500 3/4 Drawer Assembly Guide





Screws for attaching to walls and worktop are not provided as these vary depending on materials, thickness and construction. Ensure appropriate fixings for wall and worktop construction are used. Please refer to the specialist worktop supplier if these are required for solid surface worktops.

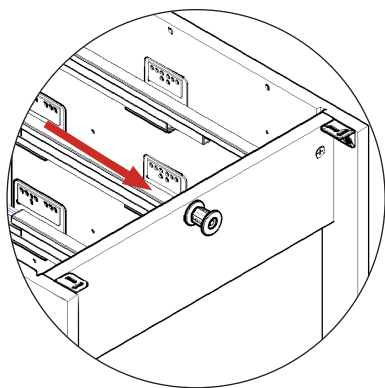

Drill pilot holes through the back rail into the wall and insert wall plugs. Then unwind space plugs until it contacts both surfaces. Finally, tighten the screws.

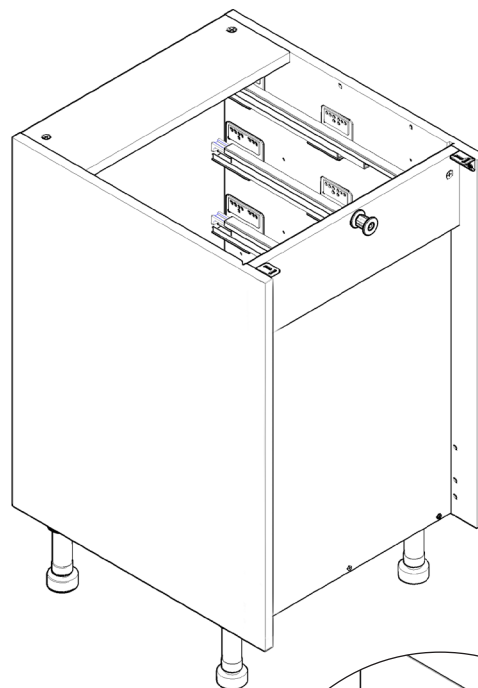

Screw into any side units using the 30mm screws **(K)** provided to secure to the unit. Screw just to the rear of the indentations at the top and bottom on sides of the unit where applicable. Place a cover caps **(M)** on the head of the screws to conceal them.

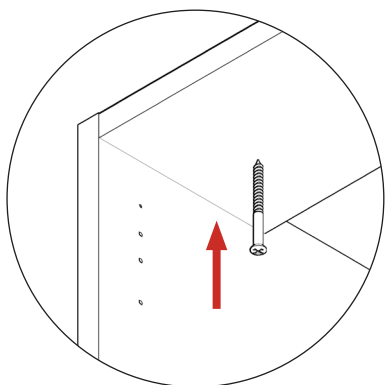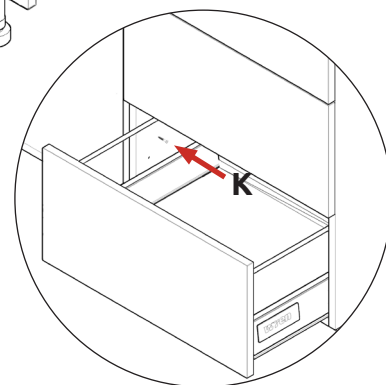

Screw up through the front rail into your worktop to secure it in place.

Use 2 x 15mm screws **(L)** to secure each of the L brackets LGE to the unit at either side. Then screw up through into the worktop as shown.

